

# CALIFORNIA

## Proposition 65 Warning

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer and birth defects or other reproductive harm.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



**ANY PICTURES CONTAINED WITHIN THIS OPERATOR'S MANUAL THAT DEPICT SITUATIONS WITH SHIELDS, GUARDS, RAILS, OR LIDS REMOVED ARE FOR DEMONSTRATION PURPOSES ONLY. HAGIE MANUFACTURING COMPANY STRONGLY URGES THE OPERATOR TO KEEP ALL SHIELDS AND SAFETY DEVICES IN PLACE AT ALL TIMES.**



**OPERATOR'S MANUAL  
FOR  
HAGIE MODEL STS 10 HI-TRACTOR**

**HAGIE MANUFACTURING COMPANY**

721 CENTRAL AVENUE WEST  
BOX 273  
CLARION, IOWA 50525-0273

(515) 532-2861

COVERS MACHINE SERIAL NUMBERS:U1610880001 thru U1610880100

04-08 493411  
02-09

© 2007 Hagie Manufacturing Company. Clarion, Iowa USA

# ABBREVIATIONS

A/C .....	AIR CONDITIONING	MAINT.....	MAINTENANCE
ACCUM .....	ACCUMULATOR	MIN .....	MINUTE
ADJ .....	ADJUST	M/F.....	MAINFRAME
ADPTR .....	ADAPTER	MPH.....	MILES PER HOUR
ALT.....	ALTERNATOR	MT.....	MOUNT
AMP .....	AMPERE	MTH.....	MONTH
APPROX .....	APPROXIMATELY	MTR.....	MOTOR
ASSY.....	ASSEMBLY	NO .....	NUMBER
AUX.....	AUXILIARY	OD .....	OUTSIDE DIAMETER
BRKT.....	BRACKET	POLY .....	POLYETHYLENE
BTTRY.....	BATTERY	PRESS.....	PRESSURE
C.....	CELSIUS	PRKNG.....	PARKING
CAL .....	CALIBRATION	PSI.....	POUNDS PER SQUARE INCH
CCA.....	COLD CRANKING AMPS	QT.....	QUART
CHEM.....	CHEMICAL	RAD .....	RADIATOR
cm .....	CENTIMETER	REC.....	RECOMMENDED
CYL .....	CYLINDER	REQ.....	REQUIRED
DIA .....	DIAGRAM	RPM.....	REVOLUTIONS PER MINUTE
DISPL.....	DISPLACEMENT	SEC .....	SECOND
EA .....	EACH	SERV.....	SERVICE
ELECT.....	ELECTRIC	SMV.....	SLOW MOVING VEHICLE
F .....	FAHRENHEIT	SOLE .....	SOLENOID
FIG .....	FIGURE	SOLU.....	SOLUTION
FRT .....	FRONT	SPEC.....	SPECIFICATION
FT.....	FOOT OR FEET	STRG.....	STEERING
GA .....	GAUGE	SQ.....	SQUARE
GAL .....	GALLON	TACH.....	TACHOMETER
GPA.....	GALLONS PER ACRE	TEMP.....	TEMPERATURE
GPM .....	GALLONS PER MINUTE	TERM.....	TERMINAL
GPS.....	GLOBAL POSITIONING SATELLITE	TRD .....	TREAD
HAL .....	HALOGEN	TT .....	TUBE-TYPE
HR .....	HOOR	TU .....	TUBELESS
HYD.....	HYDRAULIC	VAR .....	VARIABLE
HYDRO .....	HYDROSTATIC	V .....	VOLT
ID.....	INSIDE DIAMETER	VFC.....	VARIABLE FLOW CONTROL
IN.....	INCH	VLV .....	VALVE
INFO.....	INFORMATION	W/ .....	WITH
Km/H .....	KILOMETERS PER HOUR	W/O.....	WITHOUT
L .....	LITER (DISPLACEMENT)	W .....	WEIGHT
l .....	LITER (LIQUID)	WD.....	WHEEL DRIVE
LB.....	POUND	WHL.....	WHEEL
m .....	METER	WK.....	WEEK

# TO THE OWNER

---



## A WORD FROM HAGIE MANUFACTURING COMPANY


Congratulations on your selection of a Hagie Model STS 10 sprayer. We recommend that you study this Operator's Manual and become acquainted with the adjustments and operating procedures before attempting to operate your new sprayer. As with any piece of equipment, certain operating procedures, service, and maintenance are required to keep it in top running condition.

We have attempted herein to cover all of the adjustments required to fit varying conditions. However, there may be times when special care must be considered.

Hagie Manufacturing Company reserves the right to make changes in the design and material of any subsequent sprayer without obligation to existing units.

We thank you for choosing a Hagie sprayer and assure you of our continued interest in its satisfactory operation for you. If we might be of assistance to you, please call us.

We are proud to have you as a customer.

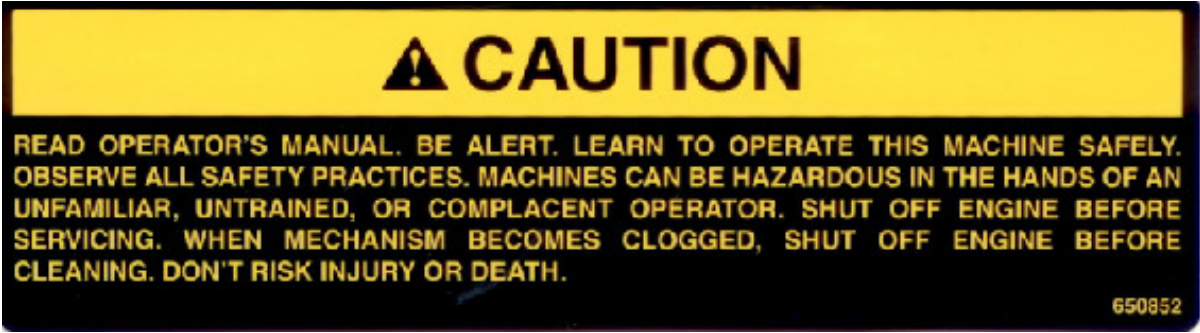

## TO THE OPERATOR




The following pages and illustrations will help you operate and service your new sprayer. It is the responsibility of the user to read the Operator's Manual and comply with the safe correct operating procedures and lubricate and maintain the product according to the maintenance schedule.

The user is responsible for inspecting the machine and having parts repaired or replaced when continued use of the product causes damage

or excessive wear to other parts.

Keep this manual in a convenient place for easy reference when problems arise. This manual is considered a permanent fixture with this machine. In the event of resale, this manual should accompany the sprayer. If you do not understand any part of the manual or require additional information or service, contact the Hagie Customer Support Department:

Hagie Manufacturing Company  
721 Central Avenue West  
Box 273  
Clarion, IA 50525-0273  
(515) 532-2861

<p>The following symbols, found throughout this manual, alert you to potentially dangerous conditions to the operator, service personnel, or the equipment.</p>	
	<p><i>This symbol indicates a hazardous situation which, if not avoided, will result in death or serious injury.</i></p>
	<p><i>This symbol indicates a potentially hazardous situation which, if not avoided, could result in death or injury.</i></p>
	<p><i>This symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.</i></p>

# TABLE OF CONTENTS

I.	SAFETY/DECALS.....	1.1-1.9
II.	SPRAYER IDENTIFICATION.....	2.1-2.2
III.	SPECIFICATIONS.....	3.1-3.6
IV.	OPERATING INFORMATION.....	4.1A-4.8E
V.	CALIBRATION.....	5.1A-5.9B
VI.	TRANSPORTING.....	6.1A-6.2C
VII.	SERVICE AND MAINTENANCE.....	7.1A-7.1J
VIII.	STORAGE.....	8.1-8.2
IX.	TROUBLE SHOOTING.....	9.1A-9.2E
X.	LIMITED WARRANTY.....	10.1
IX.	INDEX.....	Index 1-Index 6

# I. SAFETY/DECALS

---

## SAFETY PRECAUTIONS

Most accidents occur as the result of failure to follow simple and fundamental safety rules. For this reason, most accidents can be prevented by recognizing the real cause and doing something about it before the accident occurs.

Many conditions cannot be completely safeguarded against without interfering with efficient operation and/or reasonable accessibility. Therefore, you must study this Operator's Manual

and learn how to use the sprayer controls for safe operation. Likewise, do not let anyone operate without instruction.

Do not make modifications such as weldments, add-ons, adaptations, or changes from the original design of sprayer. Such changes and/or modifications may become safety hazards to you and to others and will void all warranties.

### DRIVING

- Before moving sprayer, make sure no persons or obstructions are in path of travel.
- Do not permit passengers on sprayer when it is moving; they may fall off or obstruct operator's view.
- Never drive near ditches, embankments, holes, mounds, or other obstacles.
- Never drive on hills too steep for safe operation.
- Always drive at a reasonable field speed.
- Reduce sprayer's speed before turning.
- Come to a complete stop before reversing direction.
- Pull over to side of road before stopping.
- Additional weight caused from partially full or full solution tanks may cause erratic or increased stopping distance.
- Never operate sprayer on roadway with any solution in solution tank.
- Do not activate parking brake while machine is in motion or damage may occur to sprayer.
- Use flashing/hazard warning lights when traveling on public roads, day or night, unless prohibited by local law.
- Make sure SMV and SIS emblem is in place and visible from rear when traveling on public roads.

# I. SAFETY/DECALS

---

## OPERATING

### TREAD WIDTH

- Select a tread setting to fit between crop rows.

### SPRAYER BOOMS

- Cradle booms when leaving sprayer unattended.
- Make sure booms are folded when cradled.
- Select a safe area before unfolding booms. Avoid power lines and overhead structures.

### GENERAL OPERATION SAFETY

- Do not adjust factory engine RPM settings.
- Operate engine at one bump to assure proper charge pressure for brakes to work properly.
- Start engine from operator's seat only. Do not by-pass safety-start switch.
- Never use starting fluid to assist engine start up.
- Never run sprayer engine in a closed building. Proper exhaust ventilation is required.
- If equipped with ground speed sensing radar, do not look directly into radar beam. It emits a very low intensity microwave signal which may cause possible eye damage.



# I. SAFETY/DECALS

---

## REPAIR/MAINTENANCE

### HYDRAULICS

- Use caution when working with hydraulic fluid under pressure. Escaping hydraulic fluid can have sufficient force to penetrate your skin, causing serious injury. This fluid may also be hot enough to burn.
- Always lower load or relieve hydraulic pressure before repairing a hydraulic oil leak.
- Avoid torching, welding, and soldering near pressurized hydraulic lines.

### FUELING

- Always turn engine off and allow it to cool before refueling.
- Do not smoke while refueling.
- Do not fill fuel tank completely. Fuel may expand and run over.

### GENERAL REPAIR/MAINTENANCE

- Turn off engine before checking, adjusting, repairing, lubricating, or cleaning any part of sprayer.
- When servicing radiator, let engine cool before removing pressurized cap.
- Disconnect battery ground cable and turn main battery switch off before servicing electrical system or welding on machine.
- When charging battery, connect positive cable to positive terminal and negative cable to negative terminal. Failure to do so may result in an explosion and cause injury. Likewise, avoid battery acid contact with body.

# I. SAFETY/DECALS

---

## CHEMICAL HANDLING

- Never allow chemicals to come in contact with skin or eyes. Wear protective clothing or respirators as recommended by chemical manufacturer. Store this clothing outside of the cab so as not to contaminate filtered cab environment. Also, clean your boots to remove soil or other contaminated particles prior to entering cab.
- Never pour chemicals into an empty tank, fill tank half full of water first.
- Follow chemical manufacturer's instructions for mixing chemicals.
- Dispose of empty chemical containers properly.
- Wash spilled chemicals or spray residue from sprayer to prevent corrosion and deterioration.
- Select a safe area to fill, flush, calibrate, and clean sprayer where chemicals will not drift or run off to contaminate people, animals, vegetation, or water supply.
- Never place nozzle tips or other parts to one's lips in an attempt to unclog spray tip.
- Do not spray when wind is in excess of chemical manufacturer's recommended speed.
- Store pesticides in their original containers with label intact. Keep them in a separate, locked building.

## GENERAL SAFETY

- Keep a fire extinguisher close at all times.
- Keep all shields in place.
- Keep clear of all moving parts and keep others away when operating.
- Do not wear loose fitting clothing that may be blown or drawn into moving parts.

# I. SAFETY/ DECALS

## WARNING DECALS

Decals warning you of avoidable danger are located on various parts of the sprayer. They are there for your personal safety and protection. DO NOT remove them. They will fracture upon attempted removal and therefore must be replaced.

Following are locations of important safety decals. Replace them if they are torn or missing. All

warning decals and other instructional Hagie decals or machine striping may be purchased through Hagie Customer Support Department. To replace decals, be sure the installation area is clean and dry; decide on exact position before you remove the backing paper.

### DECAL LOCATION



650107



Rear of mainframe above booster terminals.



650118



On engine compartment, in front of air intake.

# I. SAFETY/ DECALS



650164

Left side rear cab post.



650165

Right side rear cab post.




650174

In engine compartment, on radiator.



# I. SAFETY/ DECALS

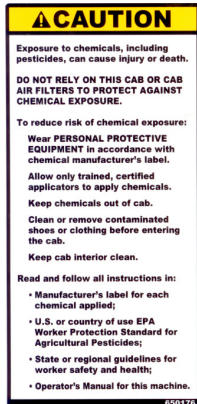

650176

Inside right-hand cab post by rear window.



650178


Quick attach mount.



650339

On front cross member, left side (picture 1)

On hydraulic reservoir, to left of sight gauge (picture 2)


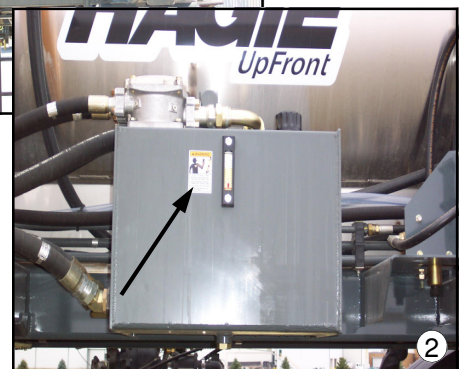


# I. SAFETY/ DECALS




650848

On ladder pivot tube.

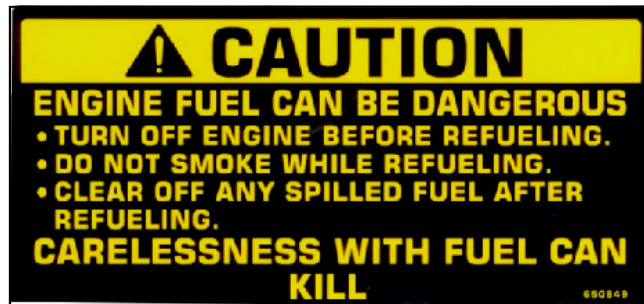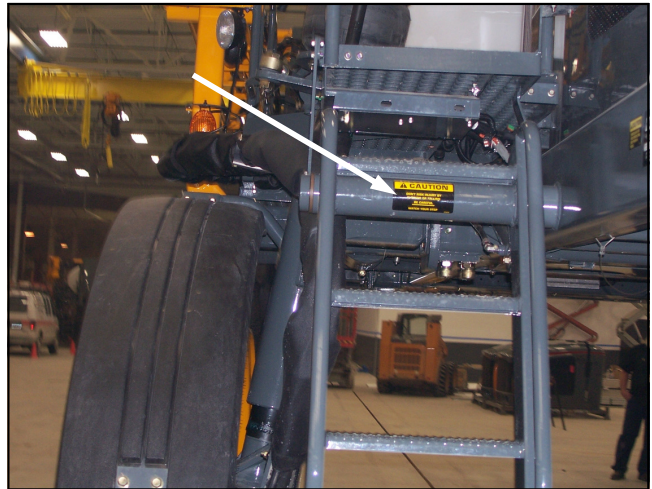

650849


On engine compartment, near fuel cell cap.

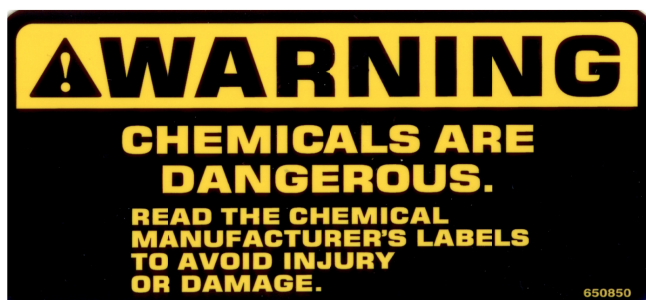

650850

On solution tank, near fill lid (front fill) fig. 1

On eductor tank lid (side fill) fig. 2

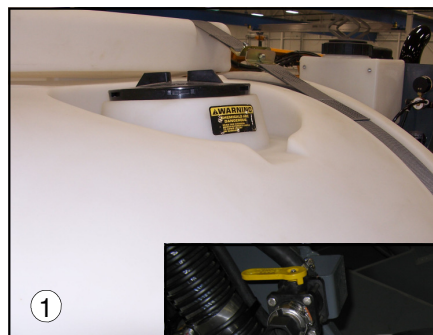

# I. SAFETY/ DECALS




Left rear mainframe.

650851



In engine compartment, near radiator cap.

650981

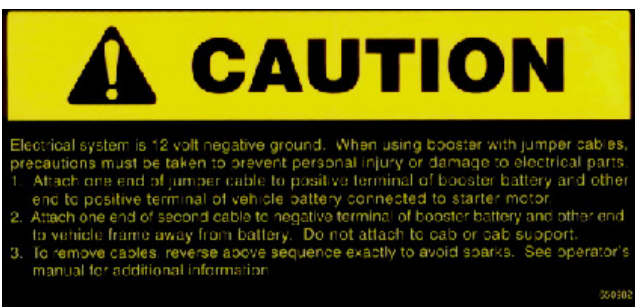

On fuel cell near batteries.

650982



Fuel cell

## II. IDENTIFICATION NUMBERS

Each Hagie sprayer is identified by means of a frame serial number. This serial number denotes the model, year in which it was built, and the number of the sprayer. For further identification, the engine has a serial number, the hydrostatic pumps have serial numbers, the wheel motors have identification tags, and the planetary hubs have identifica-

tion plates that describe the type of mount and gear ratio. To ensure prompt, efficient service when ordering parts or requesting service repairs from Hagie Manufacturing Company, record the serial numbers and identification numbers in the spaces provided below.

### NOTE:


Reference to left-hand and right-hand used throughout this manual refers to the position when seated in the operator's seat facing forward.



### Sprayer

\_\_\_\_\_

NOTE: Sprayer serial number stamped in the frame on right rear corner.

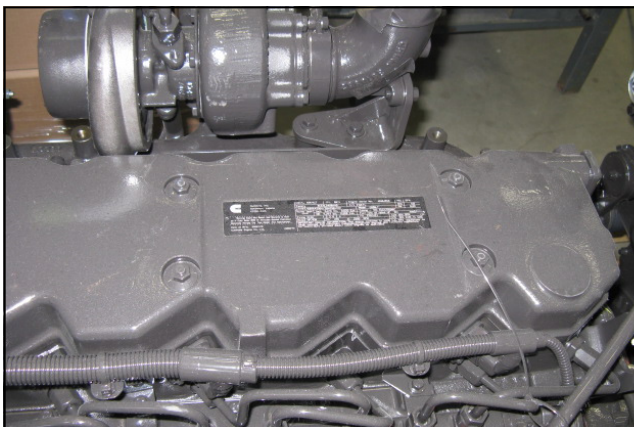


### Engine


\_\_\_\_\_


NOTE: Diesel engine serial number located on gear housing under A/C compressor.




## II. IDENTIFICATION NUMBERS

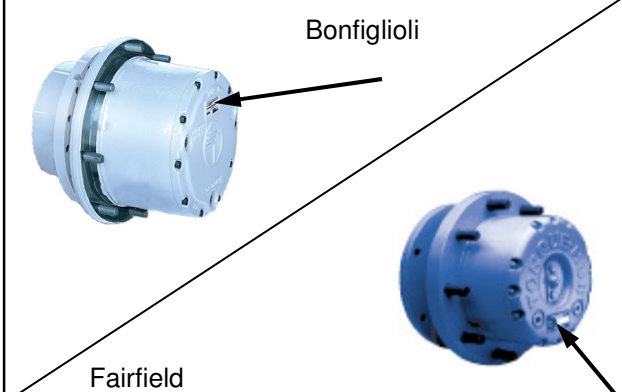	<b>Wheel Hubs</b>	
	Left	Right
Front:	_____	_____
Rear:	_____	_____

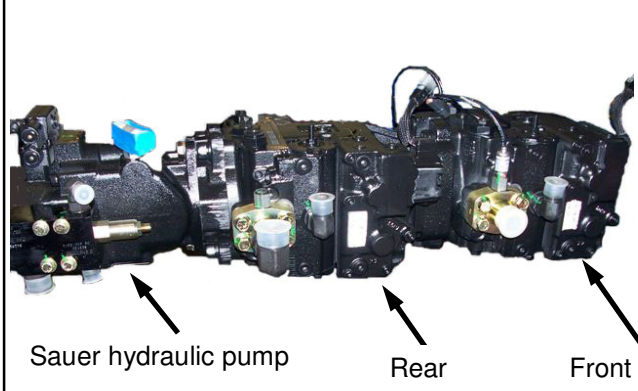	<b>Hydrostatic Pumps</b>	
	Front: _____	
Rear: _____		

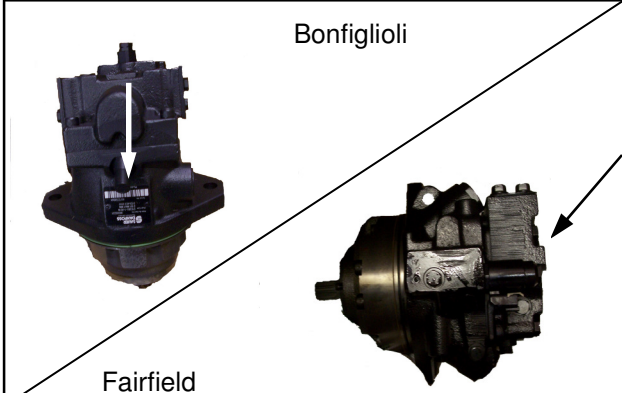	<b>Front Wheel Motors</b>	
	Left: _____	
Right: _____		
Refer to parts manual.		

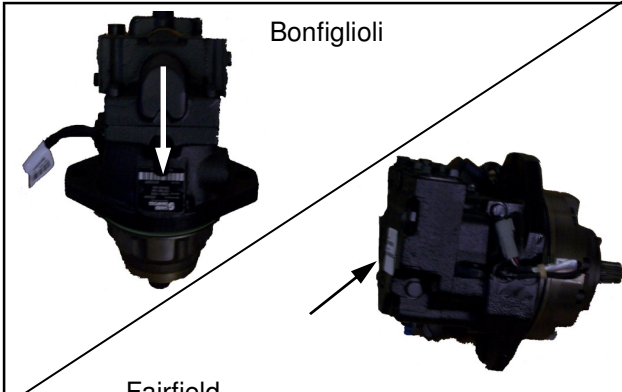	<b>Rear Wheel Motors</b>	
	Left - w/ Sensor: _____	
Right - w/ Sensor: _____		
Refer to parts manual.		

# III. SPECIFICATIONS

---

## A. ENGINE

Manufacturer and model .....	Cummins
Model.....	QSB6.7-220
Type .....	Electronic with air to air cooler and turbocharger
Number of cylinders .....	6
Displacement .....	6.7 liter (360 c.i.)
Power .....	215 hp (205 kW), (power bulge to 225hp) (optional 275hp)
Type of fuel.....	Number 1 or number 2 diesel
Fuel system .....	Filtered, direct-injected
Air cleaner .....	Dry-type, single element
Engine air filter restriction monitor .....	Filter Minder <sup>®</sup>
Slow idle .....	800 RPM
Fast idle.....	2500 RPM (no load)

## B. POWER TRAIN

### 1. Drive

Hydrostatic pump .....	Sauer-Danfoss (Tandem 90 series)
Displacement.....	150cc (75 X 2) with electronic displacement control
Drive train .....	All-time four wheel drive
Speed ranges .....	2 work mode ..... 3 transport mode
Hydrostatic wheel motors- front and rear .....	Sauer-Danfoss (90 series)
Final drives	
Type .....	Planetary gear reduction hubs
- front .....	Torque Hub <sup>®</sup> CW12/Bonfiglioli hub (22:1)
- rear.....	Torque Hub <sup>®</sup> CW12/Bonfiglioli hub (27:1)
Lubrication.....	Oil bath

### 2. Brakes (parking only)

Type .....	Multiple disc Spring applied Hydraulically released
------------	---

### 3. Steering System

Type .....	Hydraulic, dedicated circuit
Control.....	Full-time power
Steering cylinders.....	Self-centering, double action

# III. SPECIFICATIONS

---

## C. AUXILIARY HYDRAULIC SYSTEM

Type .....Single closed center pump  
Pump type.....Load sense

## D. SRAY SYSTEM

### 1. Booms

Type .....Dry, with variable row spacing(optional wet)  
Standard.....60/80/90/100 ft. (5 spray sections)  
Controls.....Electro-hydraulic: fold/lift/level  
Level shock absorber.....Gas-charged accumulator  
Outer boom tip hydraulic breakaway.....Self-actuated, auto-reset hydraulic

### 2.Solution Fill Connection

Quick-fill connection.....3 in. (7.6 cm) I.D.

### 3.Solution Tank

Standard.....1000 gal. (3785 ℓ) polyethylene w/sight gauge  
Optional.....1000 gal. (3785 ℓ) stainless steel w/sight gauge  
Agitation (polyethylene tank).....Eductor-type w/elect. var. speed control  
Agitation (stainless steel tank).....Sparge-type w/elect. var. speed control

### 4.General Spray System

Pump.....Centrifugal - hydraulically driven with pulse width modulated control valve  
Solution valves.....Electric ball valves  
Pressure gauge.....100 PSI glycerin filled  
Console.....Raven 4600 (GPS-ready)  
Fence row nozzle.....Two position, remote activated

## E. FOAM MARKING SYSTEM

Make .....Hagie Foam Marker  
Type.....Live air

## F. RINSE SYSTEM

Spray system rinse (solution tanks, pump, and booms).....Standard  
High pressure washing system.....Optional

# III. SPECIFICATIONS

---

## G. ELECTRICAL SYSTEM

### 1. General Electrical System

Battery .....	Dual 12V, negative ground
Alternator .....	130 AMP, voltage regulated
Starter .....	12V with solenoid

### 2. Circuit Breakers/Fuses

#### FUSE MODULE 1

MDM Module .....	3 AMP (1 each)
Input power, control handle, console switch, console lights, field and work lights	5 AMP (4 each)
Ignition, hazard lights, head lights switch, seat air ride, XS-A0 and A1 module power	10 AMP (4 each)
Terminal strip power, HVAC control power, power point 1, wiper/washer, power point 2, XS-A2 module power, Norac (if equipped)	15 AMP (7 each)
Raven console, XT2- A1 module power	20 AMP (2 each)
HVAC fan- high	25 AMP (1 each)

#### FUSE MODULE 2

Ignition ON	5 AMP (1 each)
Radio, dome light, MDM RTC, diagnostic plug, (spare)	10 AMP (4 each)
Head lights-2 , terminal strip power, agitator/ rinse valves, air dryer, side fill, pressure washer, field lights	15 AMP (6 each)
XP2-A0 module power, XT2-A0 module power, XP2-A1, A2 and A3 module power, boom valves	20 AMP (6 each)

#### RELAY MODULE 1

Head lights-2, reverse, forward, field lights-1 and 2, console light	12V micro relays
--	------------------



# III. SPECIFICATIONS

---

## H. CAB AND INSTRUMENTS

### 1. Cab

General cab .....	Tilt steering Windshield wiper/washer Dual side mirrors Dome light Tinted glass Training seat
Temperature control .....	Full-range
A/C charge type .....	R-134a
Fresh air filtration .....	Paper and charcoal filter
Seat .....	Air ride

### 2. Instruments

MDM .....	Hour meter Fuel Water temperature Battery voltage Engine oil pressure Ground speed Engine RPM Tread adjustment assist
Stereo .....	AM/FM/WB with CD

## I. CAPACITIES

Solution tank .....	1000 gallons (3785 ℓ)
Fuel cell .....	150 gallons (530 ℓ)
Cooling system (including block, lines, & radiator) .....	18 gallons (68 ℓ)
Hydraulic oil (including tank, lines, filter, & cooler) .....	55 gallons (208 ℓ)
Rinse system tank .....	100 gallons (379 ℓ)
Foam marker tank .....	36 gallons (136 ℓ)
Engine oil (including crankcase, lines, filter, & cooler) .....	17 quarts (16 ℓ)

### Wheel hubs

#### Fairfield

front (2) .....	84 oz. (2.5 ℓ) each (approx.)
rear (2) .....	62 oz. (1.8 ℓ) each (approx.)

#### Bonfiglioli

front (2) .....	40 oz. (1.18 ℓ) each (approx.)
rear (2) .....	40 oz. (1.18 ℓ) each (approx.)

### III. SPECIFICATIONS

---

#### J. TIRES (front and rear)

Standard.....	380/85R46 (Radial TU)
Air pressure .....	35 PSI (240kpa)
Tire width .....	15.0 in. (381 mm)
Loaded capacity @ 25 MPH (40.2 Km/H) .....	7150 lbs. (3250 kg)
Overall diameter .....	72.7 in. (1847 mm)
Static load radius (suggested– will vary with load).....	33.5 in. (851 mm)
Rolling circumference .....	219.0 in. (5563 mm)
Optional (narrow row crop) .....	380/90R54 (Radial TU)
	320/90R50 (Radial TU)
	320/105R54 (Radial TU)
Air pressure .....	35 PSI (517kpa)
Tire width .....	12.6 in. (381 mm)
Load capacity @ 30 MPH (40.2 Km/H) .....	6800 lbs (5987.5 kg)
Overall diameter .....	72.6 in. (2042.2 mm)
Static load radius (suggested– will vary with load).....	33.8 in. (947.42 mm)
Rolling circumference .....	219.0 in. (6147 mm)
Optional (wide) .....	580/70R38 (Radial TU)
Air pressure .....	23 PSI (160kpa)
Tire width .....	23.1 in. (587 mm)
Load capacity @25 MPH (40.2 Km/H) .....	8550 lbs. (3875 kg)
Overall diameter .....	72.2 in. (1834 mm)
Static load radius (suggested– will vary with load).....	32.04 in. (823 mm)
Rolling circumference .....	216.4 in. (5497 mm)
Optional (floatation) .....	520/85R46 (Radial TU)
Air pressure .....	23 PSI (160 kpa)
Tire width .....	21.3 in. (541 mm)
Load capacity @25 MPH (40.2Km/H) .....	9350 lbs. (4241 kg)
Overall diameter .....	80.6 in.(2047 mm)
Static load radius (suggested– will vary with load).....	36.3 in. (922 mm)
Rolling circumference .....	242.1 in. (6150 mm)

# IV. OPERATING SYSTEMS

## A. CAB

### Front Console

- |   |                                  |
|---|----------------------------------|
| A. Hazard/ Warning light switch         | F. Ignition switch               |
| B. Highway lights, running light switch | G. Steering wheel tilt adjust    |
| C. Steering Wheel                       | H. Steering column release pedal |
| D. Turn signal indicator light          |                                  |
| E. Turn signal switch                   |                                  |

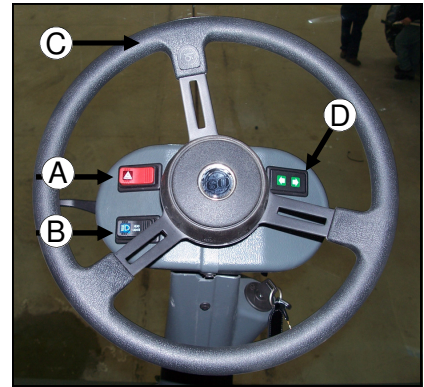


FIG. 4.1A-1

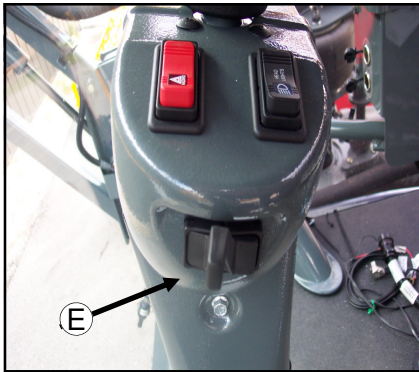


FIG. 4.1A-2

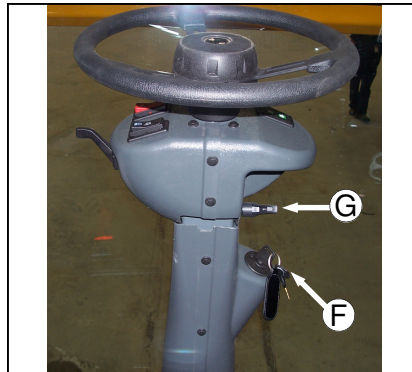


FIG. 4.1A-4



FIG. 4.1A-3



FIG 4.1A-5

**HAZARD/ WARNING LIGHTS**—To activate the flashing hazard/ warning lights (fig. 4.1A-5 and fig. 4.1A-6) depress the “FLASHER” switch (fig. 4.1A-1, item A). Activate the hazard/ warning lights anytime, day or night, that you are traveling on a public road unless prohibited by law.



FIG. 4.1A-6






# IV. OPERATING SYSTEMS

## A. CAB

**HIGHWAY LIGHTS/RUNNING LIGHTS**– The highway lights are mounted on the cab and the either side of the transom (fig. 4.2A-1). Use these trapezoid head lamps when

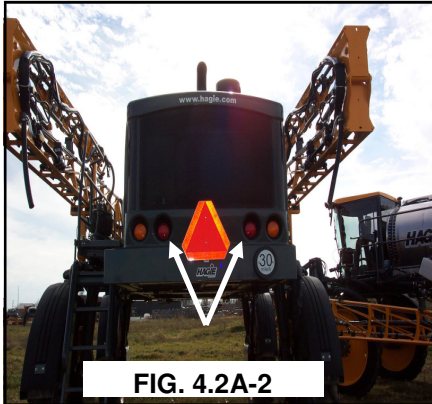

traveling on a public road at night. Turn them on using the highway/running light switch located on the front console (fig. 4.2A-1, item B).




Activating the highway lights will also turn on the “red” running lights on the rear of the machine (fig. 4.2A-2).

The ignition key does not have to be on to operate these lights.



**TURN SIGNALS**– To activate the front turn signals (fig. 4.2A-3) and the rear turn signals (fig. 4.2A-4 and 5), move the turn signal lever (fig. 4.1A-2, item E) forward , away from the operator, to signal a right turn and back, toward the operator, to signal a left turn. Steering column–mounted turn signal indicators will correspondingly flash when either turn signal is activated. The turn signal switch is not a self– centering switch; you must return it to the “OFF”

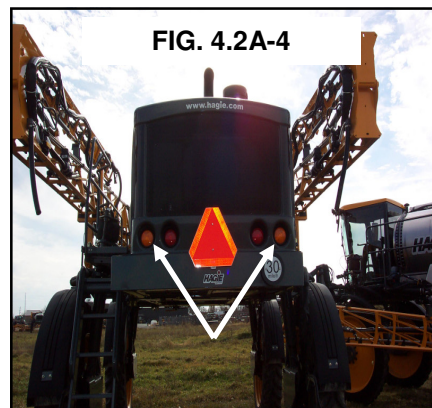

position by hand after completing your turn.



# IV. OPERATING SYSTEMS

## A. CAB



**FIG. 4.3A-1**

**IGNITION SWITCH**– The ignition switch has three positions. The first position is the “OFF” position. The second position is referred to throughout this manual as “ON”, the second position is “START”. To engage the starter, turn the key to the “START” position and hold momentarily until the engine engages. If the engine does not engage after 15 seconds, turn the key to “OFF”. Constant cranking of the starter when an engine fails to engage will cause damage to the battery and the starting system. Refer to OPERATING SYSTEMS section B on hydrostatic drive for more information.

**TILT ADJUST HANDLE**- The steering wheel tilt adjust handle is for the movement of the upper portion of the steering column only. The steering wheel has infinite position possibilities.

To use the adjustment handle turn it down (toward the operator) to loosen it. You do not need to remove the handle all the way, simply loosen it enough to freely move the steering wheel.

With the handle loosened, push or pull on the steering wheel until it is in a comfortable position. Hold the steering wheel in that position while tightening the adjustment handle. To tighten the adjustment handle turn it upward (away from the operator).




**FIG. 4.3A-2**

### NOTE:

Be sure the steering wheel and column are locked in place before trying to move the machine. Failure to do so will make it difficult to maintain control of the machine.

**STEERING COLUMN RELEASE PEDAL**– The steering column release pedal is for easy exit/ easy entry of the cab. Push the pedal to release the locking gas spring. With the gas spring released, you can smoothly move the entire steering column forward or backward.

To lock the column in place, simply remove your foot from the pedal while holding the column in place. Once the gas spring has locked again, check the column by firmly trying to move the column in either direction.

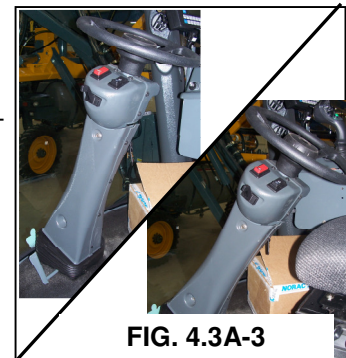

**FIG. 4.3A-3**

# IV. OPERATING SYSTEMS

## A. CAB

### Side Console

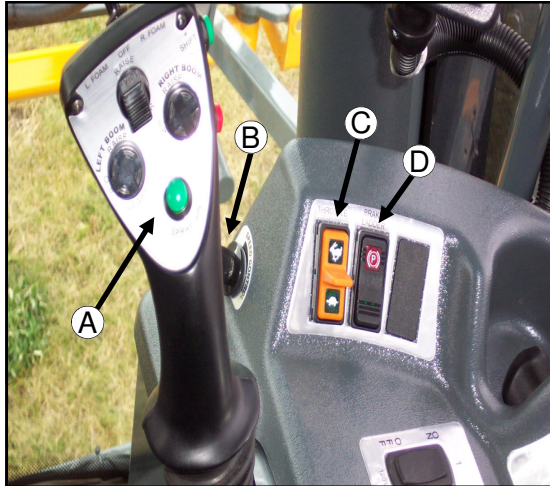


FIG. 4.4A-1

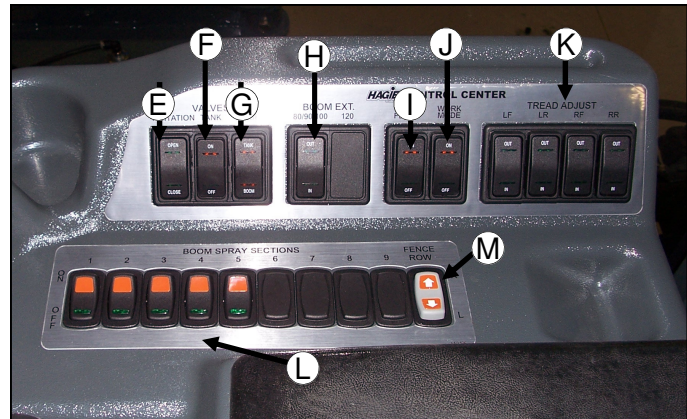


FIG. 4.4A-2

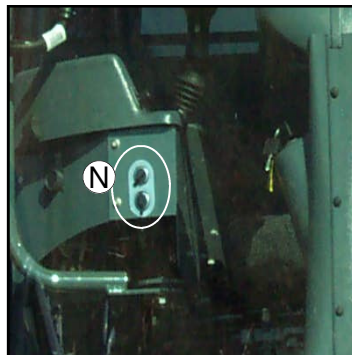


FIG. 4.4A-4

- A. Hydrostatic Lever
- B. Speed Control
- C. Throttle switch
- D. Brake/Ladder switch
- E. Agitation switch
- F. Solution Tank switch
- G. Rinse Tank switch
- H. Boom Extension switch
- I. Float switch
- J. Work Mode switch
- K. Tread Adjust switches
- L. Boom Spray Section switches
- M. Fence Row Nozzle switch
- N. Power Ports

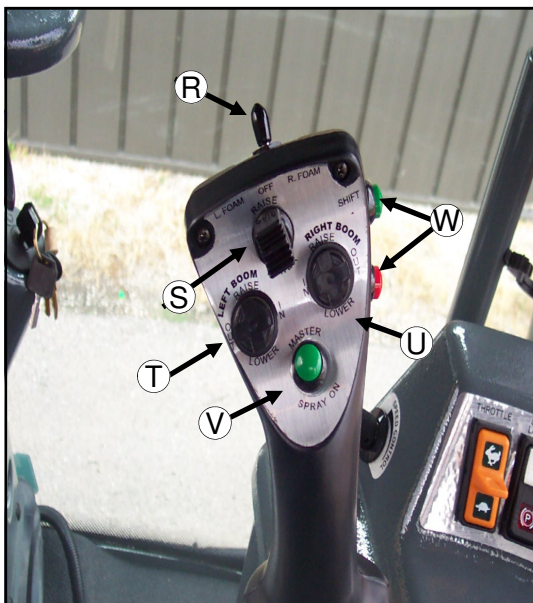


FIG. 4.4A-3

- O. Forward
- P. Neutral/Stop
- Q. Reverse
- R. Foamer switch
- S. Hydraulic Lift
- T. Left Boom (level, horizontal fold)
- U. Right Boom (level, horizontal fold)
- V. Master Spray switch "ON"
- W. Speed Range switch

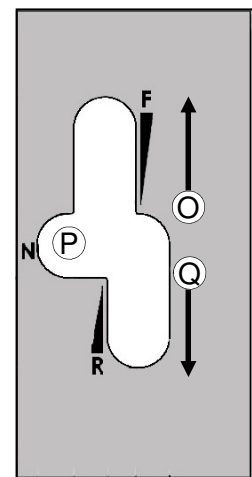


FIG. 4.4A-5

# IV. OPERATING SYSTEMS



FIG. 4.5A-1

**HYDROSTATIC LEVER**– The hydrostatic lever is used to control the direction of motion of the machine and the speed at which it travels. It is a part of the ACE hydrostatic drive system or the Automatically Controlled Engine Hydrostatic Drive. To learn more about the ACE system, refer to the OPERATING SYSTEMS section B on the hydrostatic drive system.

The lever also houses controls for the spray systems and foam marking systems. For information on these controls, refer to OPERATING SYSTEMS section D on the spray system.

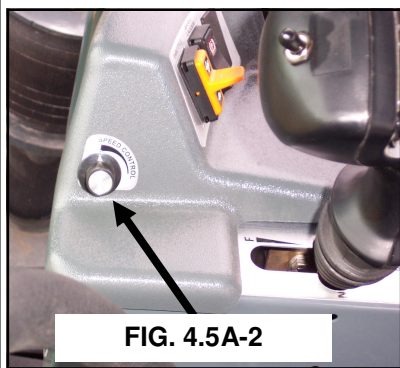


FIG. 4.5A-2

**SPEED CONTROL**- Another feature of the hydrostatic drive system is the speed control. This feature will help regain consistent field speeds when reentering a field from the end rows.

The speed control will maintain its setting until you reset it. It does not have to be reset each time you turn off the machine.

For information on how to use the speed control feature, refer to OPERATING SYSTEMS section B on the hydrostatic drive system.

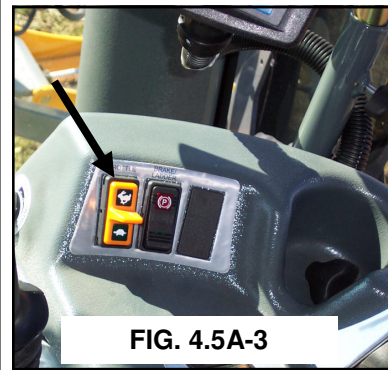


FIG. 4.5A-3

**THROTTLE SWITCH**- The throttle switch (fig. 4.5A-3) is used to control engine RPM. There are 2 settings that are controlled by the switch, high and low, with a RPM range of 800 to 2500.

The buttons on the side of the hydrostatic lever (fig. 4.5A-4) are to control the speed ranges within the RPM setting. For more information on the throttle controls,

refer to OPERATING SYSTEMS section B on the hydrostatic drive system.



FIG. 4.5A-4



FIG. 4.5A-5

**PARKING BRAKE**- The parking brake switch is located next to the throttle switch on the side console. The switch also controls the ladder. The brake switch must be on to lower the ladder and to run the side fill or pressure washer (if equipped).

The parking brake is not intended for normal or emergency stopping and will not engage if machine is moving over 1 mile per hour. Activating the brake while the machine is still moving is hazardous to the operator and the sprayer. Bring the sprayer to a complete stop with the hydrostatic lever in the neutral position before applying the parking brake.

## IV. OPERATING SYSTEMS

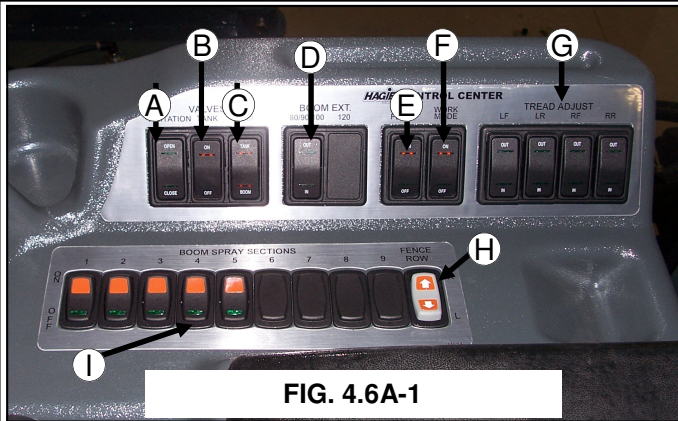


FIG. 4.6A-1

**AGITATION SWITCH-** The agitation switch (fig. 4.6A-1, item A) controls the rate of flow through the sparge system. For more information on the agitation system, refer to OPERATING SYSTEMS section D on the Spray Systems.

**TANK SWITCH-** The tank switch (fig. 4.6A-1, item B) controls the solution tank valve. This switch must be on to spray. For more information on the

tank switch, refer to OPERATING SYSTEMS section D on the spray system.

**RINSE SWITCH-** The rinse switch (fig. 4.6A-1, item C) is used when you wish to rinse the solution tank or the booms. For more information on how to use the rinse system, refer to OPERATING SYSTEMS section F on the rinse system.

**BOOM EXTENSION SWITCH-** Boom extension (fig. 4.6A-1, item D) switches are used when folding and unfolding the booms. Refer to OPERATING SYSTEMS section C on spray booms.

**FLOAT SWITCH-** The float switch is used with the Nitrogen Tool Bar and is not covered in this manual.

**WORK MODE SWITCH-** The work mode switch (fig. 4.6A-1, item F) is a safety switch. There are systems connected to this switch that will not function if the switch is not ON and this switch can not be turned on if certain conditions exist. You can not turn the switch on if the machine is not in neutral. The switch controls the functions of the spray system and the booms. This was set up to protect you, the operator, and others from accidentally engaging the spray system while transporting. Be sure that this switch is on before you intend to engage the spray system.


**TREAD ADJUST SWITCH-** The tread adjust switches (fig. 4.6A-1, item G) are used to hydraulically adjust the tread width. These switches will not do anything if you do not have hydraulic tread adjust. For more information on hydraulic tread adjustment, refer to OPERATING SYSTEMS section C on the hydraulic system.

**FENCE ROW SWITCH-** The fence row switch (fig. 4.6A-1, item H) is for the selection of right or left fence row spray nozzle. More information on the fence row can be found in OPERATING SYSTEMS section D on the spray system.

**BOOM SOLUTION VALVE SWITCH-** The boom solution valve switches (fig. 4.6A-1, item I) each control a valve located on the transom and the booms. The valves control the flow of solution through the boom. The boom is broken down into 5 sections (3 sections on a 60' boom), the far left tip being the beginning of section one. See section D under OPERATING SYSTEMS on the spray system for more information.

# IV. OPERATING SYSTEMS

## A. CAB

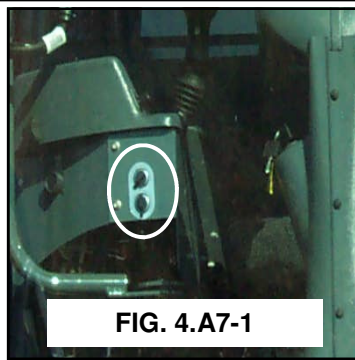


**POWER PORTS-** On the front of the side console there are two power ports (fig. 4.7A-1) for extra equipment to be plugged in. They are each protected by a 15 amp fuse. They are not intended for the permanent connection of extra systems to the sprayer. There is a terminal strip intended for the installation of extra radios and computer equipment. See the SERVICE section E on the electrical components.

**FOAMER SWITCH-** The foamer switch on the top of the hydrostatic lever (fig. 4.7A.2, item A) controls the foam option on either side of the machine. See OPERATING SYSTEM section D for more information on the foamer.

**MAIN SOLUTION SWITCH-** The main spray control (fig. 4.7A-2, item E) in the lower middle of the hydrostatic lever is so the operator can turn all spray valves off at one time.

See OPERATING SYSTEMS section D on spray systems for more information.

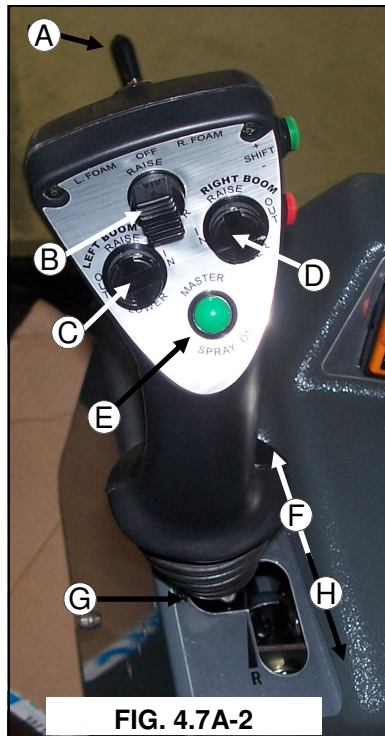

**FORWARD CONTROL-** The hydrostatic lever is responsible for the direction of motion of the machine. To move forward, slowly move the hydrostatic lever forward. (fig. 4.7A-2, item F)

**REVERSE CONTROL-** To move the machine in reverse, slowly move the hydrostatic lever backward. (fig. 4.7A-2, item H) Be sure that the machine is clear of all dangers before putting it in reverse.

**NEUTRAL POSITION-** The neutral position is also the stop or brake position. (fig. 4.7A-2, item G) The neutral position must be met before changing direction of the machine. There are several functions that can not be performed if the machine is not in the neutral position.

**More information on the forward, reverse, and neutral positions of the hydrostatic lever is available in section B of the OPERATING SYSTEMS.**

**LIFT, LEVEL, HORIZONTAL FOLD-** (fig. 4.7A-2, items B,C, &D) are all a part of the hydraulic system. A complete explanation of their functions can be found in section C of the OPERATING SYSTEMS.

# IV. OPERATING SYSTEMS

## A. CAB

### Overhead Controls and Monitors

- A. Hagie Diagnostic Port
- B. Warning Indicator Light
- C. Spray System Indicator Light
- D. MDM
- E. Wiper switch
- F. Washer Fluid switch
- G. Field Lights switch
- H. Work Lights switch
- I. Climate Control– fan
- J. Climate Control– temp
- K. Raven Console
- L. Radio
- M. Vents

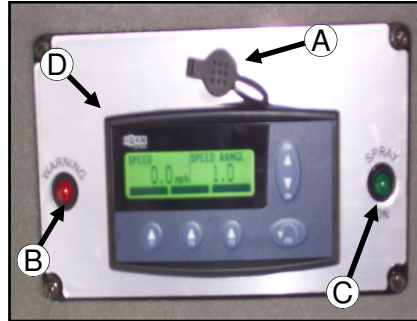


FIG. 4.8A-1

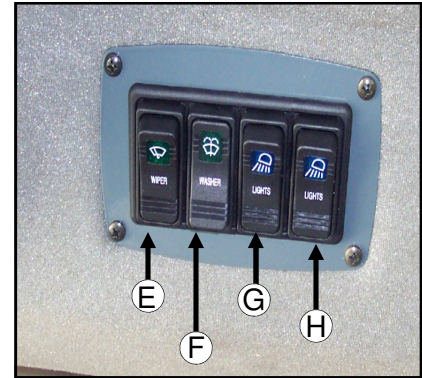


FIG. 4.8A-2



FIG. 4.8A-3



FIG. 4.8A-4



FIG. 4.8A-5

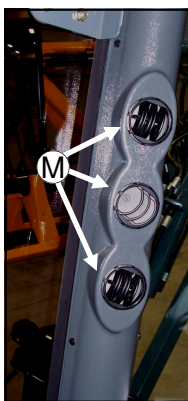


FIG. 4.8A-6

**HAGIE DIAGNOSTIC PORT**– The Hagie diagnostic port (fig. 4.8A-1, item A) is used for diagnostic purposes only. The Hagie Customer Service department can hook into your system to gather information on faults and malfunctions of the machine. From this port, they would also be able to reprogram the machine if it becomes necessary. This port is not for the use of personal computers or personal digital assistants (PDA's).

The Hagie diagnostic port is protected by a 10 amp fuse.

**WARNING INDICATOR LIGHT**– The warning indicator light (fig. 4.8A-1, item B) will come on if there are any malfunctions or faults in the systems monitored by the MDM. These warnings include, but are not limited to: engine oil pressure, oil level, hydraulic oil level, coolant temperature, battery voltage, and fuel level. An explanation of the fault will appear on the screen. If a fault appears, shut engine off immediately and resolve the fault before continuing. Failure to do so may result in damage to the system with the detected fault.

# IV. OPERATING SYSTEMS

## A. CAB

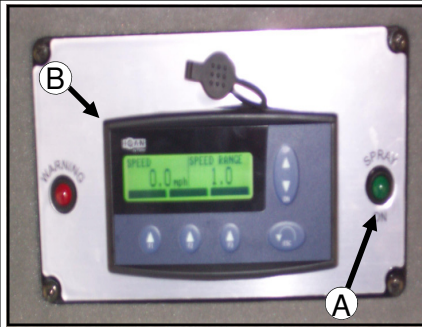


FIG. 4.9A-1

**SPRAY SYSTEM INDICATOR LIGHT**– The spray system indicator light (fig. 4.9A-1, item A) will illuminate when the main spray control on the hydrostatic lever (fig. 4.9A-2) has been activated. If the light is not on, the spray system is not on.

**MDM** – The MDM (fig. 4.9A-1, item B) is also referred to as the message center. The MDM takes



FIG. 4.9A-2

the place of the conventional gauges. The MDM can give you information on tread adjust width, engine RPM, engine oil pressure, hour meter, fuel level, coolant temperature, tire size, battery voltage, speed range, and machine program version. The information can be viewed by using the up and down arrows to move through it. The MDM will also display any faults found in the monitored systems.

**WINDSHIELD WIPER AND WASHER FLUID SWITCHES**– The windshield wiper switch (fig. 4.9A-3, item A) located on the right side of the headliner, turns on the wiper (fig. 4.9A-5, item A). The wiper will continue to operate until the switch is returned to the OFF position. Replace the 39 inch blade as necessary.

To activate the washer fluid pump, press the washer fluid switch (fig. 4.9A-3, item B) and hold until the desired amount of fluid is dispensed and then release the switch. You must turn the wiper OFF when the washer fluid has been completely wiped away. Washer fluid reservoir is located behind the cab (fig. 4.9A-4).

The fluid spray nozzle (fig. 4.9A-5, item B) is adjustable. Check the spray pattern and adjust at the beginning of each season or as necessary.

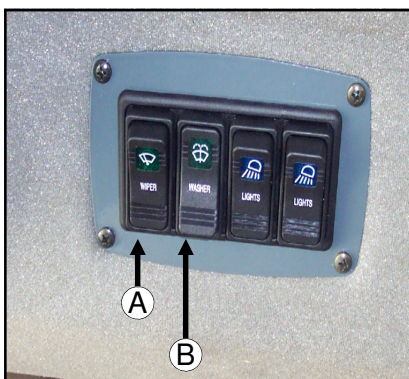


FIG. 4.9A-3



FIG. 4.9A-4



FIG. 4.9A-5



# IV. OPERATING SYSTEMS

## A. CAB

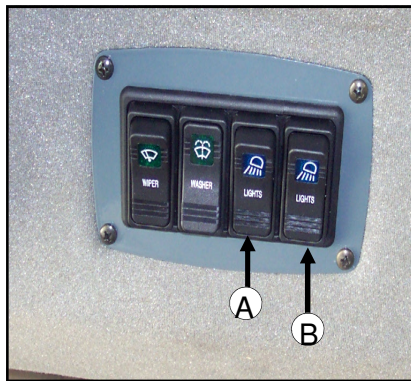


FIG. 4.10A-1

### FIELD LIGHTS AND WORK LIGHTS—

The field lights (fig. 4-10A-2), located on the front of the cab with the headlights, are activated by pushing the switch located on the upper right cab headliner (fig. 4.10A-1, item A). Use these lights when operating in the field after dark. Turn them off before entering a public roadway.



FIG. 4.10A-2



FIG. 4.10A-3

The work lights (fig. 4.10A-3), located on each boom cradle, one facing forward and one facing backward, are activated by pressing the other switch located on the right upper cab headliner. These lights can also be used when operating in the field after dark. Turn them off before entering a public roadway.

The ignition key has to be on to operate these sets of lights, but extended use without the engine operating to charge the battery is not recommended.

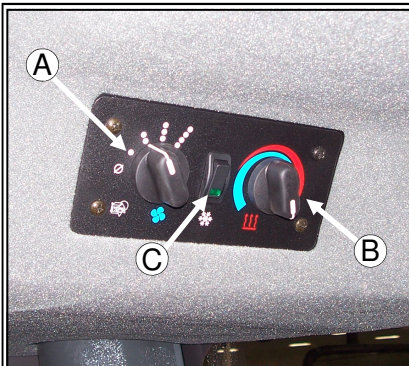


FIG. 4.10A-4

### CLIMATE CONTROLS -

The climate controls (fig. 4.10A-4) are continuous adjusting dial switches located on the front upper cab headliner.

**Adjusting Fan Blower Speed—** fan blower speed is controlled by the left rotary dial (fig. 4.10A-4, item A). To increase the fan speed, rotate the dial clockwise. To reduce the fan speed, rotate the dial counterclockwise. To shut the fan off, rotate the dial all the way counterclockwise.

**Adjusting Temperature Setting—** forced air temperature adjustments are controlled by the right rotary dial (fig. 4.10A-4, item B). Temperature control is a continuously variable adjustment. To increase the forced air temperature, rotate the dial clockwise. To decrease the forced air temperature, rotate the dial counterclockwise.

**Operating the Air Conditioning—** to activate the air conditioner, press the air conditioning switch (fig. 4.10A-4, item C). Adjust fan speed and temperature accordingly. See section B under SERVICE for servicing information.



# IV. OPERATING SYSTEMS

## A. CAB

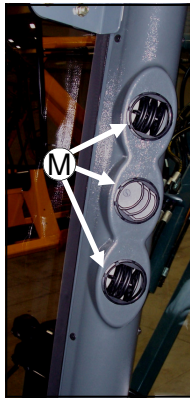


FIG. 4.11A-1

**VENTS**— There are 6 adjustable vents, 3 on each front cab corner post (fig. 4.11A-1). They may be adjusted by rotating them for desired direction, or individually turned on or off with the directional fins.

**RADIO**— The cab has an AM/FM tuner equipped with a CD player and Weather Band broadcasting. Refer to the radio manufacturer's manual for operating and programming information.



FIG. 4.11A-2



FIG. 4.11A-3

**RAVEN SPRAY SYSTEMS CONSOLE**— The spray system is controlled by the Raven SCS 4600 (fig. 4.11A-3) and the Pulse Width Modulated Valve (fig. 4.11A-4). The system receives data and automatically makes adjustments based on the target rate of application set by the operator.

For detailed information regarding the programming and operating of the Raven console, please refer to the manufacturer's installation and operation manual.

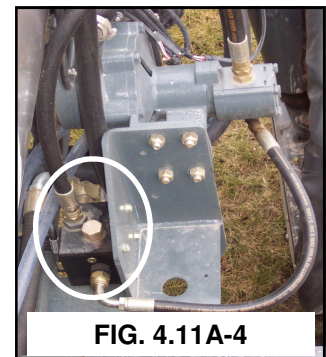


FIG. 4.11A-4

# IV. OPERATING SYSTEMS

## A. CAB

### Other Features

- A. Res-Q-Me Tool/ Emergency Exit
- B. Cab Glass
- C. Rear-viewing Mirrors
- D. Buddy Seat
- E. Cab Fresh Air Filters
- F. Interior Lights
- G. Air-Ride Seat



FIG. 4.12A-1



FIG. 4.12A-2



FIG. 4.12A-3



FIG. 4.12A-4

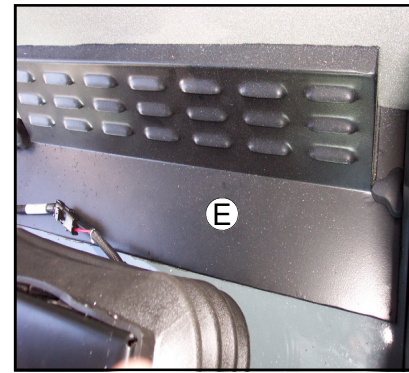


FIG. 4.12A-4

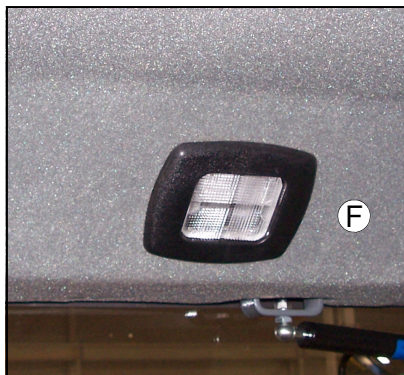


FIG. 4.12A-6



FIG. 4.12A-7

**INTERIOR LIGHTS**— The STS10 cab has two interior lights. A dome light that comes on when the door of the cab is opened, and a courtesy light that comes on when the field lights are turned on. (fig. 4.12A-6)The courtesy light illuminates the side console. The dome light can be turned on manually.



# IV. OPERATING SYSTEMS

## A. CAB



FIG. 4.13A-1

**RES-Q-ME TOOL/ EMERGENCY EXIT**– The RES-Q-ME tool (fig. 4.13A-1) located on the right rear cab frame, is used for an emergency exit. The device, when firmly pressed against any glass in the cab, will automatically trigger shattering the glass. Do not look directly at the glass as you use the tool.



FIG. 4.13A-2

**CAB GLASS**– The glass of the cab is DOT approved tempered glass. The front windshield is rounded with a green UV reflective tint and the side and back panels are flat with a UV reflective gray tint.

The design of the cab and the use of the glass allows a 210° view , tip to tip of the booms from the operator's seat.



FIG. 4.13A-3

**REAR VIEWING MIRRORS**– The cab also has two external rear viewing mirrors (fig. 4.13A-3).

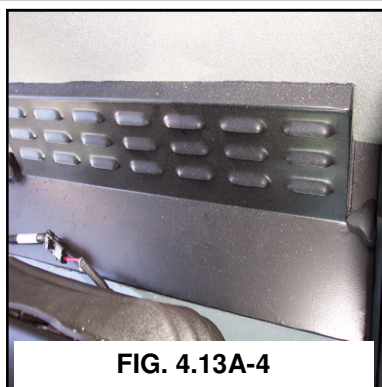


FIG. 4.13A-4

**CAB FILTERS**– Inside the cab are two filters (fig. 4.13A-4), a charcoal filter and a paper filter. Refer to the SERVICE section B on filters for maintenance information. Refer to the Hagie STS 10 Part Manual for replacement part information.

# IV. OPERATING SYSTEMS



FIG. 4.14A-1


**BUDDY SEAT**– The buddy seat (fig. 4.14A-1) was designed as an instructional tool. It is specifically designed for a “co-pilot” to be seated in a good position to be taught how to use the sprayer.

The buddy seat has another feature– it has a hinged seat that lifts to reveal a storage compartment.


Do not use the compartment to store chemical soaked clothing or gloves.

## AIR RIDE SEAT


- A. **Seat Cushion Adjustment:** Rotate knob to desired cushion position
- B. **Height Adjustment:** Pull knob out to lower seat. Push knob in to raise seat.
- C. **Lateral Isolator:** Lift lever to engage lateral isolator. Push lever down for lock-out.
- D. **Ride Firmness Adjustment:** Rotate knob counterclockwise for firm ride; clockwise for soft ride; and in the middle for an average ride.
- E. **Fore-Aft Adjustment:** Pull lever out and move seat.
- F. **Fore-Aft Isolator:** Lift lever to engage fore-aft isolator. Push lever down for lock-out.
- G. **Backrest Adjustment:** Lift lever to stop and lean rearward or forward to adjust backrest position.
- H. **Armrest Tilt Adjustment:** Turn counterclockwise to lower tilt; clockwise to raise tilt.
- I. **Lumbar Adjustment:** Rotate knob clockwise to increase lumbar support; counterclockwise to decrease lumbar support.

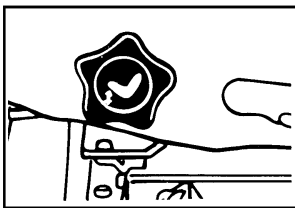


A

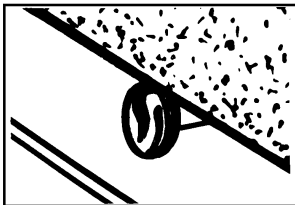


B

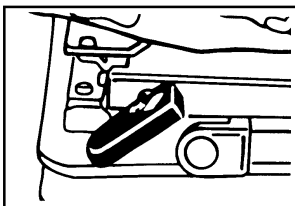


C

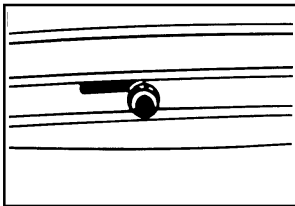


D

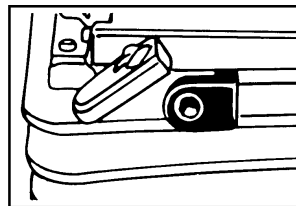


E

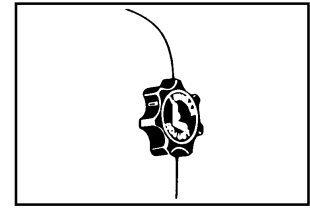


F

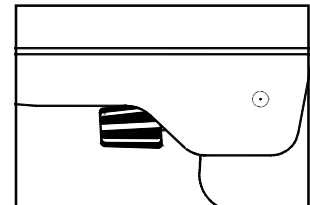

H

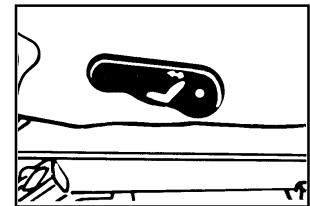

G

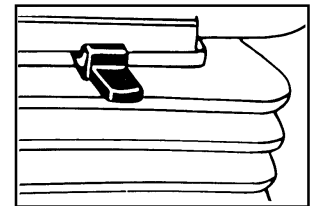

F

# IV. OPERATING SYSTEMS

## B. HYDROSTATIC DRIVE SYSTEM

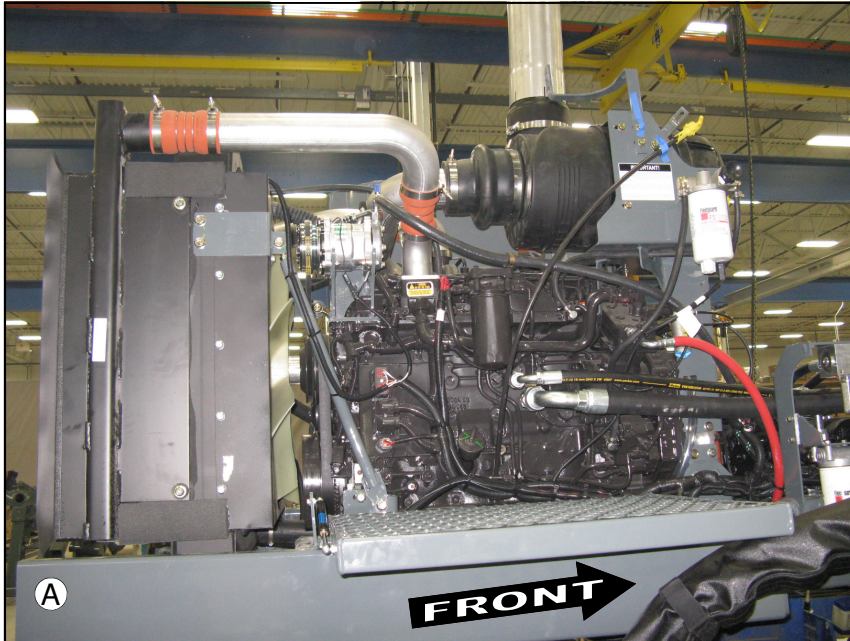


FIG. 4.1B-1

- A. Cummins Engine
- B. Tandem Hydrostatic Pumps
- C. Front and Rear Wheel Motors
- D. Wheel Hubs

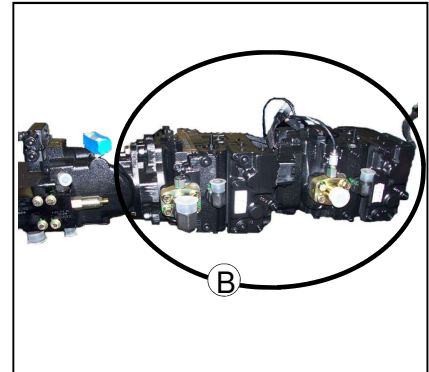


FIG. 4.1B-2

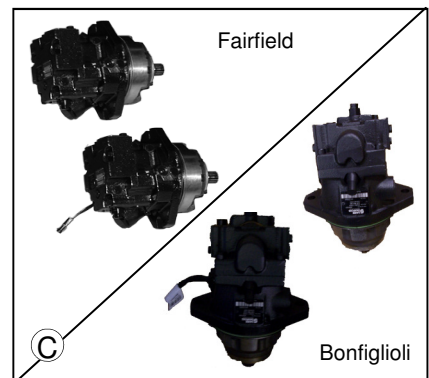


FIG. 4.1B-3

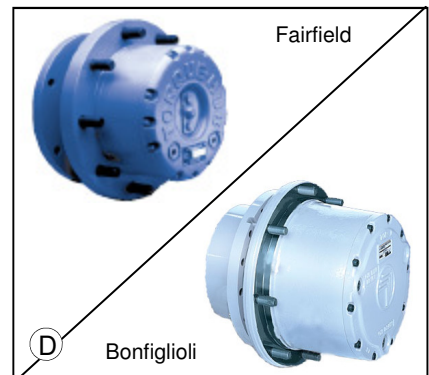


FIG. 4.1B-4

**CUMMINS ENGINE AND TANDEM PUMP**– The STS 10 comes standard with a 215hp Cummins diesel engine (fig. 4.1B-1). The engine has a direct mounted Sauer-Danfoss 90 Series tandem hydrostatic pump (fig. 4.1B-2). More information on the operation of the engine is on the next page.

**WHEEL MOTORS AND WHEEL HUBS**–The STS 10's all-time four wheel drive system consists of the Sauer-Danfoss hydrostatic wheel motors (fig. 4.1B-3) and the planetary gear reduction hubs (wheel hubs) (fig. 4.1B-4).

# IV. OPERATING SYSTEMS

## B. HYDROSTATIC DRIVE SYSTEM

### Operating The Engine



# CAUTION

Start engine from operator's seat only. When running engine in a building, be sure there is adequate ventilation.



Pre-operational Checks	Section Reference
1. Check the engine oil level. Do not operate when oil is below the low mark on the dipstick.	7.1B
2. Check the coolant level in the radiator and the coolant overflow reservoir.	7.3B
3. Check the hydraulic oil reservoir level.	7.1B
4. Check the cooling air intake screen	7.2C
5. Check the Filter Minder®.	7.1C
6. Drain fuel/water separator.	7.3C
7. Check engine drive belt.	7.1F
8. Drain any water out of the air tank daily.	7.1J
9. Check for any oil or fuel leaks and correct them if needed.	


**NOTE:**  
Cold oil may not flow in quantities adequate to prevent pump cavitation.



FIG. 4.2B-1

**BATTERY DISCONNECT-** The STS 10 is set up with a battery disconnect safety device (fig. 4.2B-1). This device is located on the left side of the rear frame cross tube. When the key is turned to the OFF position the electrical circuit is broken therefore rendering the machine unable to start. Do not use this device as a safety when working on the electrical system— disconnect the negative battery cable before servicing.

This device is also used as an anti-theft safeguard. Keep the key in a safe place, out of the machine when it is not in use.

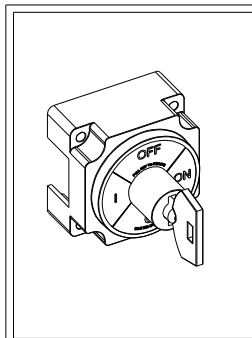

4.2B

# IMPORTANT

Do not use disconnect to stop engine. Do not bypass disconnect. Do not terminate electrical devices to battery terminals. Disconnect negative before servicing electrical equipment. Completely isolate electronics before welding. Key must be inserted and rotated to "ON" position for operation.

663072



# IV. OPERATING SYSTEMS

## B. HYDROSTATIC DRIVE SYSTEM

### STARTING THE ENGINE-

1. Position the hydrostatic lever to "N" (neutral) position (fig. 4.3B-1).
2. Put the parking brake switch( fig. 4.3b-2) to the ON position (see below). Turn the ignition key switch to the on position, wait for the "wait to start" light in the message center (fig. 4.3B-3) to go out before engaging the starter. If the engine fails to start after 15 seconds, turn the key to OFF, wait one minute and repeat the procedure. If the engine does not start in three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates that no fuel is being delivered.
3. Observe the warning lights on the message center after start up. If any functions do not operate, shut off engine and determine the cause.
4. Always allow at least a five minute warm-up period before operating the engine at high RPM. This means that the engine must reach operating temperature and oil pressure must stabilize in the normal operating range before it is run faster than an idle (1000 RPM or less).

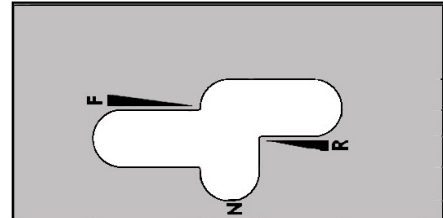


FIG. 4.3B-1



FIG. 4.3B-2



FIG. 4.3B-3

**PARKING BRAKE-** The parking brake will engage if the charge pressure falls below 150 PSI or the engine is shut off. To engage the brakes manually, press the top of the PARKING BRAKE/LADDER switch (fig. 4.3B-2) located on the side console.

To disengage the brakes, press the bottom of the switch. Always turn the brakes off before moving the sprayer.

The brake switch must be engaged to lower the ladder and to run the side-fill or pressure washer. The ladder will automatically lower when brake switch is pressed (see page 4.3C)

### NOTE:

The parking brake will not engage over 1 mile per hour.



## CAUTION

Activating the brake switch while the machine is moving is potentially hazardous to the operator and the sprayer.



# IV. OPERATING SYSTEMS

## B. HYDROSTATIC DRIVE SYSTEM

### ACE: AUTOMATICALLY CONTROLLED ENGINE-

1. Speed ranges are selected by a red (decrease speed range) and green (increase speed range) electronic switch mounted on the hydrostatic lever (fig. 4.4B-1, item A). The lower the setting, the higher the torque, but the lower the speed.
2. Increase the engine one bump to gain RPM of 1800 with the throttle switch (fig. 4.4B-2). More RPM will be gained as you move the hydrostatic lever forward.
3. To move forward, slowly push the hydrostatic lever forward. The farther the hydrostatic lever is moved, the faster the sprayer will travel and the RPM 's will increase (fig. 4.4B-3). To stop, slowly pull the lever to the "N" neutral position.
4. To reverse the machine, slowly pull the hydrostatic lever back. To stop, slowly push the lever to the "N" neutral position.
5. Before turning off the engine, reduce engine speed and allow the engine to idle at least three minutes.

#### NOTE:

Machine will not shift down until highest speed of desired range is met.

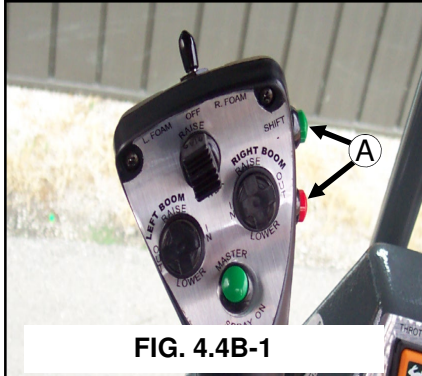


FIG. 4.4B-1

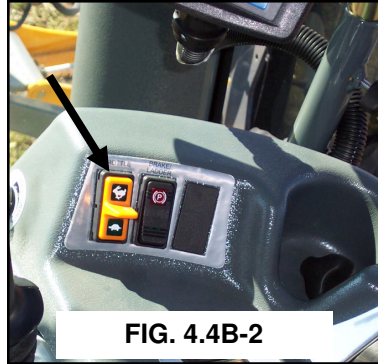


FIG. 4.4B-2

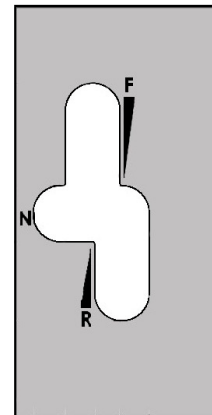


FIG. 4.4B-3

**SPEED CONTROL**— Speed control may be adjusted with the speed control dial (fig. 4.4B-4) This will conveniently help regain consistent field speeds when reentering a field from the end rows.

To set a cruise limit, start with the engine at one bump on the throttle switch or 1800 RPM 's and speed control dial all the way counterclockwise. Push the hydrostatic lever all the way forward. Now turn the speed control clockwise while observing ground speed and stop turning the dial when the desired ground speed is reached. Now your maximum field speed is set and you simply reposition the handle all the way forward to regain that speed.

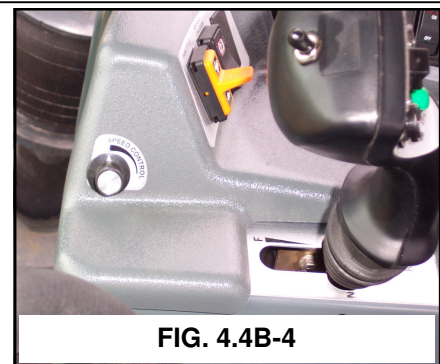


FIG. 4.4B-4



# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM



- A. Hydraulic Pump
- B. Power Steering
- C. Solution Pump
- D. Ladder
- E. Tread Adjust
- F. Spray Booms
- G. Gear Pump

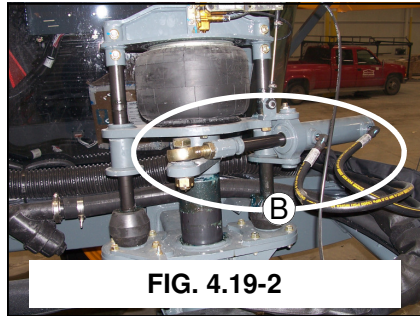


FIG. 4.19-2

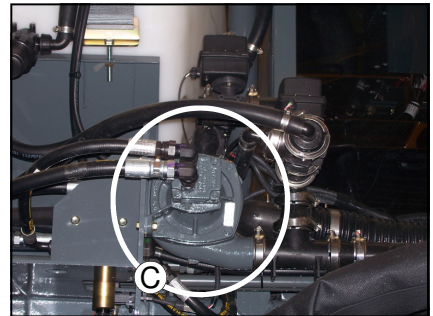


FIG. 4.19-3

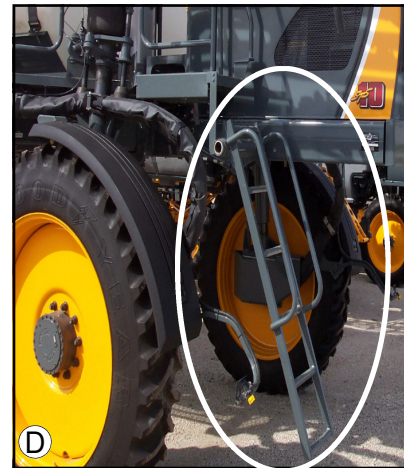


FIG. 4.19-4

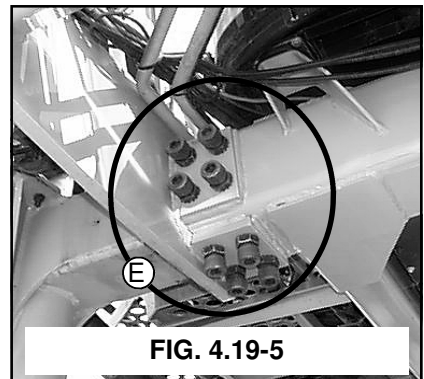


FIG. 4.19-5



FIG. 4.19-1



FIG. 4.19-6

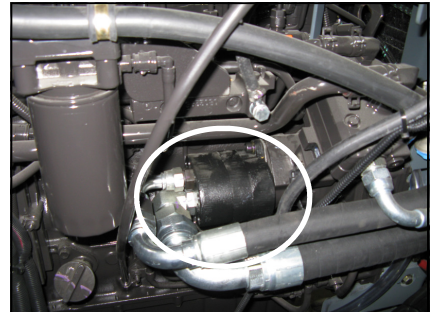


FIG. 4.19-7

The **AUXILIARY HYDRAULIC SYSTEM** is a load sensing, pressure compensated system with efficiency in mind. That means it only pumps the amount of oil needed to do the job.

The pump is mounted to the “front” of the second hydrostatic pump (fig. 4.19-1).The systems consist of a single variable displacement pump that supplies the required hydraulics to operate the full time power steering unit, boom control cylinders (lift, level, and fold), tread adjust, ladder, outer boom breakaway, and the solution pump.

The return oil from the load sense pump is mixed with the oil from the gear pump (4.19-7) on the side of the engine. This pump supplies a constant flow of oil from the hydraulic tank to the cooler and then back to the tank through the filter. This is considered a kidney loop and is dedicated to the cooling and filtration of the hydraulic system.

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

**HYDRAULIC PUMPS**– The hydraulic pump (fig. 4.2C-1, item A) circulates the hydraulic oil throughout the necessary systems and back through a cooler before returning it to the reservoir.

If the level in the reservoir drops too low to safely operate the machine you must shut down the engine immediately to prevent damage to the hydraulic system.


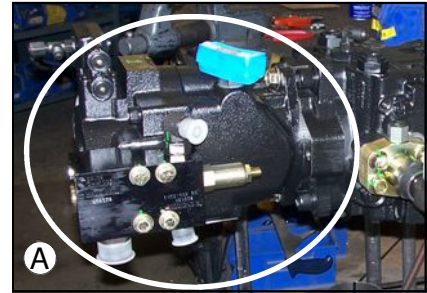


FIG. 4.2C-1

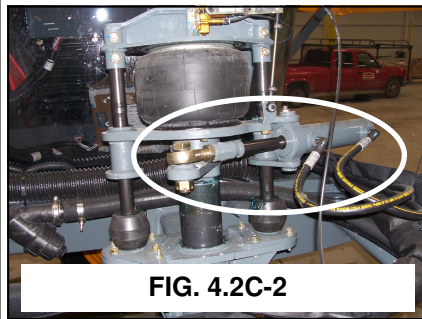

**POWER STEERING SYSTEM**– The power steering is a dedicated circuit steering system with full time control and self centering/ double action steering cylinders.

FIG. 4.2C-2

**SOLUTION PUMP**– The solution pump is a centrifugal pump controlled hydraulically with the pulse width modulated control valve. The valve is controlled by the Raven console per the calibration settings entered by the operator.

The solution pump is also used to distribute the water or cleaning solution from the rinse tank through the rinse systems.

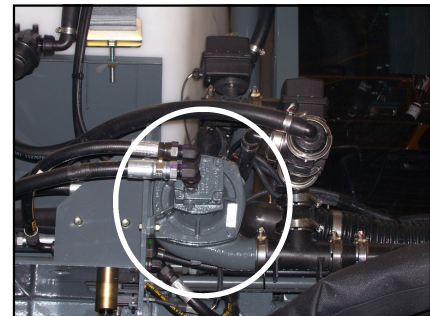


FIG. 4.2C-3



FIG. 4.20-4

**GEAR PUMP**– The gear pump aids in the circulation of hydraulic oil through the filtration and cooling systems.

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

### CAUTION

Upright ladder is not a service platform or step. DO NOT step on the ladder while in upright position. DO NOT lower ladder while anyone is on the ground near the sprayer. DO NOT attempt to lower ladder from the ground level, ladder may swing quickly and strike an unsuspecting person.

**LADDER-** To raise or lower the ladder you will need to locate the BRAKE/LADDER switch at the front of the right hand console (fig. 4.3C-3). When the brake is applied the ladder will lower automatically (fig. 4.3C-1). The ladder will not raise (fig. 4.3C-2) until the machine is running and the switch has been returned to the OFF position.



FIG. 4.3C-1



FIG. 4.3C-2



FIG. 4.3C-3





# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

**HYDRAULIC TREAD ADJUST**– To adjust the tread width hydraulically (if equipped) follow the instructions below:

1. Survey the surroundings and allow yourself enough room to adjust the tread in either forward or reverse.
2. Locate the tread adjustment switches on the rear of the right hand console (fig. 4.4C-1). They are marked LF (left front), LR (left rear), RF (right front), and RR (right rear). The legs may be moved in or out on each side independently\*. While driving between one and two mph, press and hold the desired switches to move the tread in the desired direction. Pressing the top of the any switch will move that leg OUT and pressing the bottom of any switch will move that leg IN.
3. Observe the tread width on each leg. Front legs use indicator decals (fig. 4.4C-2) while the rear legs use electronic sensors and the MDM in the cab (fig. 4.4C-3) . Release the switch when the tread indicator reaches the desired tread marking.
4. After adjustment is complete, all four tread width indicators should have identical readings.
5. To recalibrate toe-in: while driving forward slowly, turn the steering wheel all the way one way until both steering cylinders bottom out; continue turning the wheel a little more to let fluid bypass the cylinder. Then turn the steering wheel all the way the other way and repeat the process. When wheels are then straightened, steering cylinders should be re-centered and correct toe-in should be obtained. This is referred to as “phasing”. (see Section G of Service and Maintenance)

\* When a significant adjustment is being made, it is recommended that you adjust one leg at a time and do the adjustment in smaller increments. Binding may occur if a larger adjustment is made all at once, especially if adjusting one leg at a time.

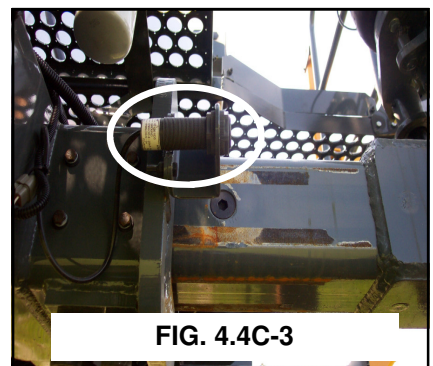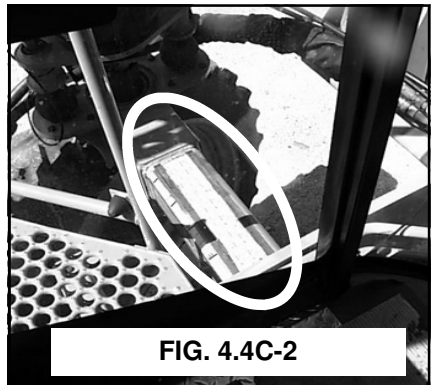

### CAUTION

**Never adjust the hydraulic tread on a public roadway. Make sure the sprayer is on level ground where there are no ditches or valleys to interfere when you perform the adjustment.**

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM


**SPRAY BOOMS**— Hydraulically folding the extensions of the 60/80/90 foot boom system and adjusting spray valves essentially turns it into a 60 foot boom. (continue reading this section for more information) Manually folding the outer extensions of the 60/80/90 foot system, adjusting spray valves and recalibrating the spray console essentially turns it into an 80 foot boom (see the section on the spray system and the section on calibration for more information on the console).

The spray booms are controlled by an electro-hydraulic system. This system consists of operator manipulated switches located in the sprayer's cab and hydraulic cylinders attached to the booms. It provides control of lift, level, horizontal extension, and vertical extension.

All STS 10 spray booms are equipped with a hydraulic breakaway circuit. When folded out as an 80 or 90 foot spray boom, a one-way hydraulic circuit on the outer boom section provides outer boom breakaway functions. The outer breakaway is self-resetting and will return to normal operating position after it has cleared the hazard (fig. 4.5C-1).



FIG. 4.5C-1

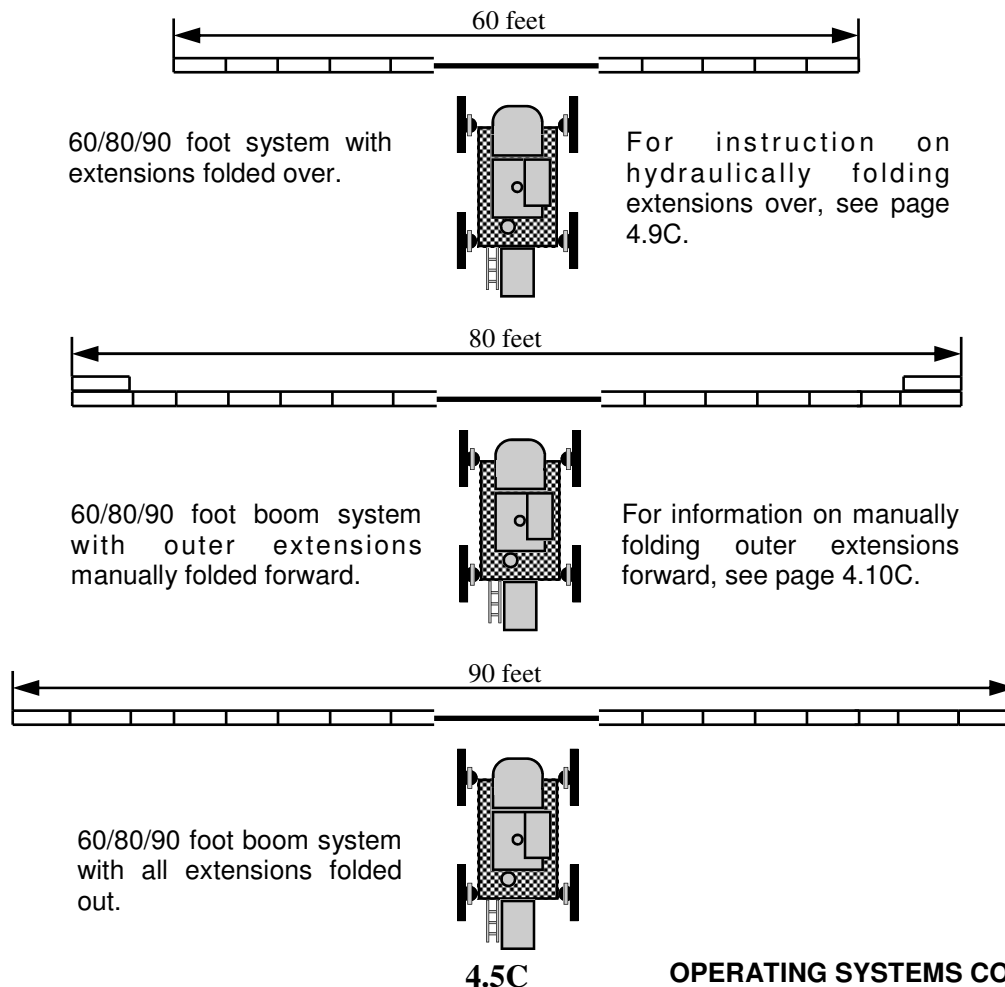

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

Lift

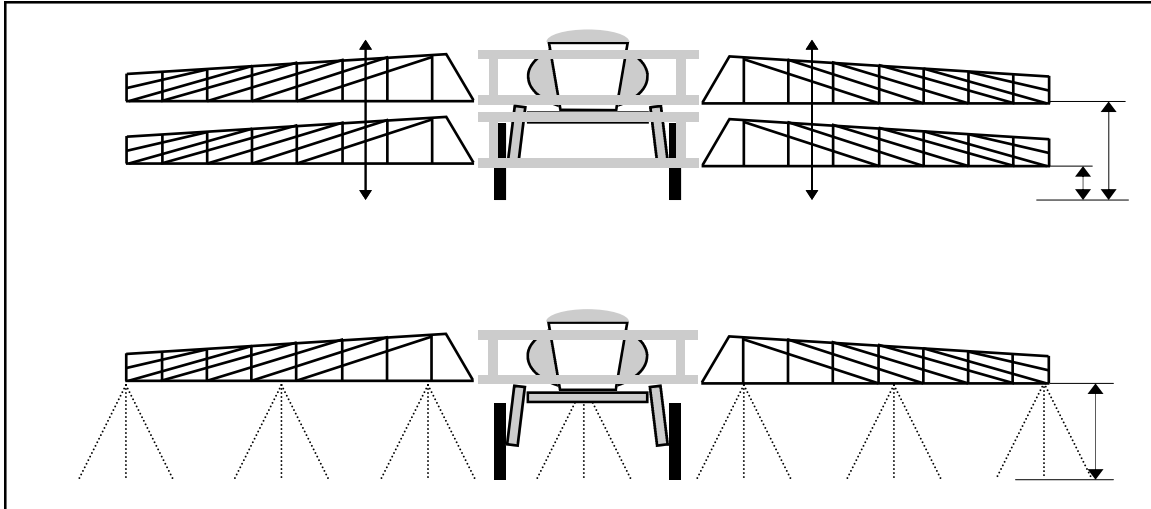


FIG. 4.6C-3

**NOTE:**

See your spray tip manufacturer's guide for information regarding spray tip height (fig. 4.6C-3).



FIG. 4.6C-1

To raise and lower the transom/boom assembly, depress the "square rocker" on the hydrostatic lever (fig. 4.6C-1) and move it either UP or DOWN. While pressed, it will activate the transom lift cylinders (fig. 4.6C-2).



FIG. 4.6C-2

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

Level

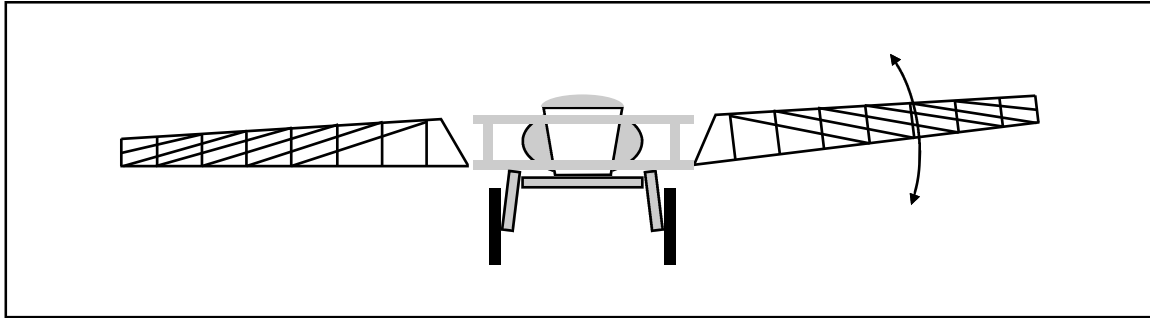


FIG. 4.7C-1

To increase or decrease the angle of each individual boom level, depress the left or right “Round Rocker” UP or the left or right “Round Rocker” DOWN buttons on the hydrostatic lever (fig. 4.7C-3). While depressed, these buttons activate the level cylinders connecting either boom to the transom (fig. 4.7C-2).

This adjustment also aids in placing the booms correctly in the cradles for transporting and storing.



FIG. 4.7C-2



FIG. 4.7C-3



# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

### Horizontal Extension

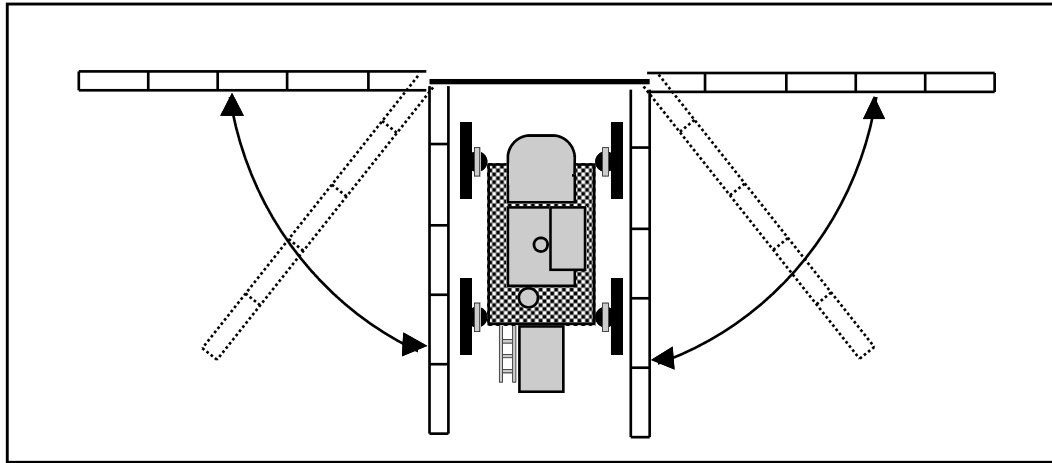


FIG. 4.8C-1

**HORIZONTAL EXTENSION-** To fold either boom horizontally in toward the machine or out, depress the right or left Rocker “Boom Fold” switches on the hydrostatic lever (fig. 4.8C-3). While depressed, these switches activate cylinders connecting either boom to the transom (fig. 4.8C-2).

Fold or unfold the booms in an open area only. Make sure no one is standing in the boom fold’s travel path. Booms can be folded if speed is less than 5MPH.



FIG 4.8C-2



FIG 4.8C-3

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

### Vertical Extension

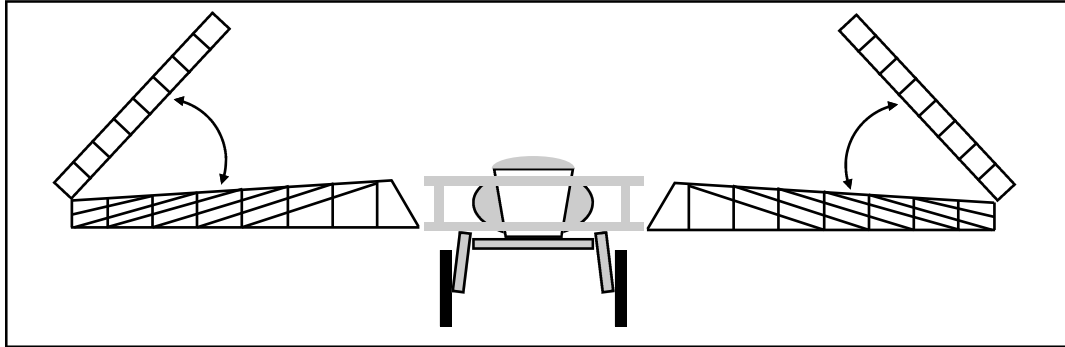


FIG. 4.9C-1

#### NOTE:

Boom extensions can only be folded when hydrostatic lever is in the neutral position, and you have pushed the **F1** or **ok** in the MDM showing you have acknowledged there are no power lines overhead. If sprayer is put in gear during folding, booms will stop.

**⚠ DANGER**



- Contact with overhead electrical wires and devices will cause severe injury or death.
- Fold booms in open areas only.

**VERTICAL EXTENSION-** To fold the boom extensions vertically in or out, depress the top or bottom of the **Boom Extension** switch (fig. 4.9C-2). **This activates BOTH extension cylinders connecting the inner boom section and the center boom section** (fig. 4.9C-3).

Fold or unfold the booms in an open area only. Make sure there are no overhead obstructions or wires to interfere with extension folding. The booms will vertically unfold even if they are still in the boom cradle or are not horizontally extended!

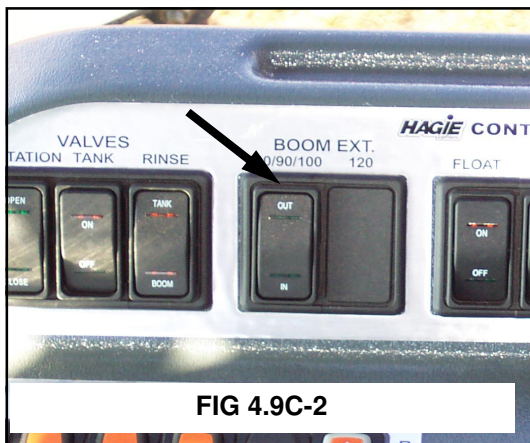


FIG 4.9C-2



FIG. 4.9C-3

# IV. OPERATING SYSTEMS

## C. HYDRAULIC SYSTEM

### Manually Folding 90' Boom to 80' Boom

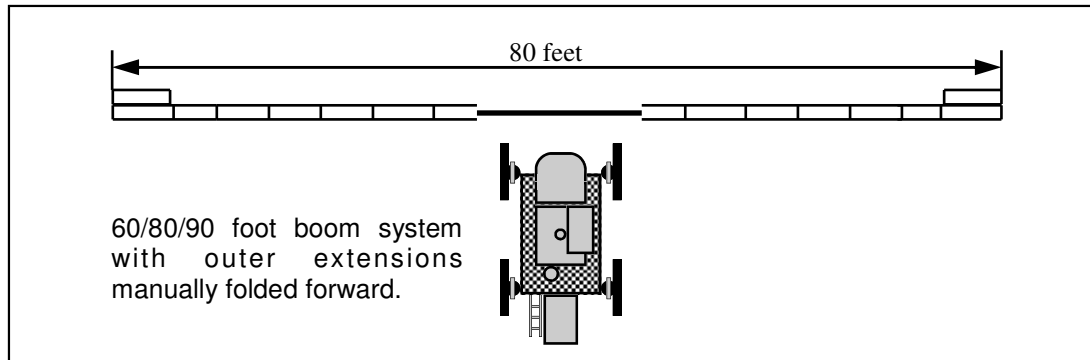


FIG. 4.10C-1

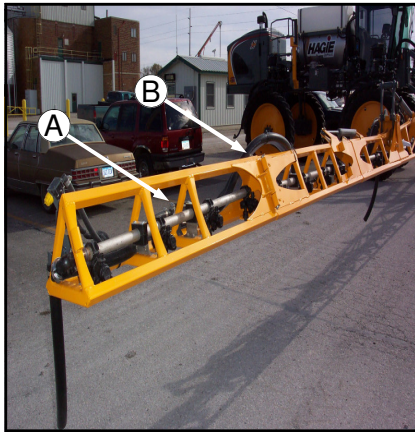


FIG. 4.610C-2

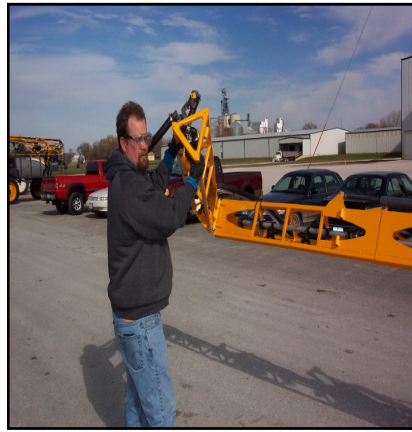


FIG. 4.10C-3



FIG. 4.10C-4

**MANUAL 90' TO 80' FOLD** - To convert a 90 foot boom to an 80 foot boom, manually close the solution supply valve on the outer section (fig. 4.10C-2, item A). Remove the pin on the back side of the boom (fig. 4.10C-2, item B) so it will hinge forward (fig. 4.10C-3) and secure it with the rear pin (fig. 4.10C-4). Repeat these steps on the other side and recalibrate the console accordingly (see the Raven manufacturer's guide) before spraying resumes. See page 4.10D regarding foam marker adjustment.

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEM

### Introduction



The spraying system is a constantly monitored and continuously adjusted computer controlled system. The cab mounted digital console receives information from various inputs to help determine GPM (gallons per minute) and GPA (gallons per acre).

In the following section, the components of the spray system will be explained. Please read the entire section before operating the STS 10's spray system. This section is not designed to replace the Raven manual, the numbers may not reflect your specific situation. Read all manuals before operating this equipment.

### Instructions

#### OPERATION

#### PAGE REFERENCE

1. Calibrate spray system console. 5.1A-5.9B or Raven manual
2. Check contents and quantity in solution tank.

#### NOTE:

Never attempt to operate the spray system without solution in the spray tank. Operating the spray system with no solution in the tank will cause severe damage and void the warranty.

3. Start engine. 4.3A, 4.3B
4. Open tank valves, if desired, activate the agitation system. 4.3D, 4.4D
5. Turn on the WORK MODE switch. 4.6A
6. Turn on the main spray power. 4.7D
7. Place individual boom solution valve switches to the ON position. 4.7D
8. Slowly move the hydrostatic lever forward to obtain the desired ground speed. 4.4B
9. Frequently observe the pressure gauge. When it drops to zero, or spray pattern deteriorates, shut off main spray power, solution pump, and agitation system until refilling solution. 4.4D, 4.7D, 4.3D, 4.4D, 4.5D or 4.6D

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEM

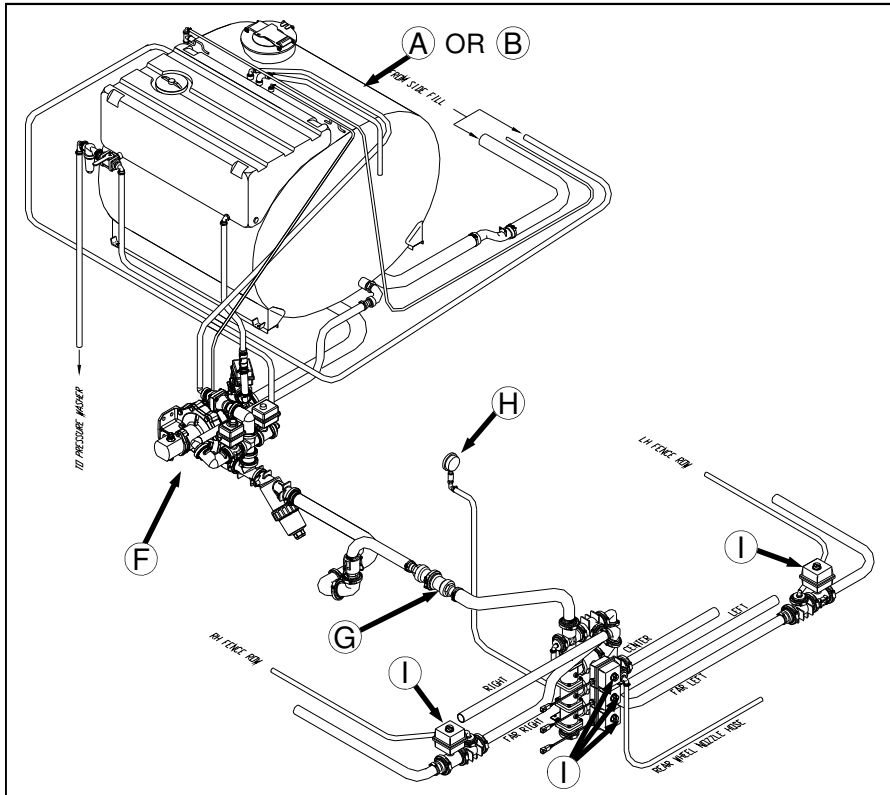


FIG. 4.2D-1



FIG. 4.2D-1

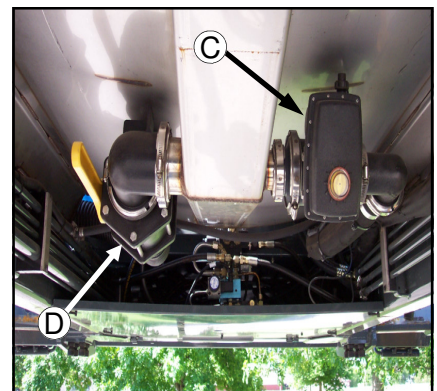


FIG 4.2D-2

- A. 1000g Poly Tank
- B. 1000g Stainless Steel Tank
- C. Solution Tank Valve
- D. Sump Valve
- E. Solution Tank Valve Switch
- F. Solution Pump
- G. Flow Meter
- H. Pressure Gauge
- I. Individual Solution Control Valves
- J. Agitation Switch
- K. Individual Spray Control Switches
- L. Main Solution Spray Control Switch

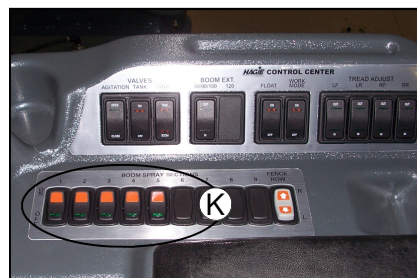


FIG. 4.2D-4



FIG. 4.2D-5

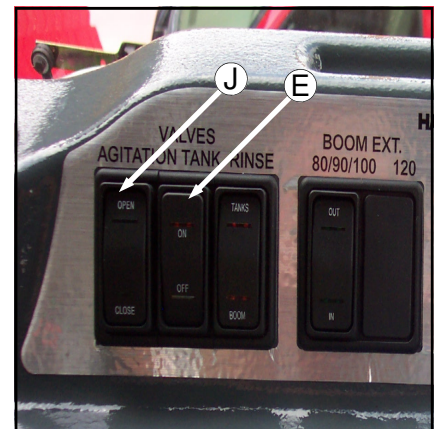


FIG 4.2D-3

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**SOLUTION TANK**– You have the option of the poly tank (fig. 4.3D-1, item 1) or the stainless steel tank (fig. 4.3D-1, item 2), both are 1000 gallon capacity. Their functions are similar, the only notable difference being the plumbing of the tanks. The poly tank has an eductor type agitation system and the stainless steel tank has a sparge type agitation system.

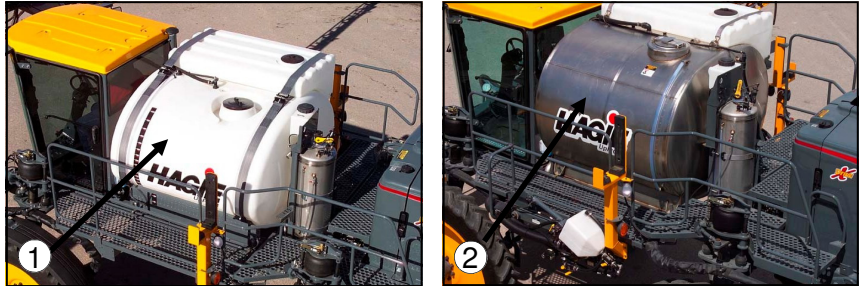


FIG. 4.3D-1

**SOLUTION TANK VALVE**– The solution tank valve (fig. 4.3D-2, item 1) controls the amount of solution coming out of the tank. The valve is controlled from inside the cab with the TANK VALVE switch (fig. 4.3D-3) located on the right hand console.

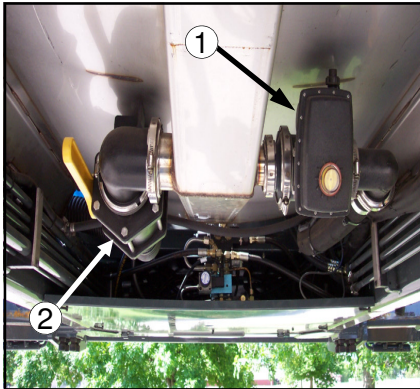


FIG 4.3D-2

**TANK SUMP VALVE**– The tank sump valve (fig. 4.3D-2, item 2) is a ball type valve that has to be turned on and off manually. This valve is to allow the fluid into the tank from the fill option.



FIG 4.3D-3

**SOLUTION PUMP**– The solution pump (fig. 4.3D-4) is a centrifugal type hydraulic pump that is controlled by the Pulse Width Modulated Valve (fig. 4.3D-5) and the Raven console (fig. 4.3D-6). The pump draws the solution out of the tank at a rate determined during the calibration of the Raven console. It dispenses it through the many valves and hoses that make up the spray system. The pump also dispenses fluids through the agitation system and the rinse systems.

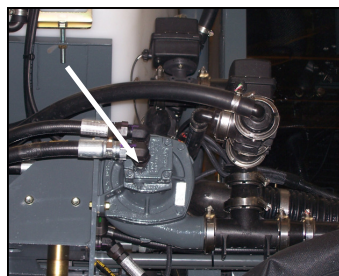


FIG. 4.3D-4

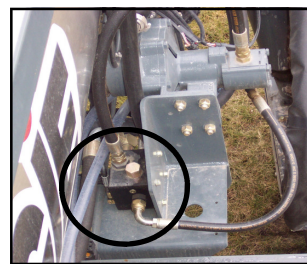


FIG. 4.3D-5



FIG. 4.3D-6

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**SOLUTION PRESSURE GAUGE**– The pressure gauge (fig. 4.4D-1) gives you the operator a constant visual display of the amount of solution being applied (measured in PSI). The pressure, as determined by the pulse width modulated control valve, will vary according to ground speed. If applying solution manually, the solution pressure gauge visually informs the operator of needed manual adjustments. The gauge also shows when there is a drop in pressure indicating that the solution tank maybe empty or there is a problem with the system.

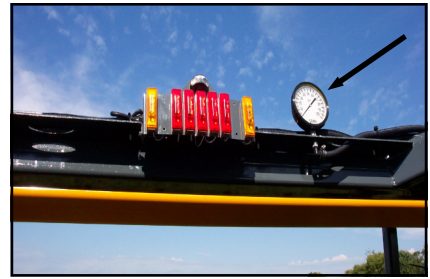


FIG. 4.4D-1

**FLOW METER**– The flow meter located in the main solution line (fig. 4.4D-2) monitors the solution flow and sends information back to the console and control valve. If the flow rate is not within the parameters programmed, the control valve will compensate by either opening or closing. If the rate continues to be outside the parameters an alarm will sound signaling a low flow rate. (See the Raven Console guide for more information on low flow limit)

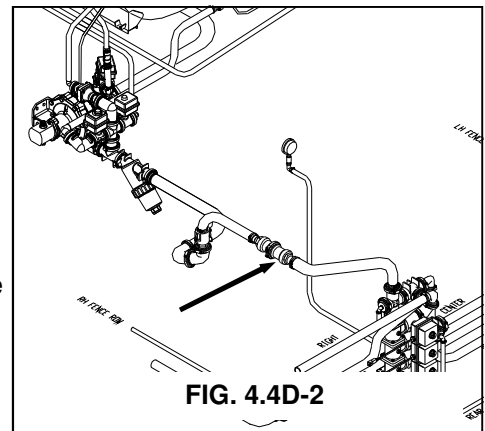


FIG. 4.4D-2

**AGITATION**– The speed of the sparge agitation system (stainless steel tank option) or the eductor agitation system (poly tank) is controlled by a variable flow solution valve (fig. 4.4D-3, item 1) mounted on the solution pump (fig. 4.4D-3, item 2). The agitation switch (fig. 4.4D-4) on the right hand console controls the rate of

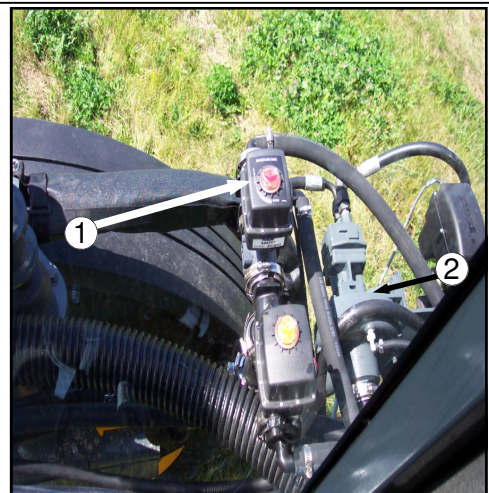


FIG. 4.4D-3



FIG 4.4D-4

flow through the sparge system. While watching the indicator on the agitation valve, increase or decrease the flow rate with the control switch. To increase the flow, press the switch up. To decrease the flow, press the switch down. When the desired rate of flow is achieved, release the switch.

To turn the agitation system off, decrease the flow rate all the way.

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**SOLUTION QUICK FILL**– To fill the solution tank, make sure the sump valve under the tank (fig. 4.5D-2) is open. To access the front fill, pull the front fill latch lever down (fig. 4.5D-3) and the assembly will lower (fig. 4.5D-4). Connect it to your solution supply, fill to the desired level. You may also fill the rinse tank from the ground level with the owner supplied connection. When finished, shut all of the valves and return the front fill to the locked position. See the next page for information regarding the use of the side fill inductor for filling the solution tank.



FIG 4.5D-2

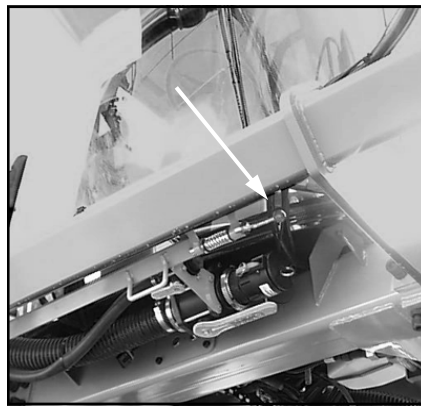


FIG 4.5D-3



FIG. 4.5D-4



# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**INDUCTOR OPERATION-** With the engine running and the parking brake set, flip the lock switch up (fig.4.6D-1,item 1). Lower the inductor assembly with the inductor control box switch (fig. 4.6D-1, item 2). If filling with the suck-on attachment, leave the engine running. If filling with the push-on attachment, turn the engine off.

**NOTE:**  
The following fill and rinse scenarios refer to figure 4.6D-2 below.

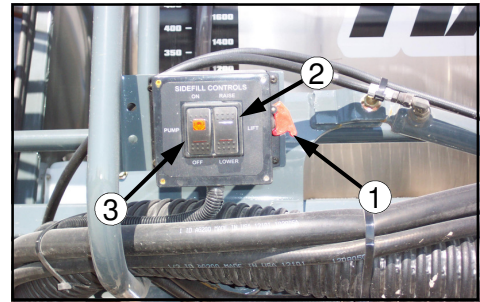


FIG 4.6D-1

**Load water only:** B-connected, C- on, E-off, F-off.

**Suck water only\*:** B-connected, C-on, E-off, F-off.

**Load water/induct chem.:** B-connected, E-open, F-off.

**Suck water/induct chem.\*:** B-connected, E-open, F-off.

**Fill rinse tank:** A-handle perpendicular to sprayer.

**Rinse inductor tank with rinse tank:** F- valve on.

**Rinse inductor tank with nurse tank (suck or load):** F-valve on, E-valve on.

\*To activate “suck-on” pump, flip the inductor control switch up (fig. 4.6D-1, item 3). This will start the pump. Flip switch down when filling is complete.

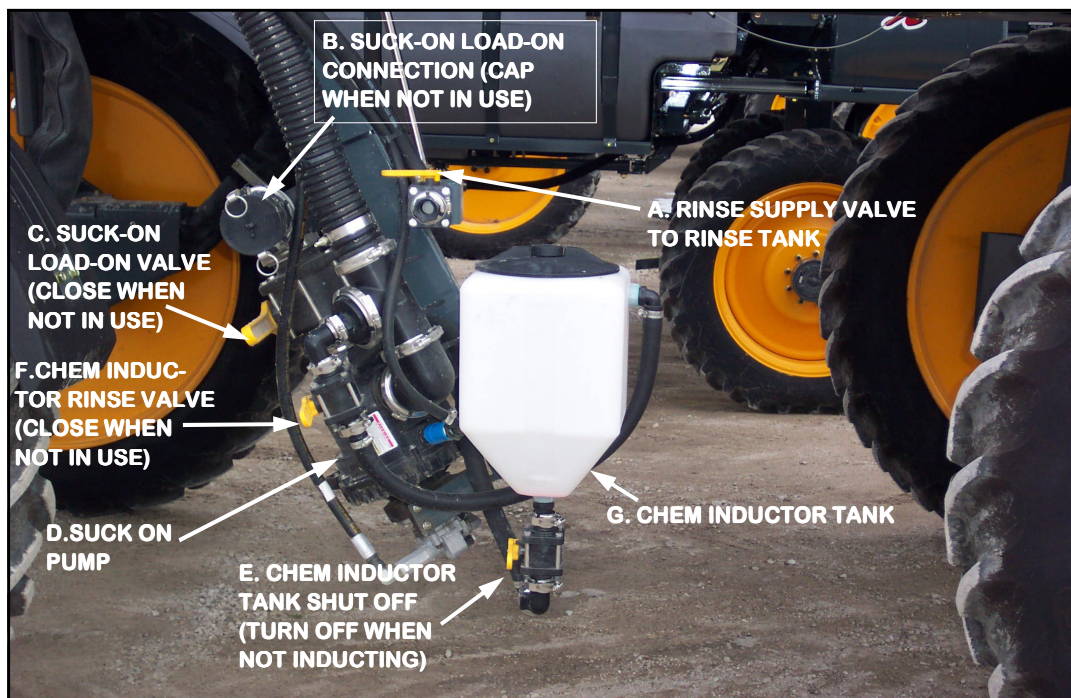


FIG 4.6D-2

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**BOOM SOLUTION VALVE SWITCHES**– The spray booms are divided into sections that are independently supplied with solution and can therefore be shut off or turned on independently. The electronic boom solution valves are controlled by a row of switches mounted on the right hand console (fig. 4.7D-1).



FIG. 4.7D-1

Sixty foot boom configurations are divided into three sections and the valves are mounted on the transom. Eighty and ninety foot booms are divided into five sections with three of the valves mounted on the transom and one mounted on each boom.

**BOOM SOLUTION VALVE L.E.D. INDICATORS**– Boom solution valve status is displayed on the transom by a series of L.E.D. indicators (fig. 4.7D-2). Each indicator light will illuminate if that particular boom solution valve is turned OFF.

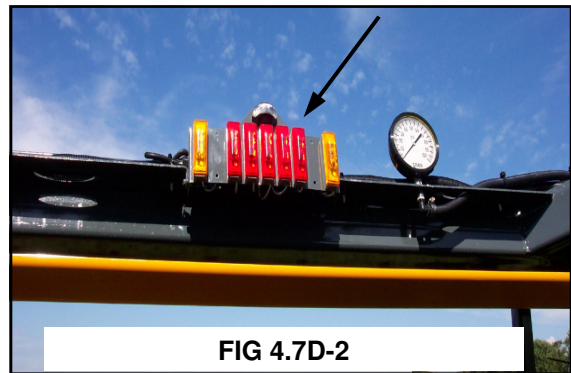


FIG 4.7D-2

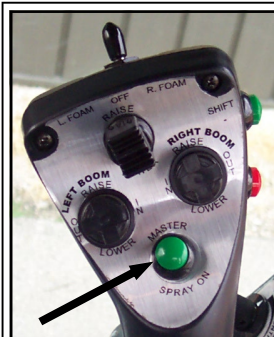


FIG. 4.7D-3

**MAIN SOLUTION SWITCH**– Main spray power can be controlled from a switch on the hydrostatic lever (fig. 4.7D-3). This controls the panel of boom solution valve switches. The main switch must be on to supply the individual switches with voltage. This allows you to turn all of the boom solution valves ON or OFF at the same time such as turning it off when you arrive at the end rows of a field and turning it back on when you re-enter the field. The individual switches allow you to turn the valves on or off separately.

When the main spray power is ON a green indicator light mounted on the right side of the MDM

(fig. 4.7D-4) will illuminate and a white indicator light mounted on the transom assembly (fig. 4.7-5) will illuminate also.

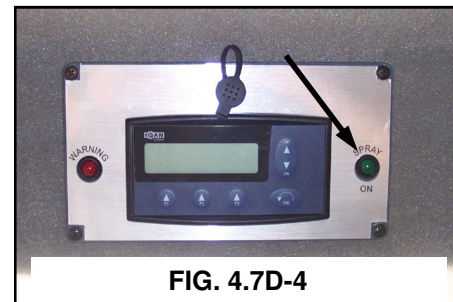


FIG. 4.7D-4

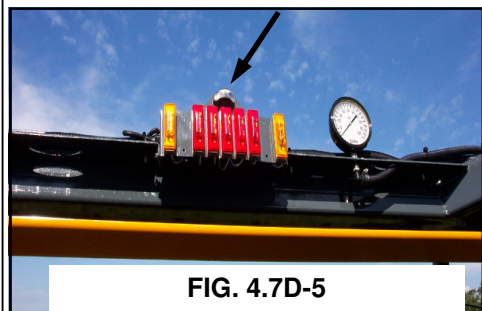


FIG. 4.7D-5

### NOTE:

**DO NOT** allow the pump to keep running when the boom switches are turned off. Failure to do so will generate in over-heating and cause severe pump damage and void the warranty.

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**FENCE ROW APPLICATOR**– To operate the fence row nozzle, locate the fence row switch on the console (fig. 4.8D-1) If you wish to turn on the right fence row nozzle, depress the top of the fence row switch. To turn on the left fence row, depress the bottom of the switch. To turn either fence row nozzle off, return the switch to the center position.



FIG. 4.8D-1

As you engage either fence row you may notice a drop in solution pressure.

A pair of amber L.E.D. lights mounted on the transom (fig. 4.7D-2), on either side of the boom solution valve indicator lights, will inform the operator of fence row status. If the left fence row nozzle is ON, the left amber L.E.D. light will be on. If the right fence row nozzle is ON, the right amber L.E.D. light will be on. If neither amber L.E.D. light is on, there is no solution being applied through the fence row nozzles.

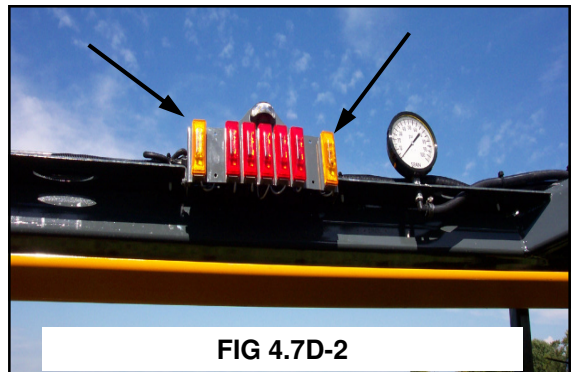


FIG 4.7D-2

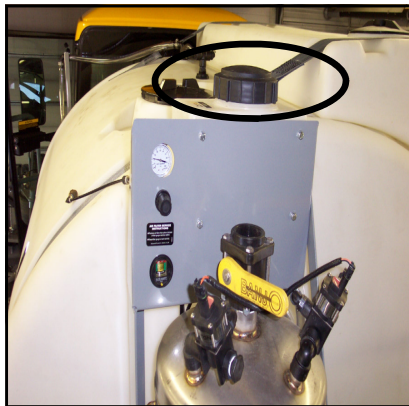


FIG 4.8D-3

**HAND WASHING SYSTEM**– Fill the hand wash tank (fig. 4.8D-3) with fresh water only! The hand wash valve is located under the left side of the sprayer (fig. 4.8D-4). Remember to close the valve before refilling.

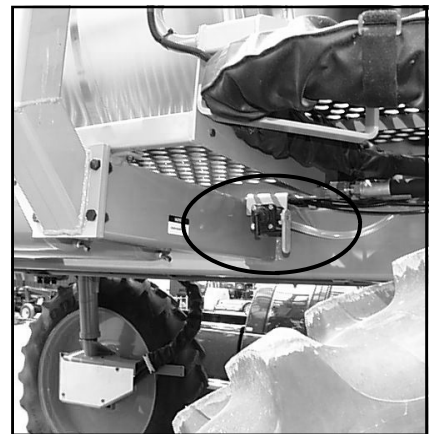


FIG 4.8D-4

**NOTICE**

**FILL WITH FRESH WATER ONLY**

650114

**NOTICE**

**HAND WASH ONLY**

650115



# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**RINSE SYSTEM OPERATION**– Activate the system only after solution tank is empty. Select a safe area to rinse spray system and clean sprayer where the chemicals will not drift off to contaminate people, animals, vegetation, or water supply. Refer to chemical manufacturer’s guide for types of cleaning solution combinations (plain water, cleaning agents, etc. ).

### TO RINSE SOLUTION TANK AND 3” FILL LINES:

The solution pump is controlled by the Raven console (fig. 4.9D-1)

1. Turn on spray system console. Turn the rate switch to the MANUAL position. Using the flow increase/decrease lever, increase the solution pressure to maximum PSI.
2. Close the solution tank valve (fig. 4.9D-2).
3. Depress the “SOLU TANK” rinse switch (fig. 4.9D-2, item 3).
4. When finished rinsing the solution tank, return the rinse switch back to the OFF position and turn the spray system OFF (including the solution pump switch, and console).



FIG. 4.9D-1

### TO RINSE BOOM SUPPLY AND NOZZLES:

1. Follow steps 1 and 2 from above.
2. Turn agitation OFF (fig. 4.9D-2, item 1).
3. Close solution tank valve (fig. 4.9D-2, item 2) and open boom supply valves (fig. 4.9D-2, item 4).
4. Depress the “BOOM” rinse switch (fig. 4.9D-2, item 3).
5. When finished rinsing the boom, return the rinse switch back to the OFF position and turn the spray system OFF (including the solution pump switch, console, boom solution valves, and main spray power switch)



FIG 4.9D-2

# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**FOAMER OPERATION**– To operate the foam marking system, locate the toggle switch on the top of the hydrostatic lever (fig. 4.10D-1). Push the top of the switch left if foam is desired from the left foam drop. Push the top of the switch right if foam is desired from the right foam drop. Return the switch to the center position if no foam is desired.



FIG. 4.10D-1

System pressure is indicated by a pressure gauge on the regulator which is mounted next to the foam tank (fig. 4.10D-2) To adjust the air pressure in the foam tank, turn the knob on the regulator clockwise for more pressure, and counterclockwise for less pressure. To correctly decrease the pressure in the foam tank, you must first open either the left or right foam valve for a moment to relieve system pressure. Then adjust regulator accordingly.



FIG. 4.3D-2

See figure below for foam drop valve configurations.

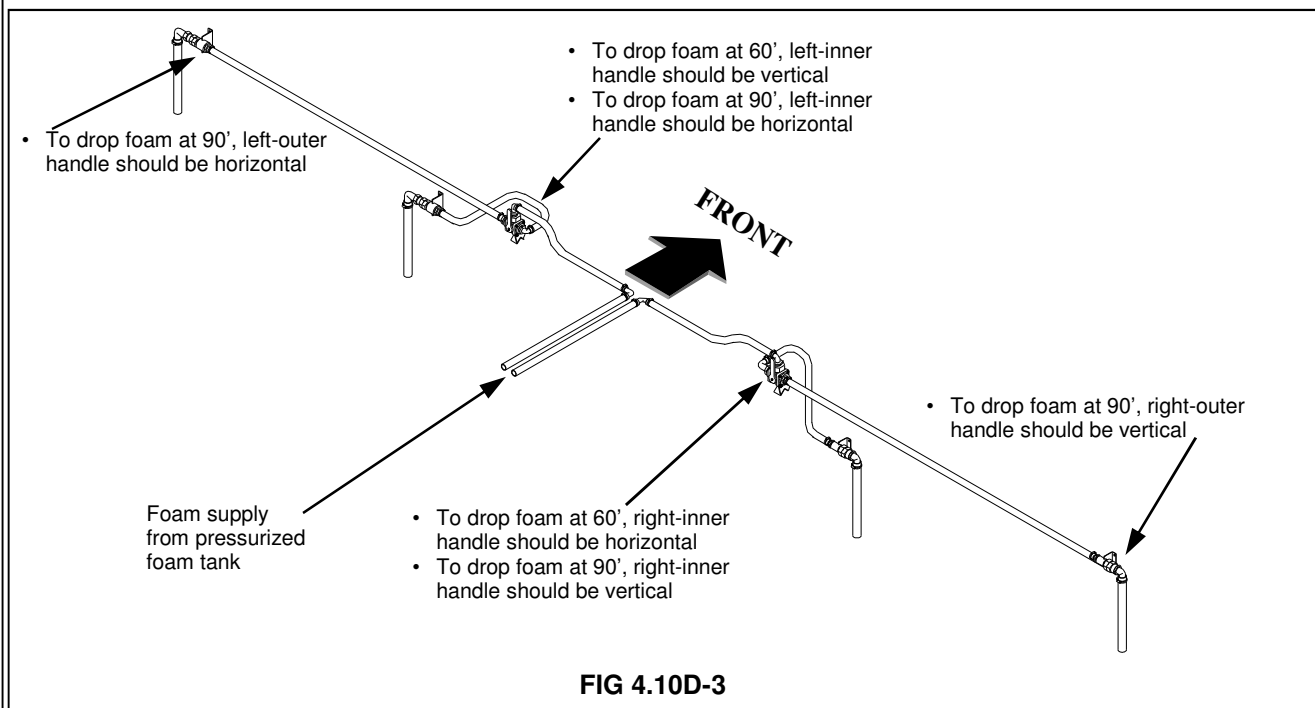


FIG 4.10D-3



# IV. OPERATING SYSTEMS

## D. SPRAY SYSTEMS

**FILLING THE FOAM MARKER SYSTEM**– Relieve pressure from the foam tank by opening the ¼” ball valve on the side of the foam tank (fig. 4.11D-1, item 2). Close the ball valve after pressure is relieved. Open the top 2” ball valve (fig. 4.11D-1, item 1). Add water to the tank, leaving enough room for the foam concentrate. Next add the foam concentrate according to the label on the container. After filling is complete, close the 2” ball valve on top of the tank. Start the sprayer’s engine and adjust the air pressure accordingly (see previous page).

### CAUTION

Before performing any service or refilling of the foam marker, shut the engine off and relieve system pressure from the tank.

### WARNING

DO NOT stand directly over or in front of valves when opening.

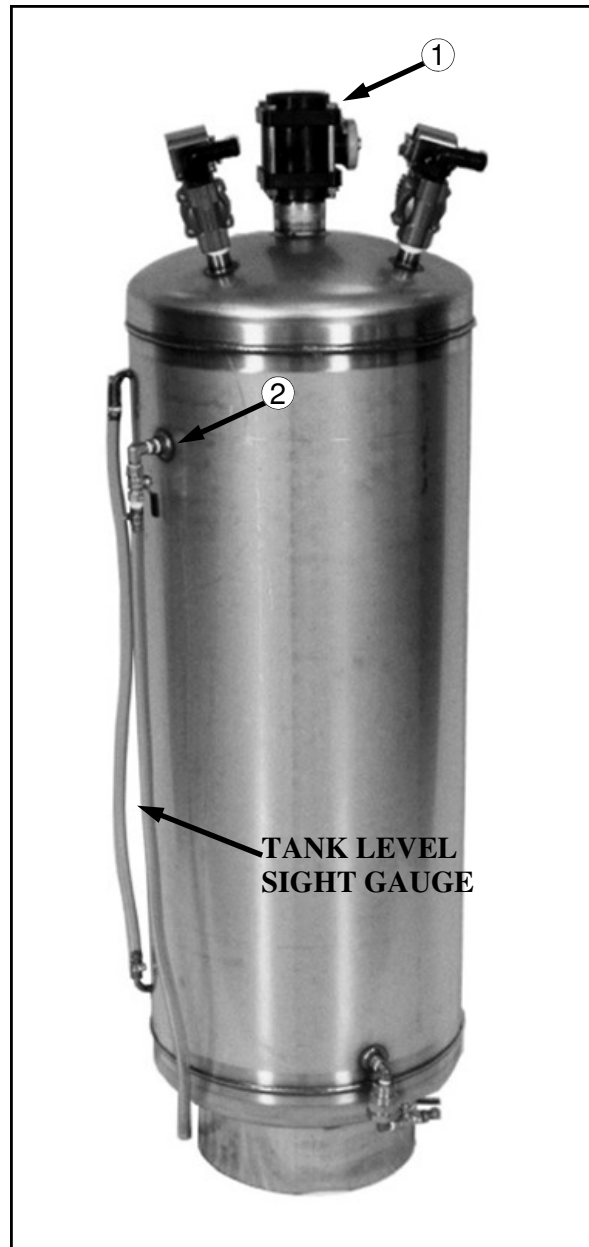


FIG 4.11D-1

# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

### DETACHING FROM THE MACHINE



FIG. 4.1E-1

#### FOLLOW THESE STEPS:

#### PAGE AND FIGURE REFERENCE

- |  |                                  |
|--|----------------------------------|
| 1. Determine where to place the boom once it is off the machine.   | 4.2E                             |
| 2. Lower the boom and secure the boom stands in the down position.   | 4.3E                             |
| 3. With the booms folded, horizontally extend the booms so that the folded tip is approximately even with the rear of the cab.   | 4.4E; FIGURE 4.4E-1              |
| 4. Disengage the quick attach lock assemblies.   | 4.4E; FIGURE 4.4E-2              |
| 5. Slowly and gently lower the boom and transom assembly until the quick attach hook is free of lock pin.  | 4.4E; FIGURE 4.4E-3              |
| 6. Make sure the solution valves are OFF and turn off the engine before disconnecting any hoses or electrical lines.   |                                  |
| 7. Once you have cleared the lock pin, unhook the hydraulic, solution, electrical, and foamer lines (if equipped), being careful not to leave the ends in a place that they may get damaged or contaminated. | 4.5E; FIGURES 4.5E-1 thru 4.5E-4 |
| 8. If no other attachment is going to be installed, re-lock the quick attach lock assembly to keep it safe from damage. Be sure to unlock it again when installing an attachment.                            |                                  |
| 9. Start the machine and slowly back out and away from the boom. Alarms will sound notifying you of modules offline, accept the warnings.  |                                  |



# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM



FIG. 4.2E-1

**WHERE TO STORE IT?** - When looking for a place to store the boom, there are three important things to keep in mind.

First of all, is the ground level? The ground must be pretty level to help prevent tip over. Look at the ground in all directions. Level ground will also minimize stress on the frame of the attachment while in storage.

Second of all, is there enough space? The boom option has to be partially open in order for it to stand properly. Make sure that there is adequate room to allow for the boom.

If you are storing the boom in a building, make sure that you have adequate room around it to safely pass by.


Third, is it accessible? You want to make sure that you can get back into the boom and that you are not blocking anything.

If temporarily storing the boom on a soft surface, such as grass, you may want to put blocks under the stands' feet to prevent the attachment from sinking into the ground. It is not recommended that booms be stored on a soft surface for an extended period of time because of the risk of the soil settling even when blocks are used.



# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

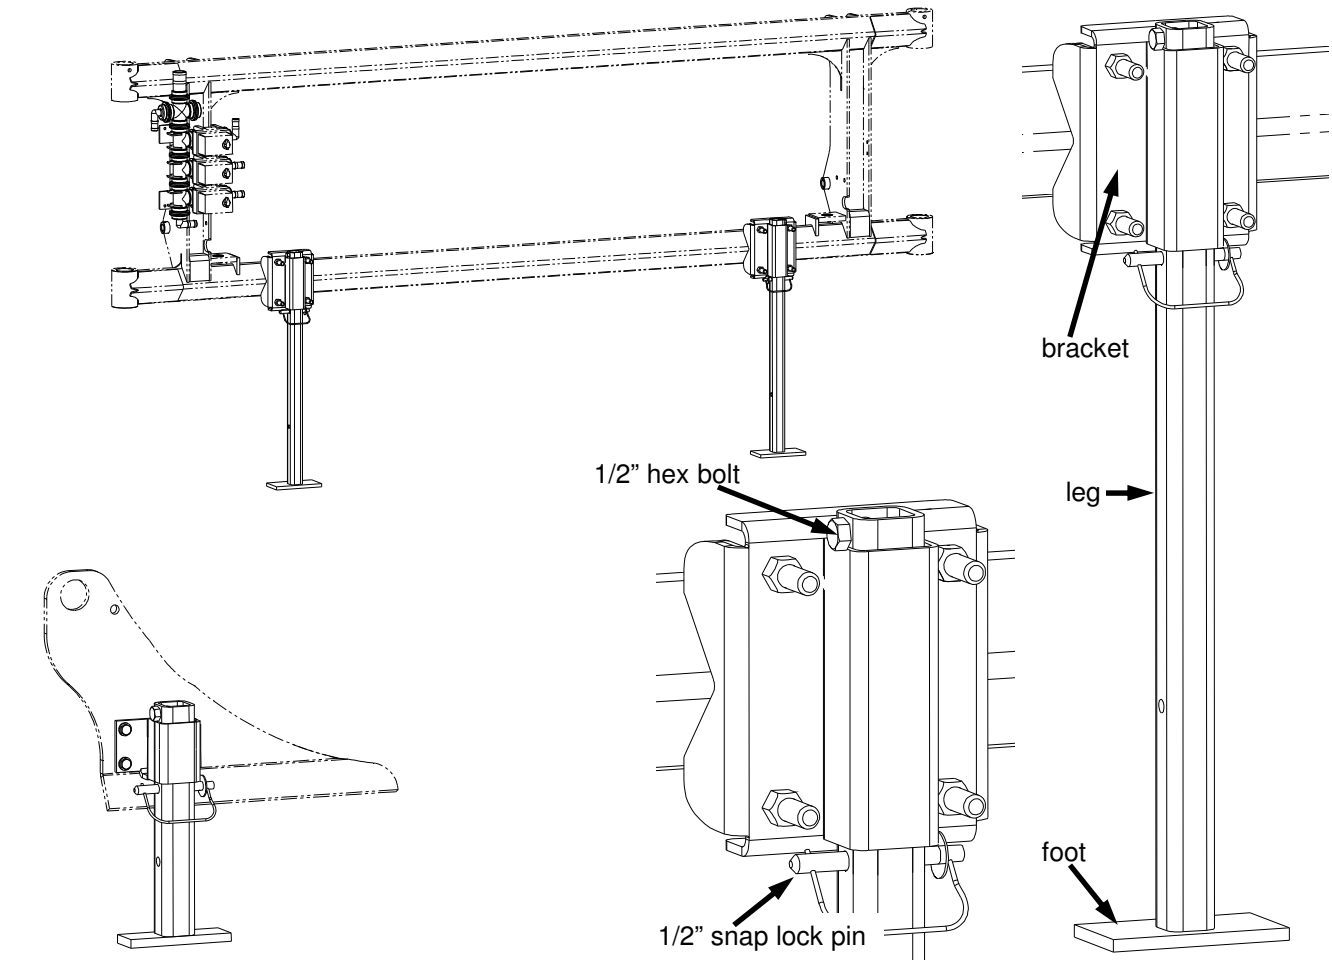

**BOOM STANDS-** If your boom option is equipped with boom stands, there are two on the transom and one on each of the inner sections of the booms. This is an option and not mandatory on every boom. Do not be alarmed if your boom does not have stands with it. Contact the Hagie Customer Service Department if you would like to have stands.

The stands are very simple. They are a brackets attached to the end of the first boom section on both booms and two on the transom. Each has a leg with a foot on the bottom. Each has a hex bolt in the top hole of the leg to secure it from sliding off, and a snap lock pin in the hole directly below the bracket to maintain it's position.

Do not leave the stands in the lowered position at anytime while moving the boom. Damage may occur to the boom if the stand were to catch uneven ground or an unseen object. Raise the foot all the way up and place the pin in the hole above the bracket.

# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

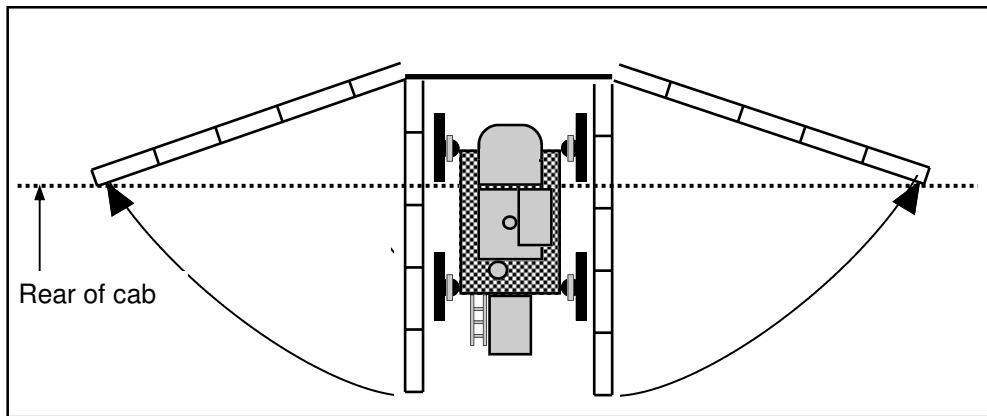


FIG. 4.4E-1

**OPENING THE BOOM**– The booms must be partially open to keep them stable while off the machine . Open the booms so that the stand on the end of the first section is even with the rear of the cab (fig. 4.4E-1).

This position will allow the booms to sit level with the transom without causing too much stress on the either part. It will also keep the weight from shifting too much either way (rearward or forward) which could cause the boom to tip over or be difficult to connect or disconnect.



FIG. 4.4E-2

**DISENGAGE THE LOCK ASSEMBLY**– Disengage the lock pin assembly only after you have lowered the boom close to the ground.

To disengage the lock assembly (4.4E-2), pull the pin out as far as it will go. Once the pin is out as far as it will go, it should lock in the out position. Make sure that the lock assembly does not re-lock while you are trying to remove the boom.



FIG. 4.4E-3

**LOWER THE BOOM TO THE GROUND**– Slowly and gently ease the boom to the ground or trailer.

Use the boom level function to try and make sure that all four stands touch the ground at the same time. Continue to lower the boom until the quick attach hooks have cleared the lock pin.

You may notice a “bounce back” effect when the weight of the boom has been relieved from the machine. Once the airbags have cycled, the machine will adjust to the new weight.



# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

 **WARNING**  
Turn the engine OFF before disconnecting any hoses or electrical lines! Failure to do so may result in serious injury or death.

**NOTE:**  
Make sure the solution valves are OFF before disconnecting solution hoses!

### DISCONNECT SOLUTION LINES, ELECTRICAL LINES, AND HYDRAULIC LINES—

Once you have cleared the lock pin, you will have to disconnect anything that may be connecting the boom to the machine. This includes solution lines, electrical lines, hydraulic lines, and foamer lines (if equipped).

Make sure that the solution valve is OFF. There will be a small amount of solution leak out. If it doesn't stop, or it is excessive, check the valve switch. If the switch is off, contact Hagie Customer Service for repair or parts.

A regular STS machine will have six points of disconnection from the boom: the electrical pigtail on the right hand side of the machine (fig. 4.5E-1), three hydraulic disconnections on the left hand side of the machine (fig. 4.5E-2), the rear wheel nozzle (solution) on the right side (fig. 4.5E-3, item 1), and the main solution disconnect on the right side of the machine, above the front wheel (fig. 4.5E-4). If you have the foamer option, there are two hoses near the electrical pigtail to disconnect (fig. 4.5E-3, item 2)

Remember to use the caps that are provided for the hoses. If there is not a cap, cover the opening with a plastic bag secured with tape until you can get a replacement cap from Hagie Customer Service. (See Parts Manual). Some of the hoses may be connected together to prevent leakage. DO NOT attempt to connect different systems!

Once you have disconnected everything, you may slowly back away

from the boom. The lift arms will stay in their position because of an automatic block that holds the pressure in the lift cylinders.



FIG. 4.5E-1



FIG. 4.5E-2

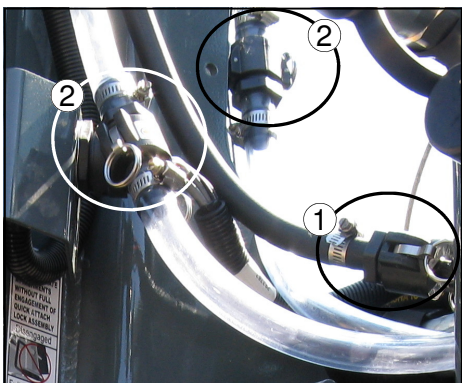


FIG. 4.5E-3



FIG. 4.5E-4

# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

### RECONNECTING TO THE MACHINE

FOLLOW THESE STEPS:	PAGE AND FIGURE REFERENCE
1. Square up to the boom. Make sure the quick attach lock assemblies are open.	4.7E
2. Pull into the boom <b>slowly</b> .	4.7E
3. Once you are pulled in squarely to the boom, check to see that the quick attach hooks are high enough to go over the lock pins. If the hooks are high enough, no adjustments need to be made to the machine. Continue to pull into the boom until the hook openings are above the lock pins.	4.7E; FIGURE 4.7E-1
4. Turn the engine OFF before connecting any hoses or electrical lines.	
5. Re-attach all solution lines, electrical lines, hydraulic lines, and foamer lines (if equipped). If you are attaching to something other than the boom, be sure you read the operators' manual for the attachment to know what lines will need to be hooked up and where the connection is.	4.7E; FIGURES 4.4E-2
6. Start the machine. Lift the boom until the hooks have engaged fully.	4.8E; FIGURE 4.8E-1
7. Lock the quick attach lock assemblies. Be sure that the assembly is fully engaged!	4.8E; FIGURE 4.8E-1
8. Put the boom stands in the "travel position".	4.8E; FIGURE 4.8E-2
9. Continue with your spray job.	4.8E; FIGURE 4.8E-3

# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

**PULL INTO THE ATTACHMENT**– Slowly pull into the boom.

A helpful tip to pulling into the boom: use your speed control. Set the speed to the slowest speed and control it from there rather than trying to control it with the hydrostatic lever. (See page 4.4B on the operation of the speed control)

**ARE THE HOOKS HIGH ENOUGH?**- Check to see that the quick attach hooks are high enough to clear the lock pins (fig. 4.7E-1). Due to soil settling or the difference in the airbag pressure without the boom on, you may need to let some air out of the airbags using the relief valves. If your machine is not equipped with the valves, you will need to call Hagie Customer Service and purchase airbag relief valve kits and install them on the front leg assemblies.

Once you have made any necessary adjustments you can continue to drive into the boom until the hooks are above the lock pins.



FIG. 4.7E-1



### WARNING

Turn the engine OFF before disconnecting any hoses or electrical lines! Failure to do so may result in serious injury or death.

### RECONNECT ALL HYDRAULIC, ELECTRICAL, SOLUTION, AND FOAMER (if equipped)

**LINES**– Reconnect all the necessary lines between the machine and the boom. If connecting to another attachment other than the boom, make sure that you read the operator and parts manual for the attachment and understand how to connect it.



FIG. 4.7E-2

# IV. OPERATING SYSTEMS

## E. OPERATING THE QUICK-ATTACH SYSTEM

**LIFT THE BOOM**– Lifting the boom will allow the weight of the boom to pull the hooks over the lock pins. Once the hooks are fully over the lock pins, be sure to engage the lock assemblies. **Do not operate the boom without the full engagement of the lock assemblies!**

You will notice the change of weight again as the machine begins to support the boom.



FIG. 4.8E-1

**CAUTION**

**DO NOT OPERATE ATTACHMENTS WITHOUT FULL ENGAGEMENT OF QUICK ATTACH LOCK ASSEMBLY**

Disengaged



Fully Engaged



650178

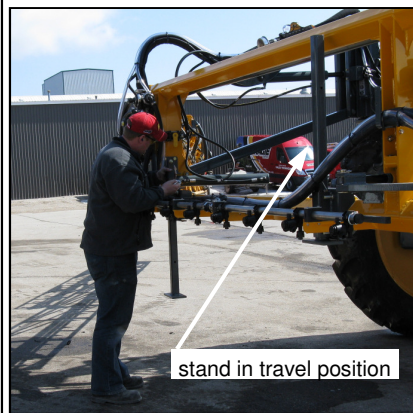


FIG. 4.8E-2

**BOOM STANDS**-This would also be a good time to put the boom stands (if equipped) in “travel” position by removing the pin and sliding the leg all the way up. Re-insert the pin above the bracket to keep the leg in place.

Do not try to move the machine a great distance without doing this step! You risk catching the stands on the ground causing unnecessary damage to the stands and to the boom. You may also damage the machine.

**CONTINUE WITH YOUR SPRAY JOB**– DO NOT FORGET to adjust you booms before moving the machine. Continue with your spray job.



FIG. 4.8E-3

# V. CALIBRATION

## A. INTRODUCTION

### INTRODUCTION

It is important to apply chemicals as recommended by the manufacturer's of the product. In order to do so, the spraying system must be properly calibrated.

Determine the speed at which the sprayer will be driven while applying the chemicals. To select the best speed, consider the lay of the land, the condition of the soil, the type of crops, the height of the crops, etc.

Select the nozzles spacing (distance between each nozzle on the spray boom) best suited for the intended spraying job. For help in determining the nozzle spacing and height of the boom, refer to the Spray Product Catalog that accompanies this manual.

There are several types and sizes of nozzles. Select (as recommended by the catalog) and install the type and size of nozzles best suited for the intended spraying job. The type of nozzle will be based on the product being sprayed and the type of crop it is being use on. The size of nozzles selected will be based upon the speed the sprayer will travel, the nozzle spacing, and the number of gallons one intends to apply per acre.

---

### IMPORTANT:

**The key to an effective spray job starts with  
the selection of the spray tip!**

Refer to the Spray Product Catalog that accompanies this manual for more information.

### TIP SELECTION:

There are several things to consider when selecting the type of nozzle you need for the intended spray job. Whatever your personal preference is, be sure that the nozzle complies with the chemical manufacturer's standards for spray control and also any environmental standards that might be in place for you region. (Some regions may have restrictions on "drift" control)

Once you have chosen a type of nozzle, you must choose the size of the nozzle. There are **3** main things to consider when choosing the size: **1)** recommendation of gallons per acre by the chemical manufacturer, **2)** the speed in which you intend to travel across the field while spraying, **3)** and the nozzle spacing (distance between tips).

See the next page for information on how to use this information to select a tip size.

# V. CALIBRATION

## A. INTRODUCTION

Since all the tabulations in the catalog are based on spraying water, you will need to use a conversion factor when spraying liquids are a different weight than water. This information is found in the Spray Products catalog.

Below is an example of how to choose the proper nozzle:

Joe is spraying 28% nitrogen. The chemical manufacturer recommends that the chemical be sprayed at 20 GPA. Joe knows that he can run his sprayer at 10 MPH across his field. He has a 20" nozzle spacing on his booms. Joe has narrowed his tip search to the flat spray tips.

Using the following conversion formula:

$$20 \text{ GPA (liquid other than water)} \times 1.13 \text{ (conversion factor)} = 22.6 \text{ GPA (water)}$$

Joe determined that he needs an application rate of 22.6 GPA to determine the correct nozzle to apply 28% nitrogen at 20 gallons per acre.

To figure out which nozzle is better for his use, Joe has to figure out the GPM he needs to spray.

$$\text{GPM} = \frac{\text{GPA} \times \text{MPH} \times \text{Spacing}}{5940} \rightarrow \text{GPM} = \frac{22.6 \times 10 \times 20}{5940} \rightarrow \text{GPM} = \frac{4520}{5940} \rightarrow \text{GPM} = 0.76$$

The nozzle that best matches the specifications set by Joe is the TP8008, spraying 22 GPA at a rate of 0.75 GPM. If Joe maintains a constant speed, he should have a successful chemical application.

### FLAT SPRAY TIPS

NOZZLE SIZE	PSI	DROP SIZE		CAP. 1 NOZZLE IN GPM	CAP. 1 NOZZLE IN OZ./MIN	GPA							
						MPH							
						4	5	6	8	10	12	15	20
TP8004	30	M	M	0.35	45	26	21	17.3	13.0	10.4	8.7	6.4	5.2
	35	M	M	0.37	47	27	22	18.3	13.7	11.0	9.2	7.0	5.5
	40	M	M	0.40	51	30	24	19.8	14.9	11.9	9.9	7.4	5.9
	50	M	F	0.45	58	33	27	22	16.7	13.4	11.1	8.3	6.7
	60	M	F	0.49	63	36	29	24	18.2	14.6	12.1	9.1	7.3
TP8005	30	C	M	0.43	55	32	26	21	16.0	12.8	10.6	8.5	6.4
	35	M	M	0.47	60	35	28	23	17.4	14.0	11.6	9.3	7.0
	40	M	M	0.50	64	37	30	25	18.6	14.9	12.4	9.9	7.4
	50	M	M	0.56	72	42	33	28	21	16.6	13.9	11.1	8.3
	60	M	F	0.61	78	45	36	30	23	18.1	15.1	12.1	9.1
TP8006	30	C	M	0.52	67	39	31	26	19.3	15.4	12.9	10.3	7.7
	35	C	M	0.56	72	42	33	28	21	16.6	13.9	11.1	8.3
	40	C	M	0.60	77	45	36	30	22	17.8	14.9	11.9	8.9
	50	C	M	0.67	86	50	40	33	25	19.9	16.6	13.3	9.9
	60	C	M	0.73	93	54	43	36	27	22	18.1	14.5	10.8
TP8008	30	C	C	0.69	88	51	41	34	26	20	17.1	13.7	10.2
	35	C	C	0.75	96	56	45	37	28	22	18.6	14.9	11.1
	40	C	C	0.80	102	59	48	40	30	24	19.8	15.8	11.9
	50	C	M	0.89	114	66	53	44	33	26	22	17.6	13.2
	60	C	M	0.98	125	73	58	49	36	29	24	19.4	14.6

There is more than one option to choose from, but this nozzle offers a broader range @ the speed he wishes to travel.

These calculations are based on a 20" spacing, refer to the Spray Products catalog for the formula for choosing a spacing other than 20".



# V. CALIBRATION

---

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GUIDE TO GET STARTED!** REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.

### **IMPORTANT:**

Remember that the performance of the nozzle and the spray system is dependant on the performance of the operator. If the system is operated within the parameters of the nozzle type and the machine/console set up, you will see greater success with your application. Operating the machine even one or two miles per hour faster or slower than intended will greatly change the outcome of the programmed spray job.

**NOTE:** DATA MUST BE ENTERED INTO KEYS 3 THRU 7.

### **GETTING STARTED:**

1. The entry sequence is always the same; 1) depress the key in which you wish to enter data, 2) depress the ENTER key (an E will illuminate in the screen), 3) depress the keys corresponding to the number you wish to enter ( the numbers will be displayed as they are entered), 4) complete the entry by again pressing the ENTER key.
2. When the console is initially turned on, it will flash CAL and displayed ACRE US. This means that the console must be calibrated or programmed before it can be operated. Once the console is calibrated or programmed, you will not have to do it again unless you wish to make changes. All data is retained if the console is turned off.
3. If any error is made during the programming of the area measurement standard or the valve type, turn the console OFF. Depress CE and hold while turning the console power ON.


**IMPORTANT!** The information contained in this section is not meant to replace the information contained in the Raven's operational manual or the instructions of the chemical manufacturer. The information may need to be adjusted to suit the varying conditions under which the machine is being used. We can not account for the infinitely variable situations that may be unique to each machine, operator, and field/crop.

# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GUIDE TO GET STARTED! REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.**


Momentarily depressing the **CE** key is similar to using an arrow key to scroll through menu selections.

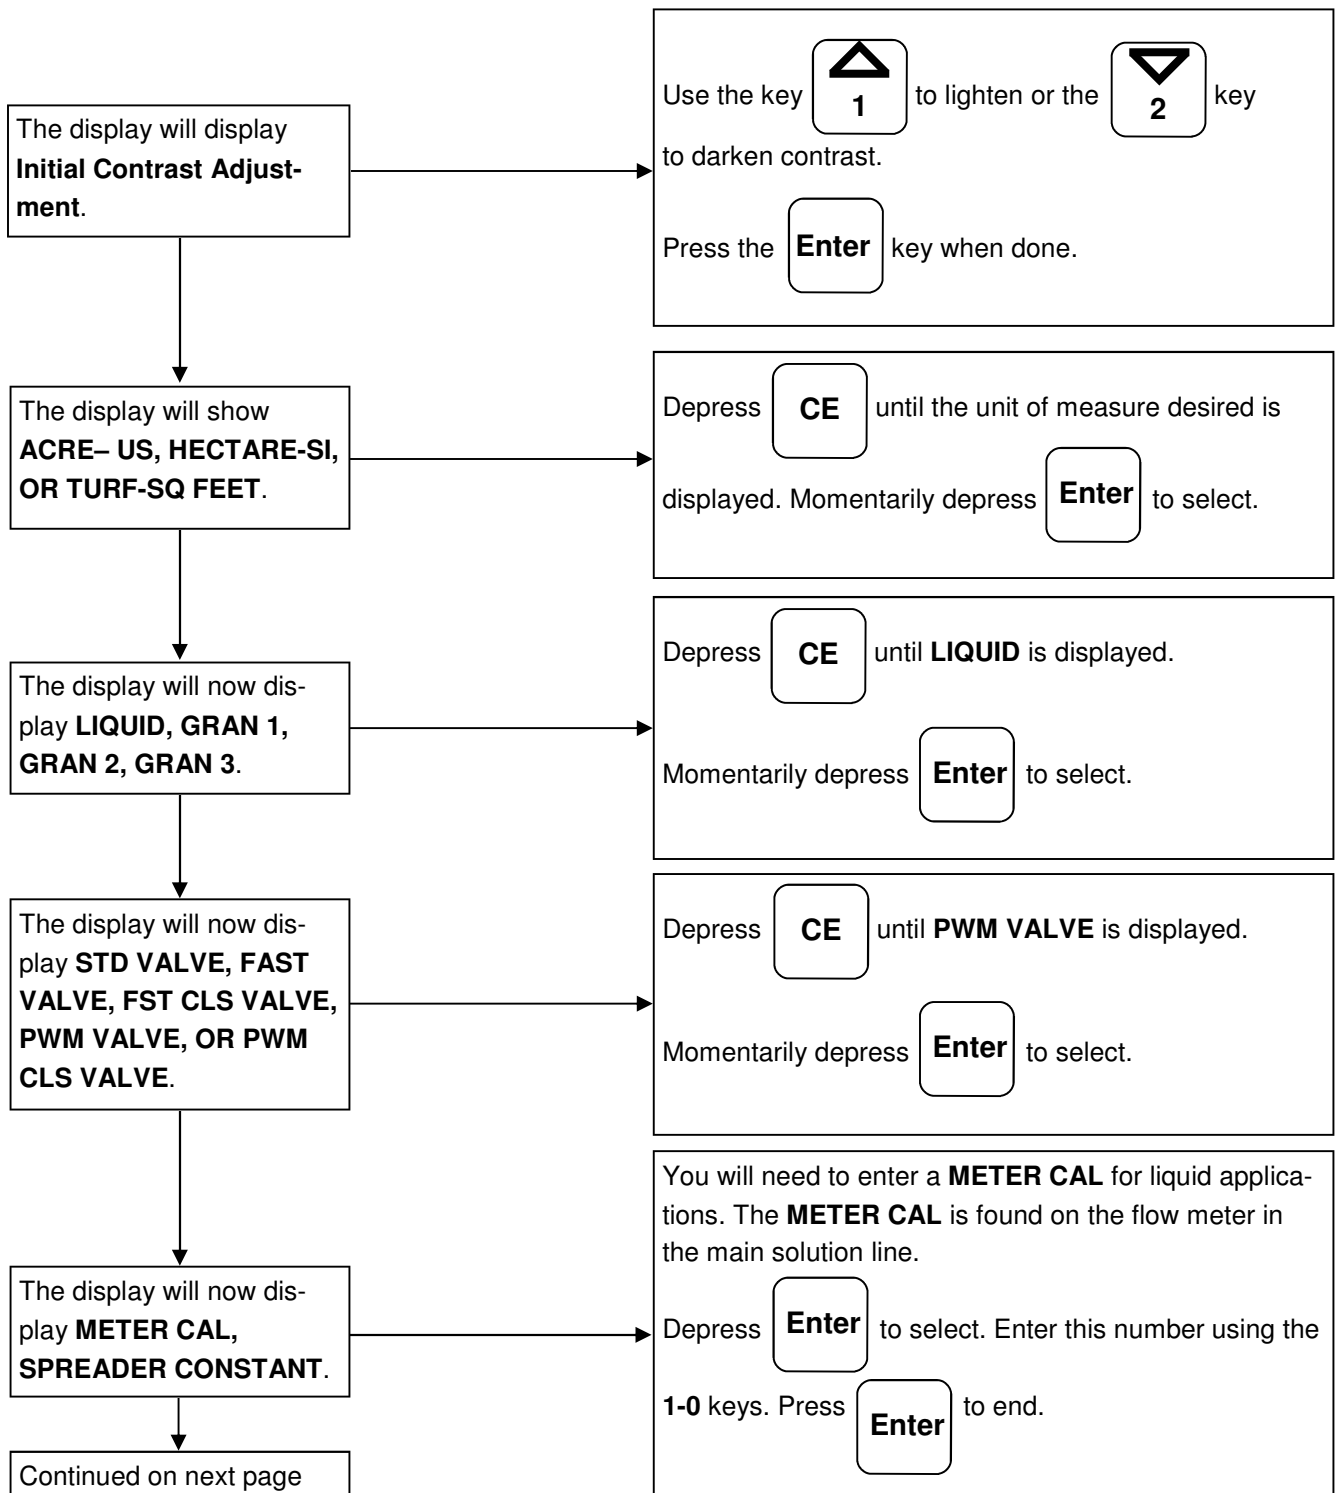

# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GUIDE TO GET STARTED! REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.**

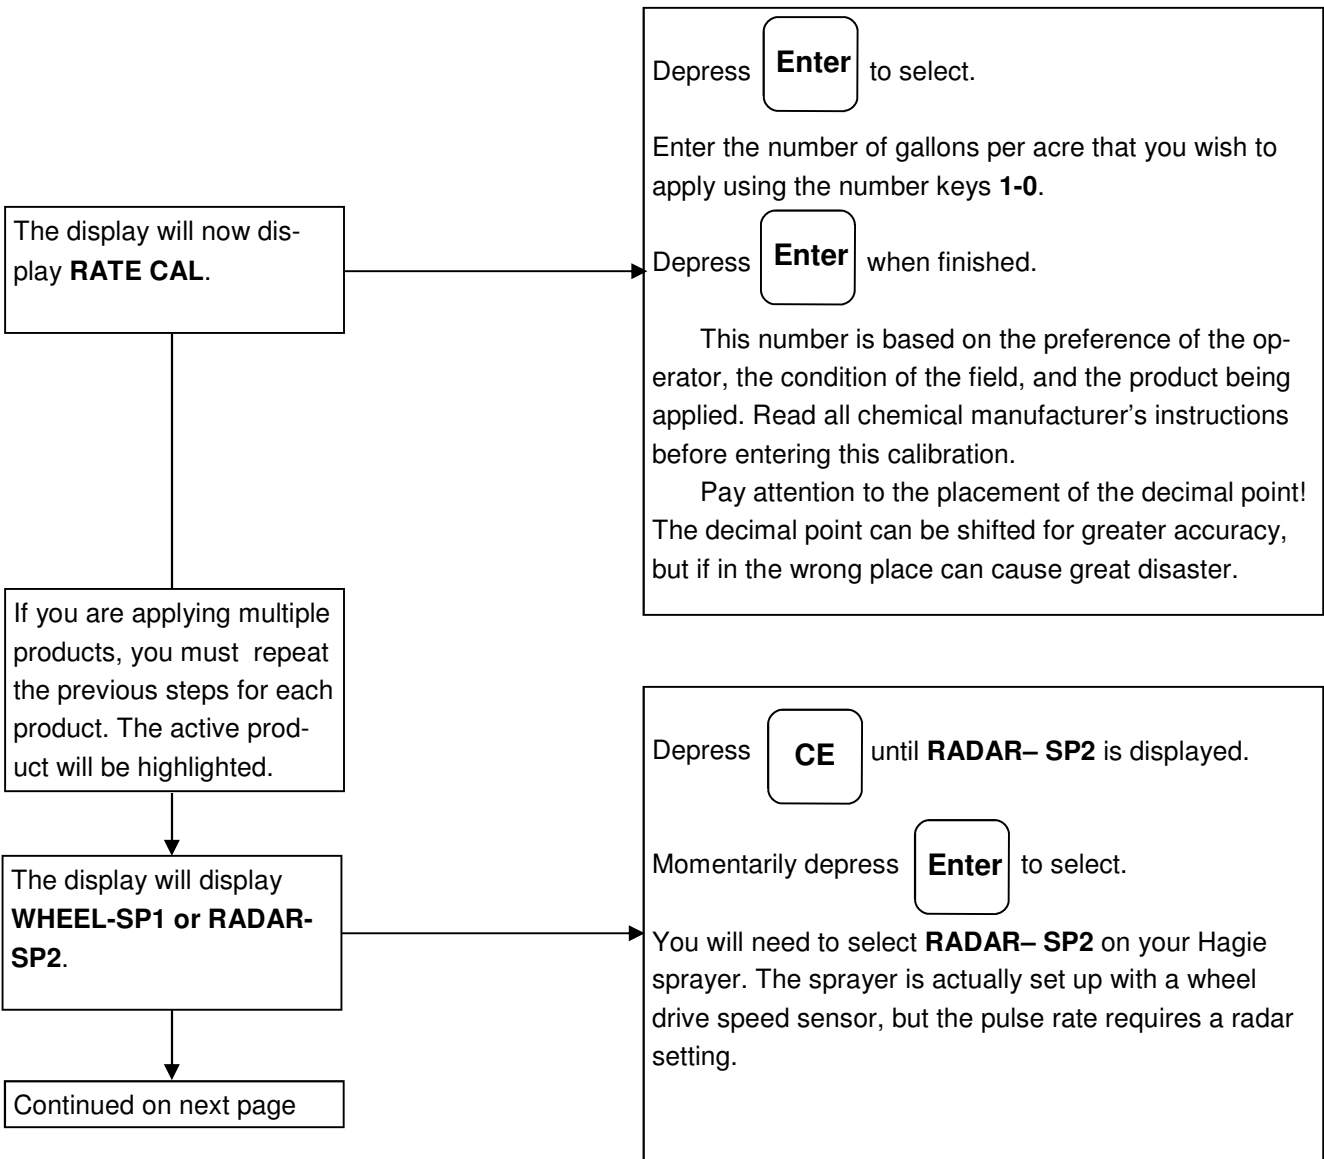

# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GUIDE TO GET STARTED! REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.**

The display will now display **SPEED CAL**.

The initial **SPEED CAL** is dependent on the size of tire installed on your machine. Below is a chart to get you started.

Depress **Enter** to select. Enter the number using the **1-0** keys.

The **SPEED CAL** may need to be refined after the initial programming of the console. Refer to the Raven manual for more information.

The speed that is displayed on the Raven console, if the console is programmed correctly and the **SPEED CAL** is refined as necessary, should closely match the speed displayed on the MDM message center.

Depress **Enter** when finished.

### STS 10 RAVEN CALS

	380/85R46	520/85R46	580/70R38	320/90R50	320/105R54	380/90R54
<b>Fairfield Torque Hubs*</b>	617	690	617	624	690	689
<b>Bonfiglioli Hubs</b>	356	399	356	360	399	398

\*you must know the type of wheel hub on your machine to use these numbers. The serial number tag located on the wheel hub specifies which hub is on your machine.

Continued on next page

# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GUIDE TO GET STARTED! REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.**

Depress the **BOOM CAL 3** to enter the **BOOM CAL** number.



After depressing the **BOOM CAL 3** key, the **1** key and the **2** key will allow you to scroll through the different boom numbers.

To determine the **BOOM CAL** number, you will need to know how the boom is divided (the number of valves and what they control), the spacing option installed, and the number of nozzles per section.

The diagram below shows a dry boom option. (See the next page for a wet boom option diagram.)

The boom is numbered from left to right which is your "BOOM #" and corresponds with the **BOOM SPRAY SECTION** switches on the console.



To get the **BOOM CAL** number, multiply the number of nozzle tips by the spacing in inches.

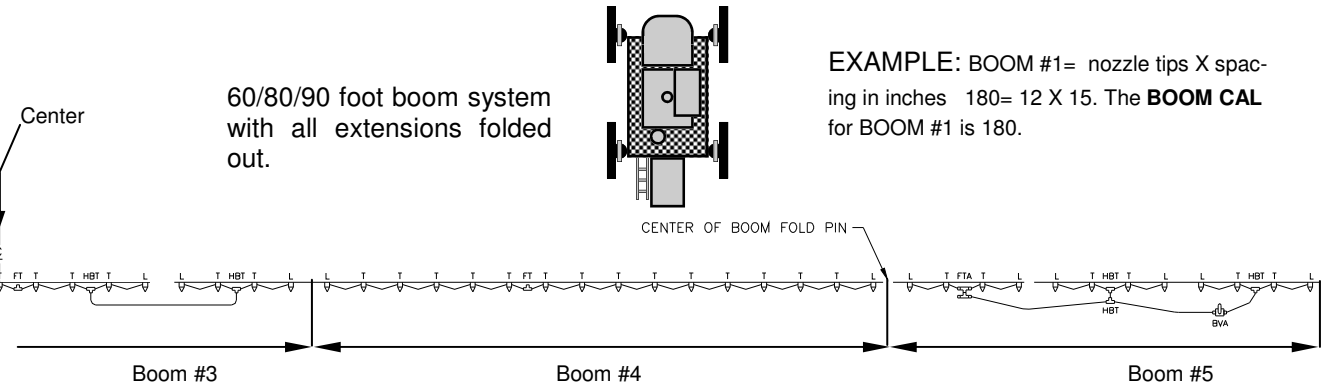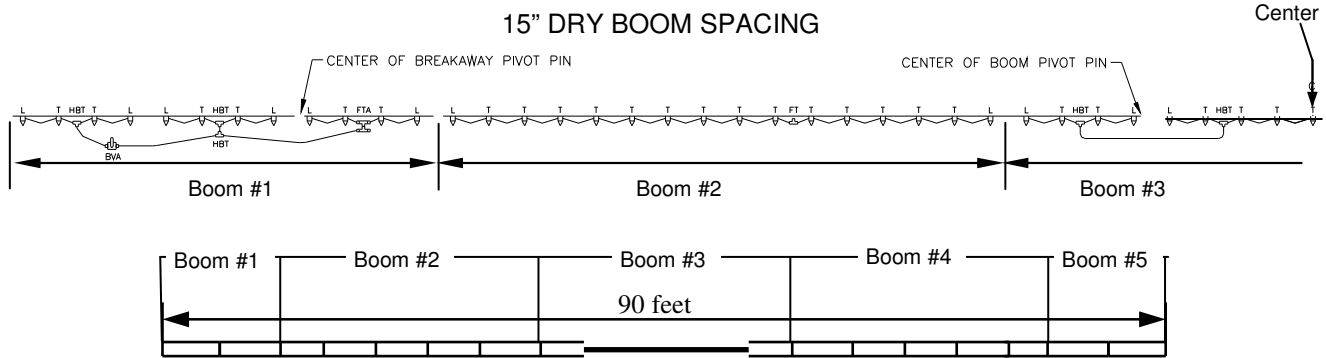

# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GETTING STARTED GUIDE! REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.**

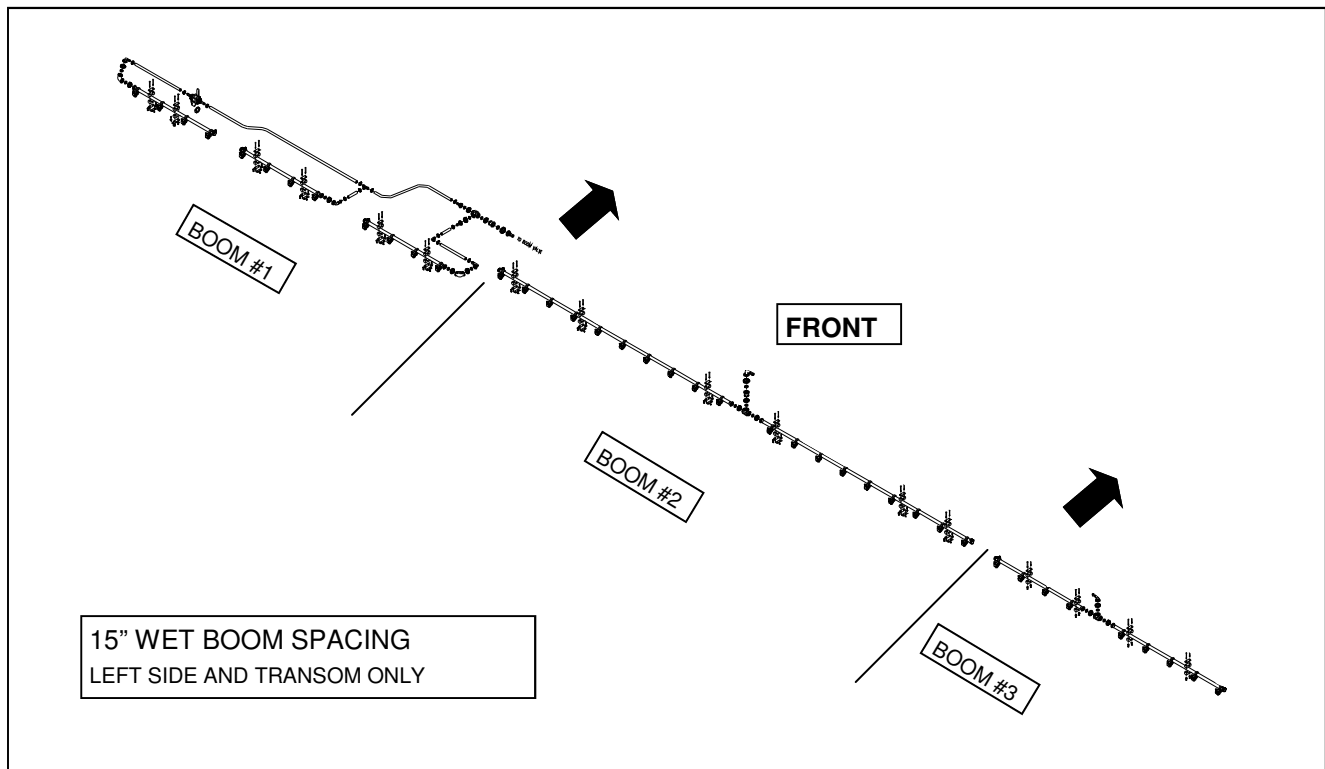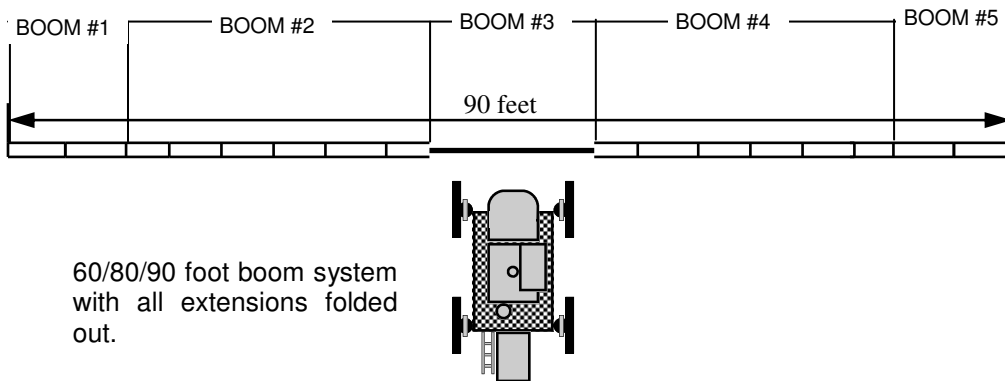


The difference between the dry boom (previous page) and the wet boom is that the dry boom's section 3 includes 4 nozzles on either side of the transom that are not included in the in the same section of a wet boom.

# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GETTING STARTED GUIDE!** REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.

To complete calibration you will need to enter some additional information.

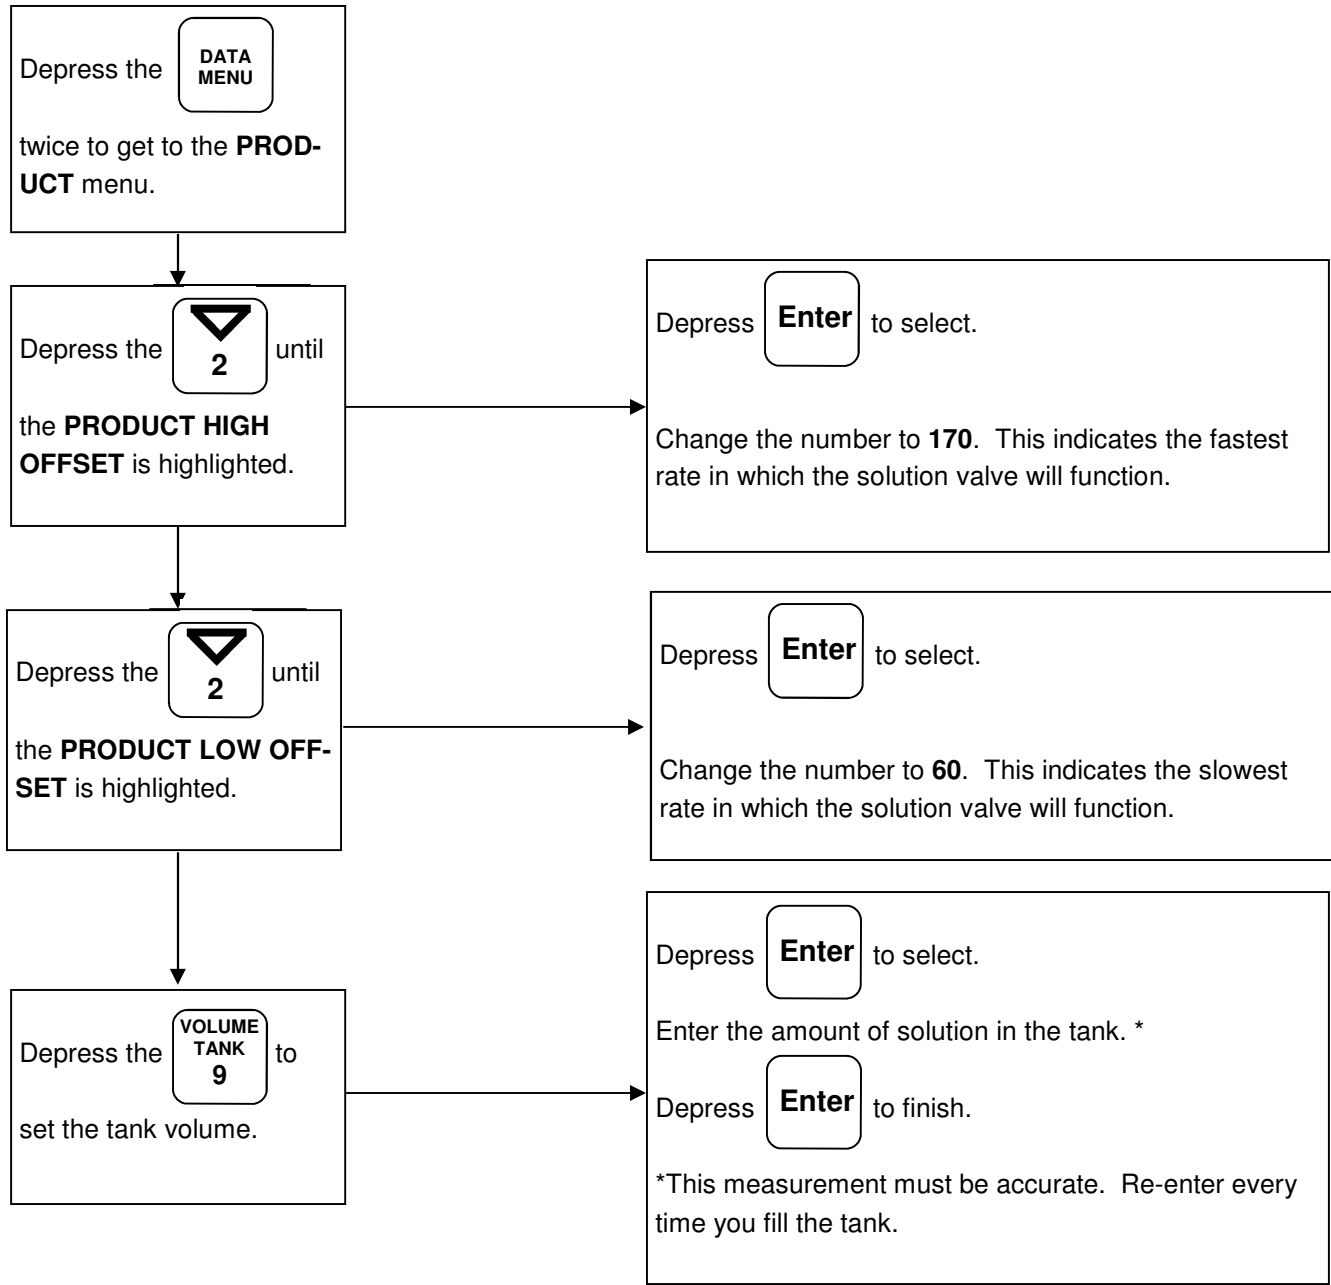

The initial programming is now complete. You may have to refine some of the numbers to better suit your unique situation. This is just a guide to get you started, these numbers may not be specific to your machine. We can not account for every individual situation.

# V. CALIBRATION

---

## B. PROGRAMMING THE RAVEN CONSOLE

**THIS IS JUST A GETTING STARTED GUIDE!** REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.



### **IMPORTANT:**

**DO NOT ADD CHEMICALS UNTIL CALIBRATION IS COMPLETED!**

### **VERIFYING CALIBRATION**

To test your system, fill the solution tanks with clean water. Do not add chemicals until calibration is completed!

With brakes applied, start the engine of the sprayer; throttle the engine to operating speed and remain parked. Turn on the Raven console. Turn on the work mode switch. Turn on the solution tank valve located on the right hand console. Turn on the main solution switch located on the hydrostatic lever. Turn on all boom section solution switches. Make sure there are no leaks and that all nozzles are spraying a desirable pattern. Continue spraying in the stationary position for at least 10 minutes for proper warm up of the sprayer and its system.

Once the system has had an adequate warm up period, you will need to perform a “self test” to simulate speed although the machine will remain stationary. (See the next page on quick instruction for performing a “self test”) Collect one nozzle’s spray for one minute in an adequately sized and marked container.

Verify that the collection equals or is close to the gallons per minute for the nozzle, pressure, speed, gallons per acre, and spacing that you are using.




# V. CALIBRATION

## B. PROGRAMMING THE RAVEN CONSOLE


**THIS IS JUST A GETTING STARTED GUIDE!** REFER TO THE RAVEN INSTALLATION AND OPERATION MANUAL FOR MORE INFORMATION AND TROUBLE SHOOTING.

### Performing a SELF TEST

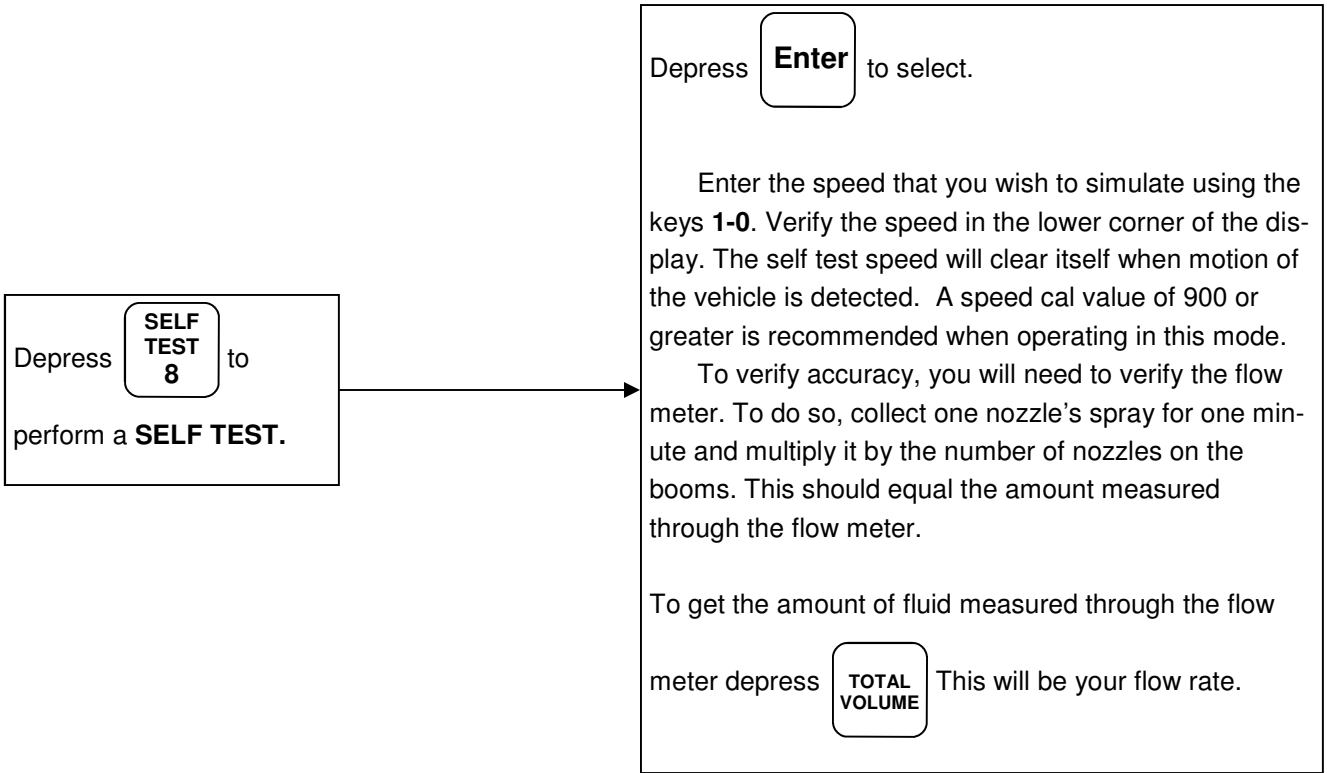


### Changing VALVE CAL

\*The **VALVE CAL** number is preprogrammed as 0043, but can be adjusted to suit your needs. Refer to the Raven manual for instructions.

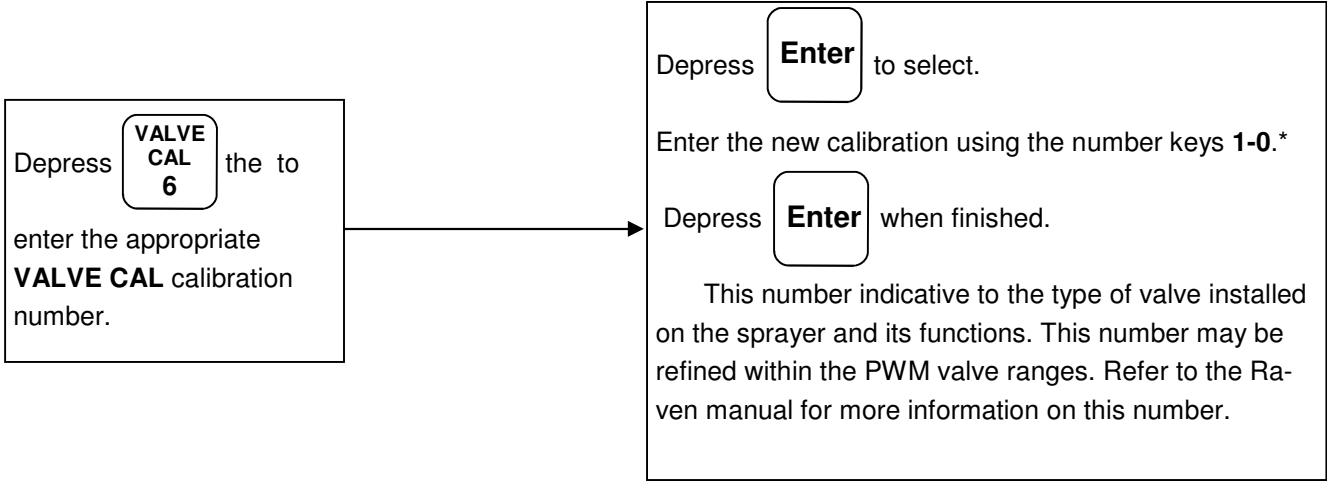

# VI. TRANSPORTING

## A. CRADLING THE BOOMS

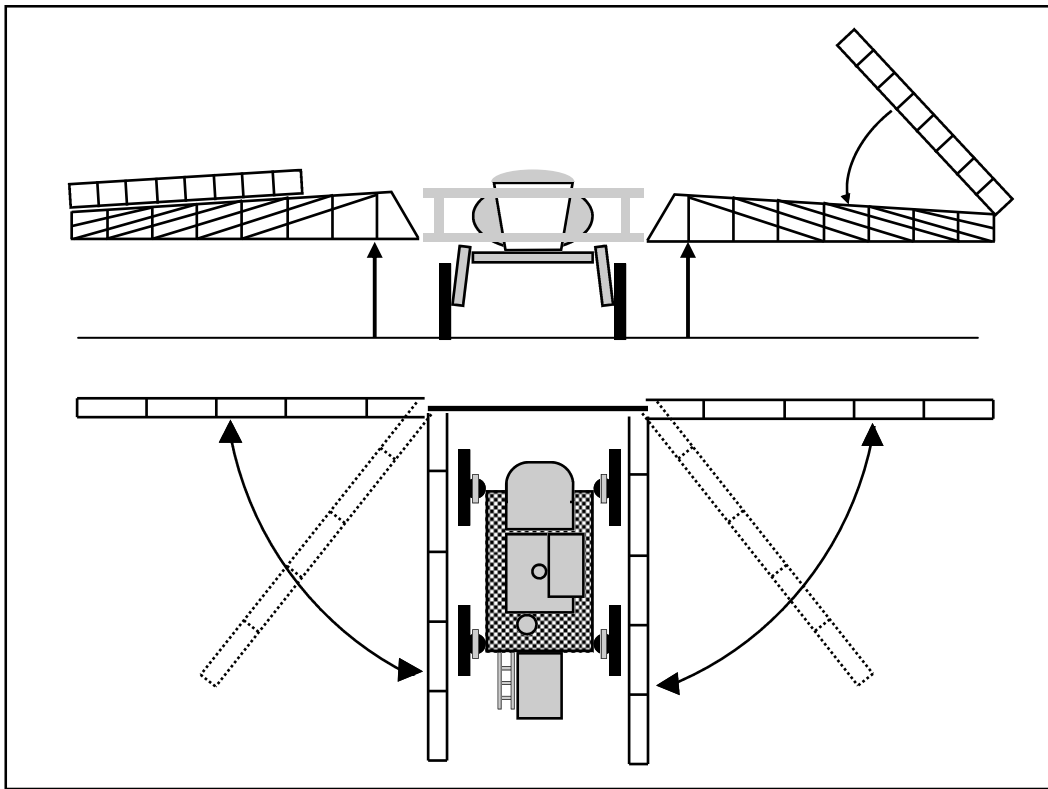

The booms should always be cradled before traveling, transporting, or parking for an extended period of time. **The booms must be folded when cradled.**

To cradle the booms, fold the boom extensions in, raise the transom, and fold the booms in toward the machine. When the boom reaches the last 8-10 degrees of travel, it will automatically slow down to avoid impact with the cradle. Raise each individual boom level until it clears the outer cradle stop (fig. 6.1A-1). Fold the boom in toward the cradle back-stop. When it touches the back-stop, lower the boom level until the full weight of the boom rests in the cradle (fig. 6.1A-2).



FIG 6.1A-1



FIG 6.1A-2

# VI. TRANSPORTING

---

## B. DRIVING

WHEN DRIVING THE SPRAYER ON A PUBLIC ROAD OR HIGHWAY, DRIVE CAREFULLY AND FOLLOW THESE STEPS:

1. Always have the booms in the folded position and cradled when driving or transporting.
2. Flashing hazard/warning lights have been placed on the sprayer to warn other drivers.
3. Know and obey all state laws for driving farm equipment on a public road or highway.
4. Adjust the sprayer's speed to suit the conditions.
5. Slow down and use turn signals before turning.
6. Pull over to the side of the road before stopping.
7. Keep a proper lookout, and maintain control of the sprayer.
8. Do not drive under trees, bridges, wires, or other obstructions unless there is clearance.
9. Use extra care before entering or leaving a public road or highway.
10. A SMV (Slow Moving Vehicle) emblem has been mounted on the sprayer to warn other drivers that one is moving slowly. Keep it properly displayed, unless prohibited by law.
11. Do not drive sprayer at speeds exceeding 20mph with solution in the tank.



## WARNING

**DO NOT** operate the machine at speeds exceeding 20mph with solution in the tank. Operating at speeds exceeding 20mph with a loaded tank may result in tire blow out or wheel hub damage and void the warranty.

**NEVER** operate machine on a public roadway with solution in the tank!



Hagie Manufacturing Company does not recommend any form of transportation other than driving the sprayer. Loading onto a trailer may result in sprayer tip-over.

# VI. TRANSPORTING

## C. TRAILERING

LOADING:



### WARNING

Never load or unload a sprayer with solution in the tanks.



### WARNING

Stopping the sprayer on the trailer ramps may result in sprayer tip-over.

When moving the sprayer onto a trailer, follow these steps completely:

1. Pull the trailer to flat ground. Apply the pulling vehicle's parking brake and turn off the engine. Use tire chocks to keep trailer from moving.
2. Fold in the sprayer's booms and lower to the boom cradle.
3. Lower the trailer ramps and set the ramp spacing for the tread width setting.
4. Get someone to help guide you onto the trailer. Keep everyone a safe distance from the sprayer.
5. Allow enough room between the sprayer and the pulling vehicle for turning.
6. Secure the sprayer to the trailer. See the trailer's owner and operator manual for instructions.
7. Cover or remove the SMV (Slow Moving Vehicle) emblem when traveling over 25 miles per hour.

#### NOTE:

The loaded height and width of the trailer must conform to the law of the state in which it is being used.

#### NOTE:

Be sure to read and understand the trailer's owner and operator manual. Hitch the trailer to the pulling vehicle as shown in the trailer's owner and operator manual.



Hagie Manufacturing Company does not recommend any form of transportation other than driving the sprayer. Loading onto a trailer may result in sprayer tip-over.

# VI. TRANSPORTING

## C. TRAILERING

### UNLOADING:



## WARNING

Never load or unload a sprayer with solution in the tanks.



## WARNING

Stopping the sprayer on the trailer ramps may result in sprayer tip-over.

When moving the sprayer off of a trailer, follow these steps completely:

1. Pull the trailer to flat ground. Apply the pulling vehicle's parking brake and turn off the engine.  
Use tire chocks to keep the trailer from moving.
2. Lower the trailer ramps and set the ramp spacing to the sprayer's tread setting.
3. Release the securing restraints carefully.
4. Get someone to help guide you off the trailer. Keep everyone a safe distance from the sprayer.
5. Uncover or replace the SMV (Slow Moving Vehicle) emblem.

### NOTE:

The loaded height and width of the trailer must conform to the law of the state in which it is being used.

### NOTE:

The Model STS 10 should never be towed under any circumstances.\* Machine damage will occur and void the power train warranty.



\* Contact Hagie Customer Support if towing is necessary.

# VII. SERVICE AND MAINTENANCE

## A. SERVICE POINT QUICK REFERENCE CHART

PAGE #	SERVICE POINT	CLEAN	CHANGE	CHECK	GREASE	DRAIN
7.1B	ENGINE OIL		500HRS	DAILY		
7.3C	ENGINE LUBE FILTER		500HRS			
7.3B	RADIATOR COOLANT		1000HRS	DAILY		
7.3B	COOLANT CONCENTRATION		AS REQ	500HRS		
7.2C	RADIATOR GRILLE SCREEN	AS REQ		DAILY		
7.1F	ENGINE DRIVE BELT		AS REQ	DAILY		
7.1F	A/C COMPRESSOR BELT		AS REQ	250HRS		
7.2B	A/C COMPRESSOR		B			
7.3C	FUEL FILTER (WATER SEPERATOR)		500HRS*			DAILY
7.3C	REMOTE FUEL FILTER		500HRS*			
7.3C	IN-LINE FUEL STRAINER		500HRS*			
7.1C	AIR INTAKE FILTER	I	C			
7.1C	FILTER MINDER®		D	DAILY		
7.1B	HYDRAULIC RESERVIOR OIL LEVEL		500HRS	DAILY		
7.2C	HYDRAULIC RETURN/SUCTION FILTER		E*			
7.2C	HYDRAULIC SUCTION STRAINER	500HRS				
7.4C	SOLUTION LINE STRAINER	AS REQ		DAILY		
7.2B	WHEEL HUB OIL LEVEL		F*	100HRS		
7.1I	WET TANK/AIR TANK					A
7.1I	AIR DRYER CARTRIDGE		1000HRS	50HRS		
7.1D	FRONT LEG STRG ZERKS (2- 1EA LEG)				50HRS	
7.1D	ALL OTHER GREASE ZERKS (19 PLACES)				50HRS	
7.2G	TREAD ADJUSTMENT BEARING TORQUE		AS REQ	J		
7.1E	BATTERIES	100HRS	AS REQ	DAILY		
7.1G	LUG NUT TORQUE			G		
7.1I	TIRE PRESSURE			50HRS		
7.4C	FRESH AIR (PAPER) CAB FILTER	50HRS	AS REQ			
7.4C	CHARCOAL CAB FILTER		AS REQ			
7.1J	SPRAY NOZZLE DIAPHRAGMS & TIPS		1000HRS	500HRS*		
7.1I	AIRBAGS (VISUALLY)			50HRS		

- \*AT THE BEGINNING OF THE SEASON (YEARLY) OR AS REQUIRED, WHICHEVER COMES FIRST
- NOTE A: CHECK FOR EXCESSIVE MOISTURE
- NOTE B: CHARGE AS REQ; USE PROPER EQUIPMENT
- NOTE C: FOLLOW FILTER MINDER READINGS
- NOTE D: RESET EACH TIME YOU SERVICE AIR FILTER

- NOTE E: 1ST 50HRS, THEN 250HRS THEREAFTER
- NOTE F: 1ST 50HRS, THEN YEARLY
- NOTE G: IMMEDIATELY, THEN 50HRS THEREAFTER
- NOTE I: NOT RECOMMENDED
- NOTE J: VISUALLY CHECK THE BOLTS EVERY 50 HOURS, TORQUE CHECK THEM EVERY 100 HOURS

# VII. SERVICE AND MAINTENANCE

## A. SERVICE POINT QUICK REFERENCE CHART

### SERVICE INTERVALS

#### Initial checks after receiving machine

IMMEDIATELY  then 

- 1) Check lug nut torque, then every 50 hours (page 7.1G)

FIRST 50 HOURS  then 

- 1) Change wheel hub oil, again at 100 hours, and then every 500 hours thereafter (page 7.2B)
- 2) Change hydraulic return/suction filter, then every 250 hours thereafter (page 7.2C )

Daily 

- 1) Check engine oil (page 7.1B)
- 2) Check and drain fuel filter (water separator) (page 7.3C)
- 3) Check radiator coolant level (page 7.3B)
- 4) Check engine drive belt (page 7.1F)
- 5) Check Filter Minder<sup>®</sup> (page 7.1C)
- 6) Check hydraulic oil reservoir level (page 7.1B)
- 7) Check solution line strainer (page 7.3C)
- 8) Drain wet tank and air tank (page 7.1I)
- 9) Check batteries (page 7.1E)
- 10) Check radiator grille screen (7.2C)

# VII. SERVICE AND MAINTENANCE

---

## A. SERVICE POINT QUICK REFERENCE CHART

### As Required



- 1) Change coolant concentration (page 7.3B)
- 2) Clean radiator grille screen (page 7.2C)
- 3) Change engine drive belt (page 7.1F)
- 4) Change A/C compressor belt (page 7.1F)
- 5) Charge A/C compressor (page 7.2B)
- 6) Change fuel filter (water separator) (page 7.3C)
- 7) Change in-line fuel strainer and remote fuel filter (page 7.3C)
- 8) Clean solution line strainer (page 7.4C)
- 9) Change batteries (page 7.1E)
- 10) Change paper cab filter (page 7.4C)
- 11) Change charcoal cab filter (page 7.4C)
- 12) Check and replace spray nozzle diaphragms and spray tip (page 7.1J)

### Every 50 HOURS



- 1) Check tire pressure (page 7.1I)
- 2) Check lug nut torque (page 7.1G)
- 3) Visually inspect tread adjust bearing bolts (page 7.2G)
- 4) Grease all lubrication zerks (page 7.1D)
- 5) Knock particles from fresh air intake cab filter (page 7.4C)
- 6) Check air dryer cartridge (page 7.1I)

### Every 100 HOURS



- 1) Check wheel hub oil level (page 7.2B)
- 2) Clean batteries (page 7.1E)
- 3) Check tread adjust bearing bolt torque (page 7.2G)





# VII. SERVICE AND MAINTENANCE

## A. SERVICE POINT QUICK REFERENCE CHART

### Every 250 HOURS

- 1) Check A/C compressor belt (page 7.1F)
- 2) Change hydrostatic charge pressure and suction filter (page 7.2C)

### Every 500 HOURS or

- 1) Check coolant concentration (page 7.3B)
- 2) Change fuel filter (water separator) (page 7.3C)
- 3) Change hydraulic reservoir oil (page 7.1B)
- 4) Change wheel hub oil (page 7.2B)
- 5) Check spray nozzle diaphragms and spray tips (page 7.1J)
- 6) Change engine oil (page 7.1B) and lube filter (7.3C)
- 7) Change the in-line fuel strainer (page 7.3C)
- 8) Change the remote fuel filter (page 7.3C)

### Every 1000 HOURS or

- 1) Change radiator coolant (page 7.3B)
- 2) Change air dryer cartridge (page 7.1I)
- 3) Change spray nozzles and tips (page 7.1J)

# VII. SERVICE AND MAINTENANCE

## A. SERVICE POINT QUICK REFERENCE CHART

### DAILY INSPECTION

Inspection Point	Action (if necessary)
<b>Check</b>	
Engine oil level .....	Add oil
Radiator coolant level.....	Add antifreeze solution
Engine drive belt.....	Replace belt
Filter Minder® .....	Replace air filter element/ reset gauge
Hydraulic reservoir oil level.....	Add hydraulic oil
Solution line strainer .....	Remove and clean
Batteries .....	Clean and/or tighten
Radiator grille screen .....	Clean
Look for loose or missing items such as shields.....	Tighten or replace
Look for any fluid leaks pooled on machine or ground .....	Determine cause and correct

### Drain

Fuel/water separator .....	See page 7.3C
Wet tank/air tank .....	See page 7.11

# VII. SERVICE AND MAINTENANCE

## B. FLUIDS

### ENGINE OIL

**OIL LEVEL**-The engine oil level dipstick is located on the left-hand side of the engine (fig. 7.1B-1). Never operate the engine with the oil level below the “L” (low) mark or above the “H” (high) mark. Wait at least five minutes after shutting off the engine to check the oil level, this allows the oil to drain to the oil pan. Check the engine oil level daily.

**CAPACITY**- Low to high mark capacity is 2.0 quarts. Engine oil pan capacity is 17 quarts. Change every 500 hours. Refill with 15W40 diesel engine oil.

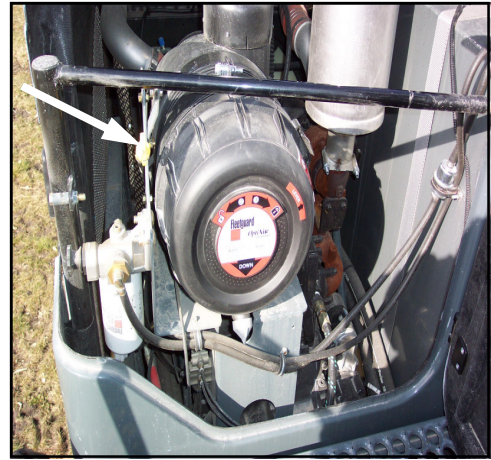


FIG 7.1B-1

#### NOTE:

The engine must be level when checking the oil level to make sure the measurement is correct.

### HYDRAULIC OIL RESERVIOR

**OIL LEVEL**- Check the sight gauge level on the hydraulic oil reservoir (fig. 7.1B-2) daily. Add just enough fluid so the level is in the center of the sight gauge. Always check the hydraulic oil level when it is cool. Hydraulic oil will expand when heated.

**TYPE**- Premium hydraulic fluids containing high quality rust/oxidation/ and foam inhibitors are required. Hydraulic oil must conform to one of the following types: anti-wear hydraulic oil, type F automatic transmission fluid, or agricultural hydraulic transmission fluid. Replace the oil in the hydraulic reservoir at 500 hours or at the beginning of each spraying season, whichever comes first.



FIG 7.1B-2

#### NOTE:

**CLEANLINESS STANDARD:** Always make sure area is clean before changing filter or hydraulic oil.

# VII. SERVICE AND MAINTENANCE

## B. FLUIDS

### WHEEL HUB OIL

#### BONFIGLIOLI

**OIL LEVEL**— Each wheel hub should maintain a proper oil level at all times. Less than that would limit lubrication and over full would cause overheating and damage. To check the oil level, position the hub so one of the face plugs is positioned at 12 O'clock (fig. 7.2B-1, item A). The other plug will be either at 8 O'clock (fig. 7.2B-1, item B). (When positioned correctly the arrows in the center of the hub should make an "L".) Remove the lower plug; if no oil comes out, the oil level is too low. Check wheel hub oil level every 100 hours.

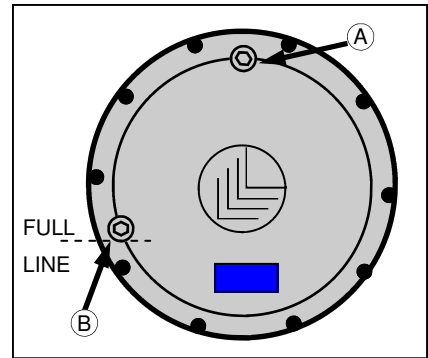


FIG 7.2B-1

If SAE 80W/90 or SAE 85W/140 with EP features oil is needed, remove the top plug also and fill just until it starts to come out the lower hole (approximately 40 ounces). With the oil at a satisfactory level, re-install plugs.

**CHANGE**— The wheel hub oil should be changed after the first 50 hours of field operation. Subsequently, it should be changed every 500 hours or yearly (whichever comes first).

To change the wheel hub oil, position the plugs so that one is at the 6 O'clock position, and the other is between the 2 and 3 O'clock positions. Remove the bottom plug to drain the oil. Once all of the oil is drained, rotate the hub so that the plugs are in the filling position (fig. 7.2B-1). Refill wheel hub with gear oil as described above.

#### FAIRFIELD TORQUE HUB®

**OIL LEVEL**— Each wheel hub should maintain a level of half full at all times. Less than that would limit lubrication and over that would cause overheating and damage. To check the oil level position the hub so that there is a plug at the 12 O'clock position (fig. 7.2B-2, item A) and another at the 3 or 9 O'clock position (fig. 7.2B-2, item B). Remove the lower plug (fig. 7.2B-2, item B), if no oil comes out, the oil level is too low. Check the oil level every 100 hours.

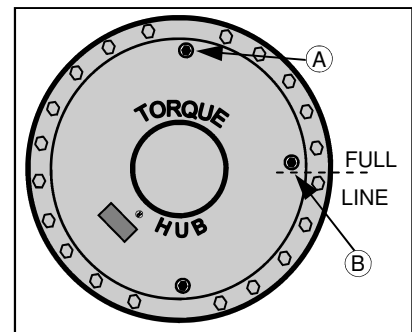


FIG 7.2B-2

If SAE 80W/90 or SAE 85W/140 with EP features oil is needed, remove the top plug and fill just until the oil starts to come out the lower hole (approximately 84 ounces on a hub without brakes or 62 ounces on a hub with brakes). With the oil at a satisfactory level, re-install plugs.

**CHANGE**— The wheel hub oil should be changed after the first 50 hours of field operation. Subsequently, it should be changed every 500 hours or yearly (whichever comes first). To change the wheel hub oil, position the plugs so that one is at the 6 O'clock position, and the other is at the 3 or 9 O'clock position. Remove the bottom plug to drain the oil. Once all of the oil is drained, re-install the bottom plug and remove the top plug. Re-fill wheel hub with gear oil as described above.

**GENERAL MAINTENANCE (both hub types)**— If your sprayer is going to sit for an extended period of time, occasionally rotate the hubs by driving the sprayer forward and backward at least 1/2 of a tire rotation to adequately coat all internal hub parts. This will prevent rusting if moisture inadvertently entered the hub during an oil change. Failure to rotate the hub and disperse oil may cause rusting and internal damage to the hub.

# VII. SERVICE AND MAINTENANCE

## B. FLUIDS

### COOLING SYSTEM

**COOLANT TYPE**– Your cooling system should always be sufficiently charged with an adequate mixture of antifreeze and water, regardless of the climate, in order to maintain a broad operating temperature range. Your cooling system has been factory charged with an ethylene-glycol based antifreeze.



FIG 7.3B-1

**CHECKING CONCENTRATION**– The radiator cap is located toward the rear of the engine compartment (fig. 7.3B-1). Never remove the cap from a hot engine. Always allow the engine to cool before servicing the cooling system.

A 50/50 antifreeze/water mixture is a conservative mixture which allows good protection against both overheating and freezing. If a stronger antifreeze mixture is required, be sure not to exceed the engine manufacturer's guidelines for antifreeze mixing. The table in figure 7.3B-2 gives a few examples of ethylene-glycol antifreeze/water mixture protection values. Consult the engine manufacturer's handbook for further information.

Ethylene Glycol		
40%	-23°C	-10°F
50%	-37°C	-34°F
60%	-54°C	-65°F

FIG 7.3B-2

Concentration should be checked every 500 hours or at the beginning of each winter, whichever comes first. A refractometer should be used to check concentration, "floating ball" type density testers are not accurate enough for use with heavy duty diesel cooling systems.

**CHANGING COOLANT**– Your coolant should periodically be changed to eliminate the buildup of harmful chemicals. Drain and replace the coolant every other spraying season or 1,000 hours of service, whichever comes first. Refill only with soft water because hard water contains minerals which break down the anti-corrosion properties of antifreeze.

### WINDSHIELD WASHER FLUID

**RESERVIOR**– The windshield washer reservoir is located on the rear of the cab (fig. 7.3B-2). Check it occasionally and refill it with non-refreezing automotive windshield cleaner as required.



FIG 7.3B-2

# VII. SERVICE AND MAINTENANCE

## B. FLUIDS


### FUEL

**TYPE**– No. 2 diesel fuel is recommended for the best economy and performance under most operating conditions. In operating conditions under 32°F, use a blend of No. 1 and No. 2 diesel fuel. The addition of No. 1 diesel fuel may cause loss of power and/or fuel economy.

**STORING**– See section 6 on storage.

**REFUELING**– Always turn off the engine and allow it to cool before refueling. Never smoke while fueling. Keep a fire extinguisher within reach while refueling.

The fuel cell on a STS holds 150 gallons– do not fill it completely: fuel can expand and run over. Wipe up all spilled fuel and clean with detergent and water before starting the engine.

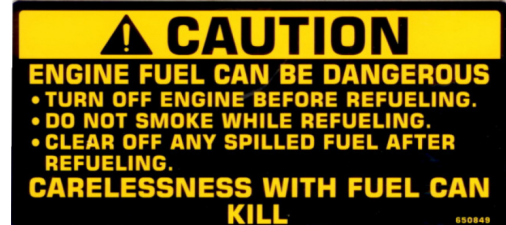

### AIR CONDITIONING

**TYPE**– The cab on your sprayer is equipped with a R-134a air conditioning system (fig. 7.4B-2).

**RECHARGING**– Recharge it only with R-134a refrigerant. If your air conditioning system is mistakenly charged with R-12 refrigerant, serious problems, such as compressor seizure, may result. Therefore, confirm refrigerant before recharging system.

If you do not have the proper recharging equipment, it is recommended that you allow an independent service agent service your air conditioning system.

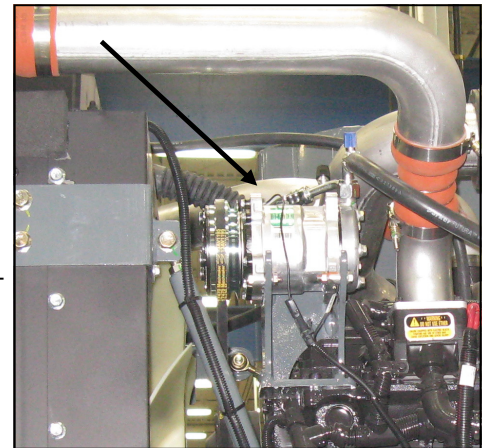


FIG 7.4B-2

### FLUID CAPACITIES AND TYPES

Engine oil pan, including filter.....17 quarts SAE 15W-40	Rear (2).....	approx. 62 oz. ea. EP-90
Engine oil dipstick, L-H mark .....2 quarts	Bonfiglioli wheel hub (4).....	approx. 40 oz. ea
Hydraulic oil reservoir .....32 gallons anti-wear hydraulic oil	Engine cooling system .....	18 gallons ethylene glycol
Hydraulic system (reservoir, lines, filter, cooler, etc) .....55 gallons	Fuel cell .....	150 gallons No. 1 or 2 diesel
Wheel hub oil level		
Fairfield Torque Hub ® oil level Front (2).....		approx. 84 oz. ea. EP-90

# VII. SERVICE AND MAINTENANCE

## C. FILTERS

### ENGINE AIR INTAKE

**LOCATION**– The engine air intake filter is accessed by opening the door on the front of the engine compartment (fig. 7.1C-1).

**REMOVAL**– The engine air intake filter element should only be removed if it is going to be replaced. After loosening the air cleaner clamp and removing the end cap, carefully remove the filter so as to not knock any dust off the filter and into the air intake passage (fig. 7.1C-2). The secondary filter does not need to be replaced if the primary is intact.

**REPLACEMENT**– Your sprayer is equipped with a Filter Minder® to notify you of filter element efficiency. Follow its guidelines for servicing (see below). At appropriate service time, install the new element carefully to ensure proper sealing.

**CLEANING**– It is not recommended to clean the air intake filter element. However, a clean damp cloth should be used to wipe away dust and foreign material from the air cleaner housing.



FIG 7.1C-1

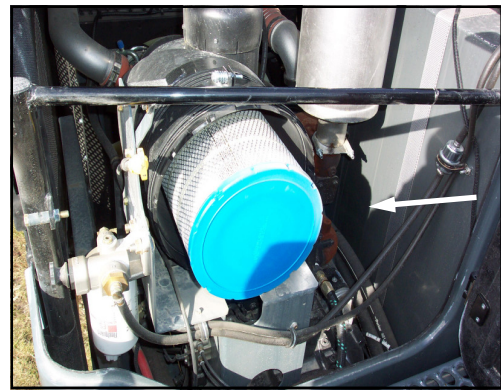


FIG 7.1C-2

#### NOTE:

Do not tap filter to remove dust. Engine damage may occur due to crushed filter caused by tapping. If Filter Minder® indicates restriction, remove old filter, discard and install new filter only.

### FILTER MINDER®

**LOCATION**– The Filter Minder® is an air restriction monitoring system that progressively and constantly indicates how much air filter capacity remains. It is mounted on the foamer bracket (fig. 7.1C-3).

Check its reading daily.

#### SERVICE–

Service the air cleaner when the Filter Minder® reads 20" (80% of dirt holding capacity).

#### NOTE:

Service the air cleaner before the yellow indicator reaches the red line of the Filter Minder®.



FIG 7.1C-3

# VII. SERVICE AND MAINTENANCE

## C. FILTERS

**RADIATOR SCREEN**– In order to maintain air flow through the engine cooling system’s radiator, oil cooler, and air conditioning condenser, the cooling air intake grille (fig. 7.2C-1) must be inspected often and periodically cleaned.

When the engine hood has been opened for servicing, use compressed air to dislodge most large trash and dirt. Blow out the screen AWAY from the machine. Water from a pressurized hose may also be used, or if necessary the screen may be soaked with soapy water and scrubbed gently with a brush.



**FIG 7.2C-1**


### NOTE:

When cleaning cooling fins of the radiator, oil cooler, or A/C condenser with compressed air or water, be careful not to damage cooling fins which may impair cooling capabilities.

### NOTE:

Failure to keep cooling systems clean can cause over heating and damage to the hydrostatic system and/or engine.

## HYDRAULIC FILTER AND STRAINERS

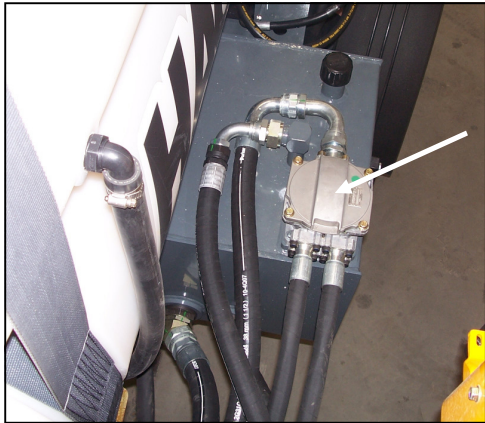

**FIG 7.2C-2**


**RETURN FLITER**- Remove and install a new 10 micron rated return filter (fig. 7.2C-2) at the end of the first 50 hours of use, subsequently replace the filter every 250 hours, or once a year, whichever comes first.

**SUCTION STRAINERS**– The suction strainers located inside of the tank should be examined for wear and blockage when the tank is empty for fluid service (see page 7.1B).

**FILL SCREEN**-Replace the fill screen immediately if there is any signs of a tear or break. The screen is the first defense against

foreign materials entering the tank.

**STRAINER BASKET**– There is a strainer basket in the top fill opening of the solution tank (fig. 7.2C-3). Check the basket for any debris before using the opening to fill the tank. Do not remove the strainer except for cleaning.

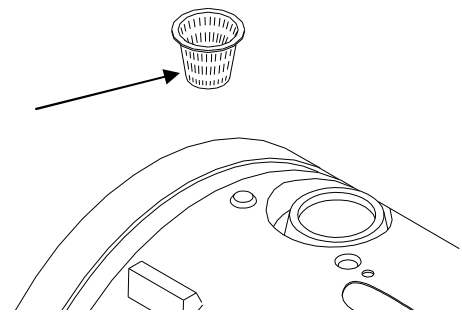

**FIG 7.2C-3**



# VII. SERVICE AND MAINTENANCE

## C. FILTERS

**ENGINE LUBE FILTER-** The engine lube filter (oil filter) (fig. 7.3C-1) should be changed every 500 hours or anytime that the oil is changed.

The filter is located under the service platform, behind the right rear wheel. It is accessible from the ground level.



FIG 7.3C-1

### FUEL FILTERS AND STRAINERS

**REMOTE FUEL FILTER-** (fig. 7.3C-2, item 1) Located near the air intake filter, this filter should be replaced every 500HRS or once a year, whichever comes first.



FIG 7.3C-2

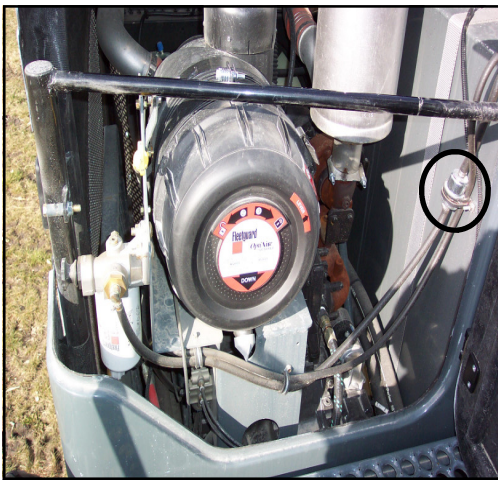


FIG 7.3C-3

**PRIMARY FUEL FILTER (WATER SEPERATOR)-** (fig. 7.3C-4) Located on the right side of the engine, this filter should be drained daily of the water and other deposits. Replace the filter every 500 hours or as necessary.



FIG 7.3C-4

**IN LINE STRAINER-** (fig. 7.3C-3) Located on the right hand side of the engine, above the air filter. Note the direction of the fuel flow arrow when replacing.

# VII. SERVICE AND MAINTENANCE

## C. FILTERS

### OTHER STRAINERS

**POLY RINSE TANK STRAINER**– If you have the pressure washer option on your sprayer you will have a 100 mesh strainer in the line from the rinse tank to the pressure washer (refer to Hagie STS 10 Parts Manual for location). Check the strainer for blockage if you are unable to get pressure.



FIG 7.4C-1

**RINSE STRAINER**– The poly tanks have a 150PSI (32 mesh) strainer in the line from the rinse valve to the solution tank rinse. If you are experiencing issues with pressure through your rinse cycle, you may check this strainer.

**SOLUTION LINE “Y” STRAINER**– To help maintain consistent application rates, check the solution line strainer (fig. 7.4C-1) daily for blockage. Clean the strainer screen as required. Be sure to wear appropriate clothing while removing and cleaning the line strainer screen. Confirm the gasket is in place before re-installing the screen.

**Check all strainers occasionally for blockage and replace them if they show signs of deterioration. Refer to the Hagie Parts Manual for replacement part numbers and specific locations.**

### FRESH AIR CAB FILTERS

**PAPER FILTER**– The paper filter should be cleaned every 50 hours, or more often if necessary. Remove the paper element and gently tap it against a flat surface. Direct low pressure compressed air through the filter to remove larger particles. Replace the paper filter if necessary.

**CHARCOAL FILTER**– Remove and replace the charcoal filter at the first signs of chemical odor entering the cab.



FIG 7.4C-3

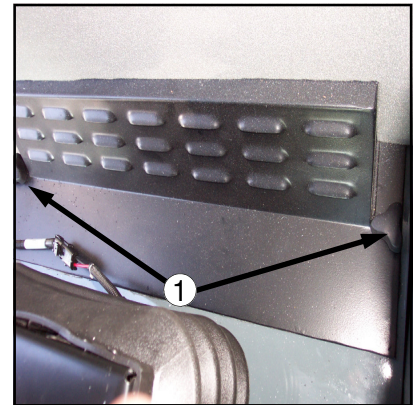


FIG 7.4C-2

To remove, clean, or replace the filters in the cab, undo the thumb screws on the cover (figure 7.4C-2, item 1) and carefully remove the filters. Wipe the cover clean with a damp cloth and allow to dry before replacing.

Figure 7.4C-3 shows the air tube that allows fresh air into the cab. Check it often for any material blocking the opening.

# VII. SERVICE AND MAINTENANCE

## D. LUBRICATION

**LEGS AND STEERING**– The front legs have a grease zerk in the tie rod ball (figure 7.1D-1, item 1) that needs greased every 50 hours or weekly.



FIG. 7.1D-2

Both the front and rear legs have two grease zerks, one in each of the tower bearings (figure 7.1D-1, item 2) that must be greased every 50 hours or as necessary. There is a zerk in the collar (figure 7.1D-1, item 3) that also needs greased every 50 hours or as necessary.

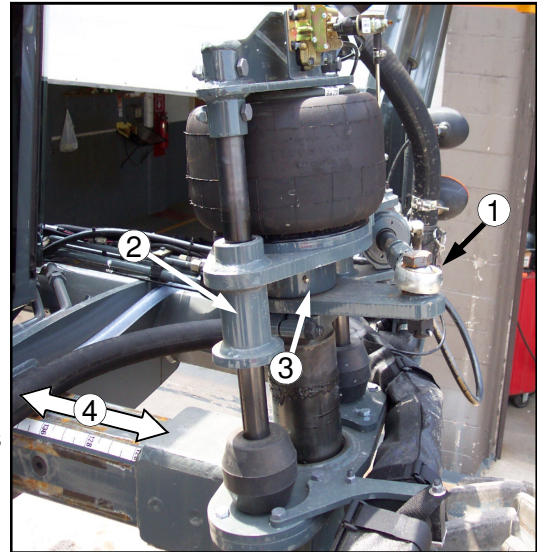


FIG. 7.1D-1

The slide path of the tread adjust (figure 7.1D-1, item 4) should be greased every 50 hours depending on the amount of usage.

Each leg also has a grease zerk on the inside of the leg (fig. 7.1D-2) that should be greased every 50 hours. Tall crops may wipe away much of the grease, be sure to check each leg daily.

### NOTE:

Failure to properly lube pivot points may result in unnecessary wear and damage.

### NOTE:

**DO NOT** use air-type grease gun to lube leg towers, may result in seal distortion.

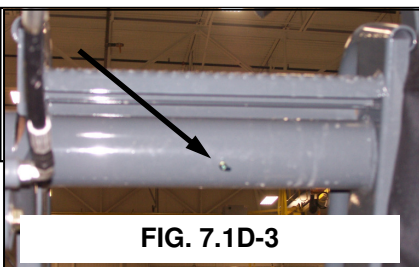


FIG. 7.1D-3

**LADDER**– The ladder pivot tube (figure 7.D-3) has a grease zerk that needs to be lubed every 50 hours or as needed.

**TRANSOM PIVOT TUBES**– The transom pivot tube that attaches the booms to the transom has a grease zerk that should be greased every 50 hours or as needed depending on the amount of use.

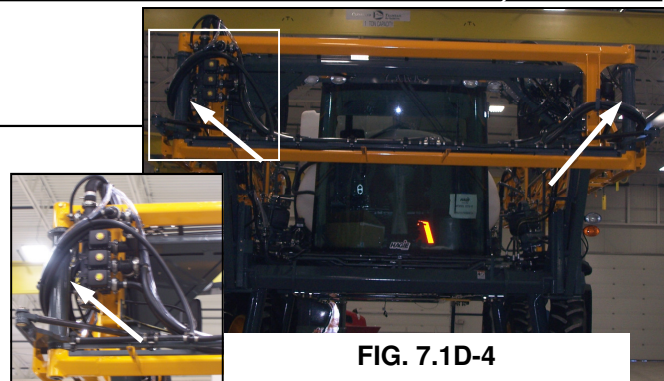


FIG. 7.1D-4

# VII. SERVICE AND MAINTENANCE

## E. ELECTRICAL

### BATTERIES

**SERVICE ACCESS**– The batteries are located at the rear of the machine behind the battery service access panel. (fig. 7.1E-1)

**CLEANING**– Disconnect the battery cables from the batteries. Remove all corrosion with a wire brush or battery post brush. Wash the cable connections and battery posts with a weak solution of baking soda or ammonia. Apply dielectric or grease to prevent further corrosion. Reconnect the cables to the batteries making sure that they are tight. Clean every 100 hours.

**CHARGING**– To ease charging of the batteries, there is a set of auxiliary battery charging posts on the rear of the sprayer's mainframe (fig. 7.1E-2). Connect your charging cables to them just as you would to the battery, positive cable to positive terminal, and negative cable to negative terminal. Keep these terminals clean and their caps in place when not in use.



FIG 7.1E-1

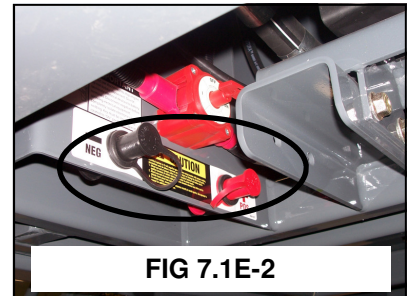


FIG 7.1E-2



## CAUTION

**Batteries contain sulfuric acid. Avoid contact with skin, eyes, or clothing. Do not inhale fumes or ingest liquid. Batteries contain gases which can explode. Keep sparks and flame away while servicing.**

Install replacement batteries with ratings equivalent to the specs below.

**VOLTAGE** ..... 12 V (only)

**CCA (30 sec. at 0° F)**..... 950

**RESERVE CAPACITY** ..... 185 min.  
at 25 amps

### NOTE:

To ensure the best electrical contact, battery terminal connections should be as clean and as tight as possible.




### NOTE:

When servicing the electrical system always disconnect the batteries. Remove the ground cable first and connect it last.

# VII. SERVICE AND MAINTENANCE

## E. ELECTRICAL

**CIRCUIT BREAKERS & FUSES**– The STS 10 has circuit breaker and fuse systems in various locations. Under the right hand console (fig. 7.2E-1) for the cab functions, under the cab (fig. 7.2E-2) for the light functions, and the engine compartment (fig. 7.2E-3) for the engine functions.

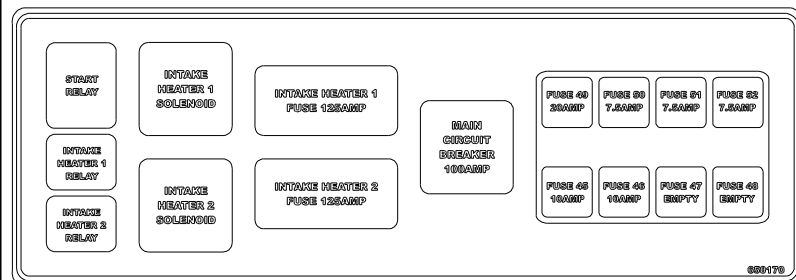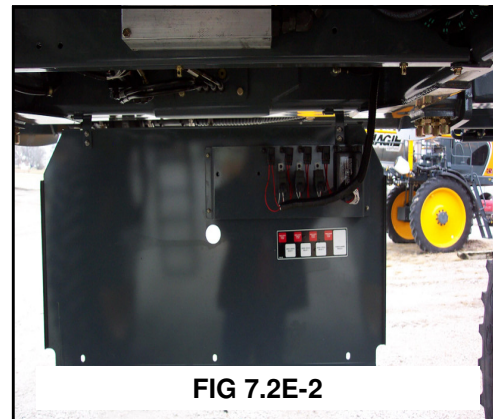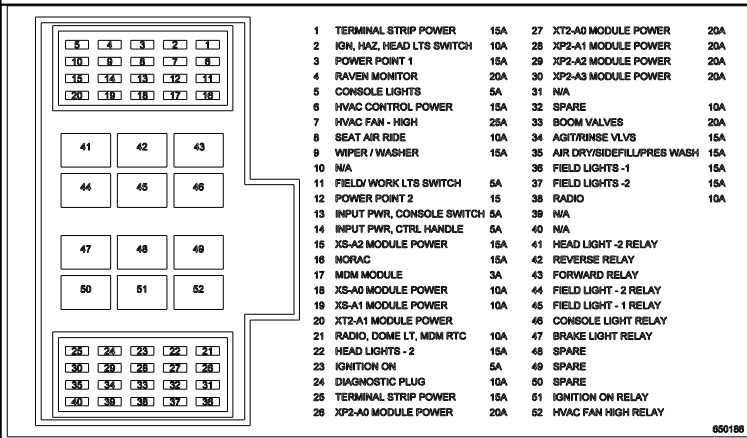

# VII. SERVICE AND MAINTENANCE

## F. BELTS

### ENGINE DRIVE BELT

**REMOVAL**– Insert a 1/2 inch square ratchet drive (fig. 7.1F-1) into the belt tensioner (fig. 7.1F-2, item 1) and lift upward to remove the belt (fig. 7.1F-2, item 2).

**INSPECTION**– Visually inspect the belt daily. Check the belt for intersecting cracks (fig.

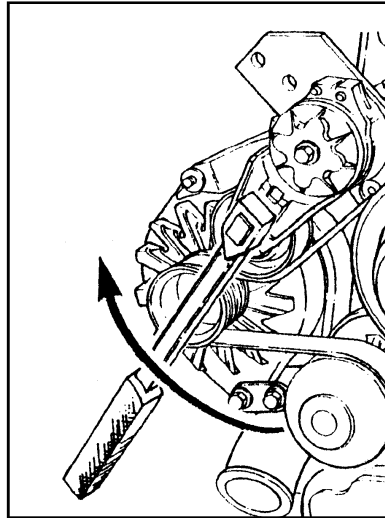


FIG 7.1F-1

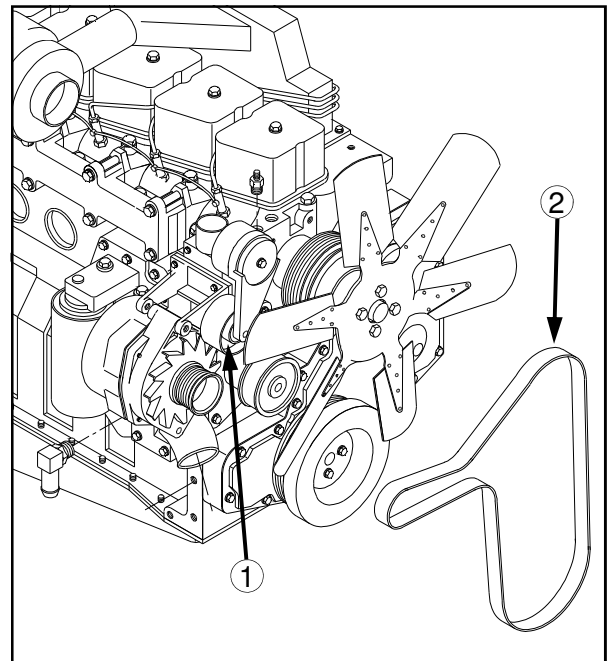


FIG 7.1F-2

7.1F-3). Transverse (across the belt width) cracks are acceptable. Longitudinal (direction of the belt length) cracks that intersect with transverse cracks are not acceptable. Replace the belt if it is frayed or has pieces of material missing.

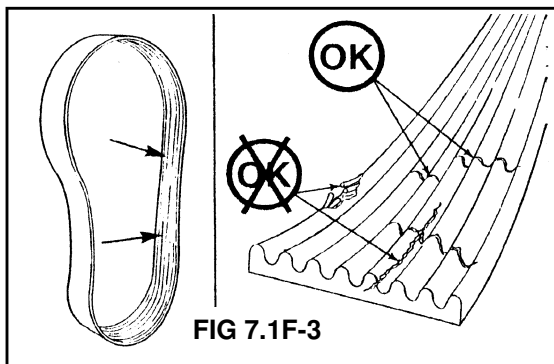


FIG 7.1F-3

**A/C COMPRESSOR BELT**– To tighten air conditioner compressor belt, loosen the two pivot bolts (fig. 7.1F-4, item 1) and the two slide bolts (fig. 7.1F-4, item 2). Using a suitable prying tool, adjust tension on the belt to the desired tautness. While maintaining tension, re-tighten all four bolts. Inspect belt every 250 hours.

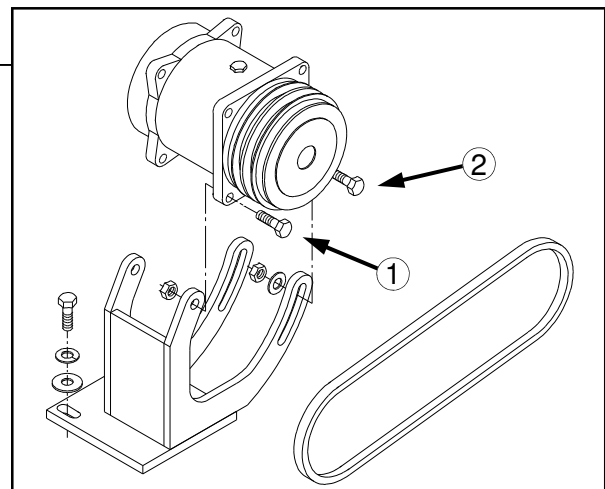


FIG 7.1F-4

# VII. SERVICE AND MAINTENANCE

## G. BOLT TORQUE

**WHEEL BOLTS**– If you do not have the proper equipment to mount a tire, let your local qualified tire sales/service dealer mount the tire for you. The tire should be mounted on the rim according to figure 7.1G-1 for best traction and tread cleaning action. To install wheel and tire assembly on the wheel hub lubricate studs with an anti-seize grease. Align the wheel bolt holes with the wheel hub studs and mount the wheel on the hub.

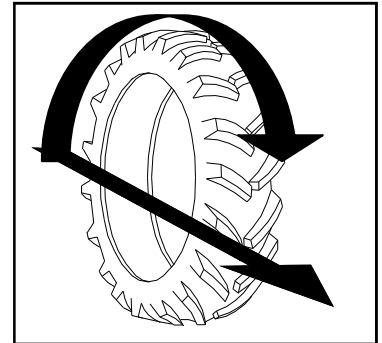


FIG 7.1G-1

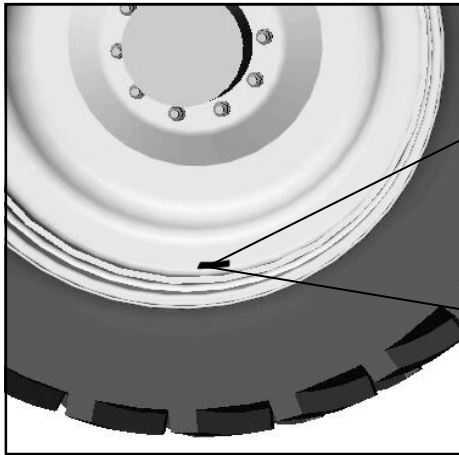


FIG 7.1G-2

**Keep wheel bolts tight.  
See owner's manual for  
torque specifications.**

**NOTE:**

To achieve even torquing consistency, the tire should be completely off the ground.

Start all of the lug nuts and tighten them until they are just snug. Following the torque sequence in figure 7.1G-3, first turn each lug nut to a torque value of 120 dry foot– pounds. Use slow, even pressure on the torque wrench. Quick or jerky movements cause inaccurate values. Repeat the same sequences to 150 dry foot– pounds and again finally to 400 to 500 dry foot– pounds.

If the wheel turns during lug nut torquing, lower the machine to the ground just enough for the tire to touch and prevent rotation or more preferably, place a suitable wedge between the tire and the ground.

Lower the machine and resume operation. Recheck torque after 30 minutes of operation.

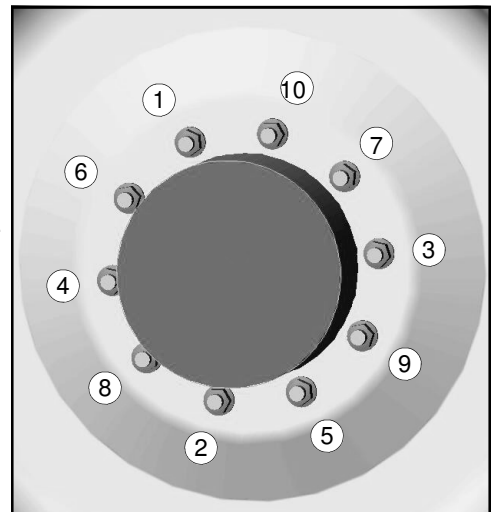


FIG 7.2G-3



### CAUTION

**Check lug nut torque immediately after receiving machine and every 50 hours thereafter.**

# VII. SERVICE AND MAINTENANCE

## G. BOLT TORQUE

**HYDRAULIC TREAD ADJUST UNITS**– With the engine turned off, visually inspect the tread bearing bolts on both the bottom and side tread adjust bearing plates (fig. 7.2G-1) every 50 hours. Torque check them every 100 hours.

To torque check the tread adjust bearing bolts:

1. Loosen the jam nut (fig. 7.2G-1, item 2) on each tread adjust bearing bolt.
2. Using an “X” pattern (fig. 7.2G-2), verify that current torque on each tread adjust bearing bolt is equivalent to the last check from 100 hours previous.
3. Repeat pattern 3 to 4 times until last sequence shows no movement of the bolts to achieve desired torque.
4. Tighten jam nut.

Typically a torque value of 20 to 25 foot pounds is required to stabilize the axle and still allow tread width adjustment.

**Even pressure of the tread adjust bearing plates is required for proper operation!** (fig. 7.2G-3) Figure A shows the correct position of the tread adjust bearing plates and bolts as well as the outer leg. Figure B shows the plates when there is not even torque on each of the tread adjust bearing bolts. Figure C shows a situation in which there is not enough torque on the tread adjust bearing bolts. Both figure B and C will cause the tread adjust to operate incorrectly or not at all.

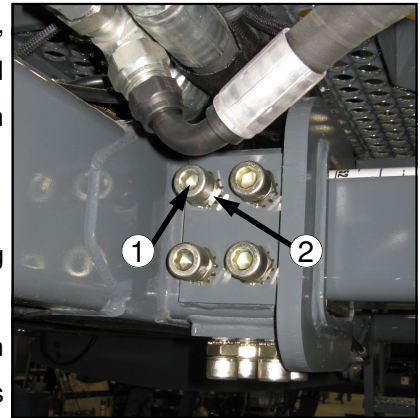


FIG 7.2G-1

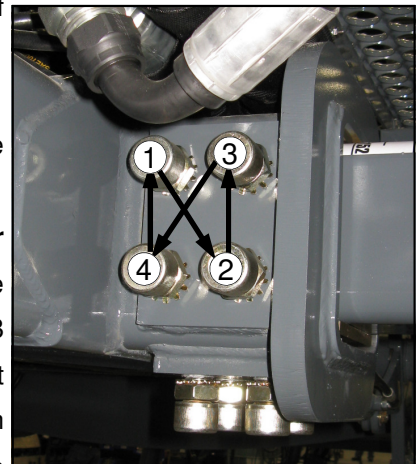



FIG 7.2G-2

**NOTE:**

If hydraulic tread adjustment will never be used on your machine or you do not have hydraulic tread adjust, set all bearing bolt torque settings to 50 foot-pounds using the same procedure as stated above.

**NOTE:**

Never operate the unit with loose or missing tread adjust bearing bolts.

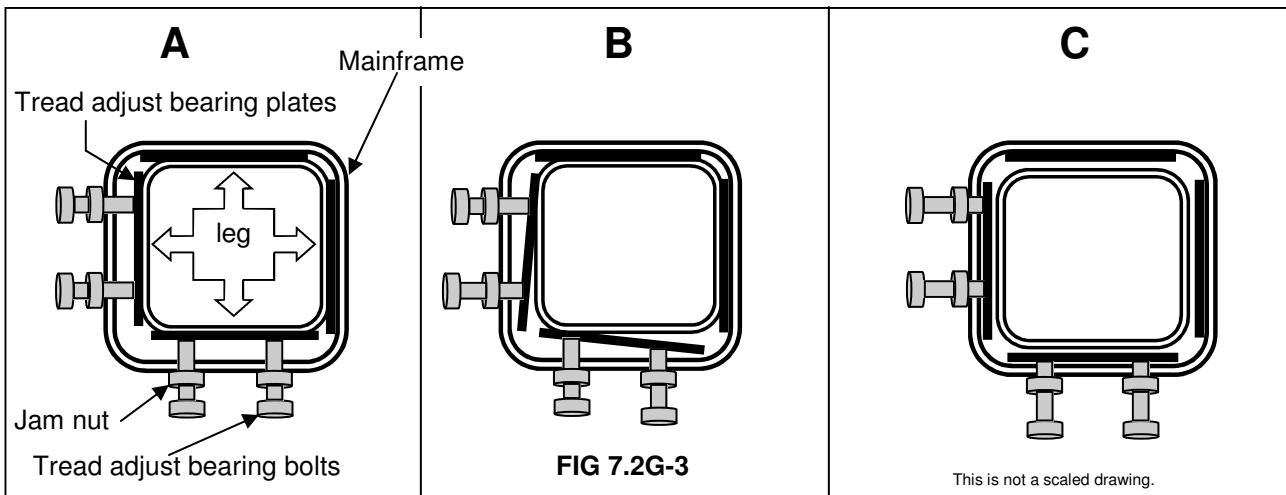



# VII. SERVICE AND MAINTENANCE

## H. TOE-IN

**GAUGING TOE-IN**— To correctly gauge toe-in, phase the cylinders first (page 4.4C). Then use a tape measure placed at one-half the height on the front center seam of the front tire compared to the same measurement of the rear of the front tire (subtract the front measurement from the rear measurement— it must be a positive number). Correct toe-in should fall between one half and three quarters of an inch.

Toe-in is preset at the factory and should not have to be adjusted unless the steering cylinders are removed.

Difficulty steering one way versus the other or “darting” during operation, may indicate incorrect toe-in and may require adjustment.

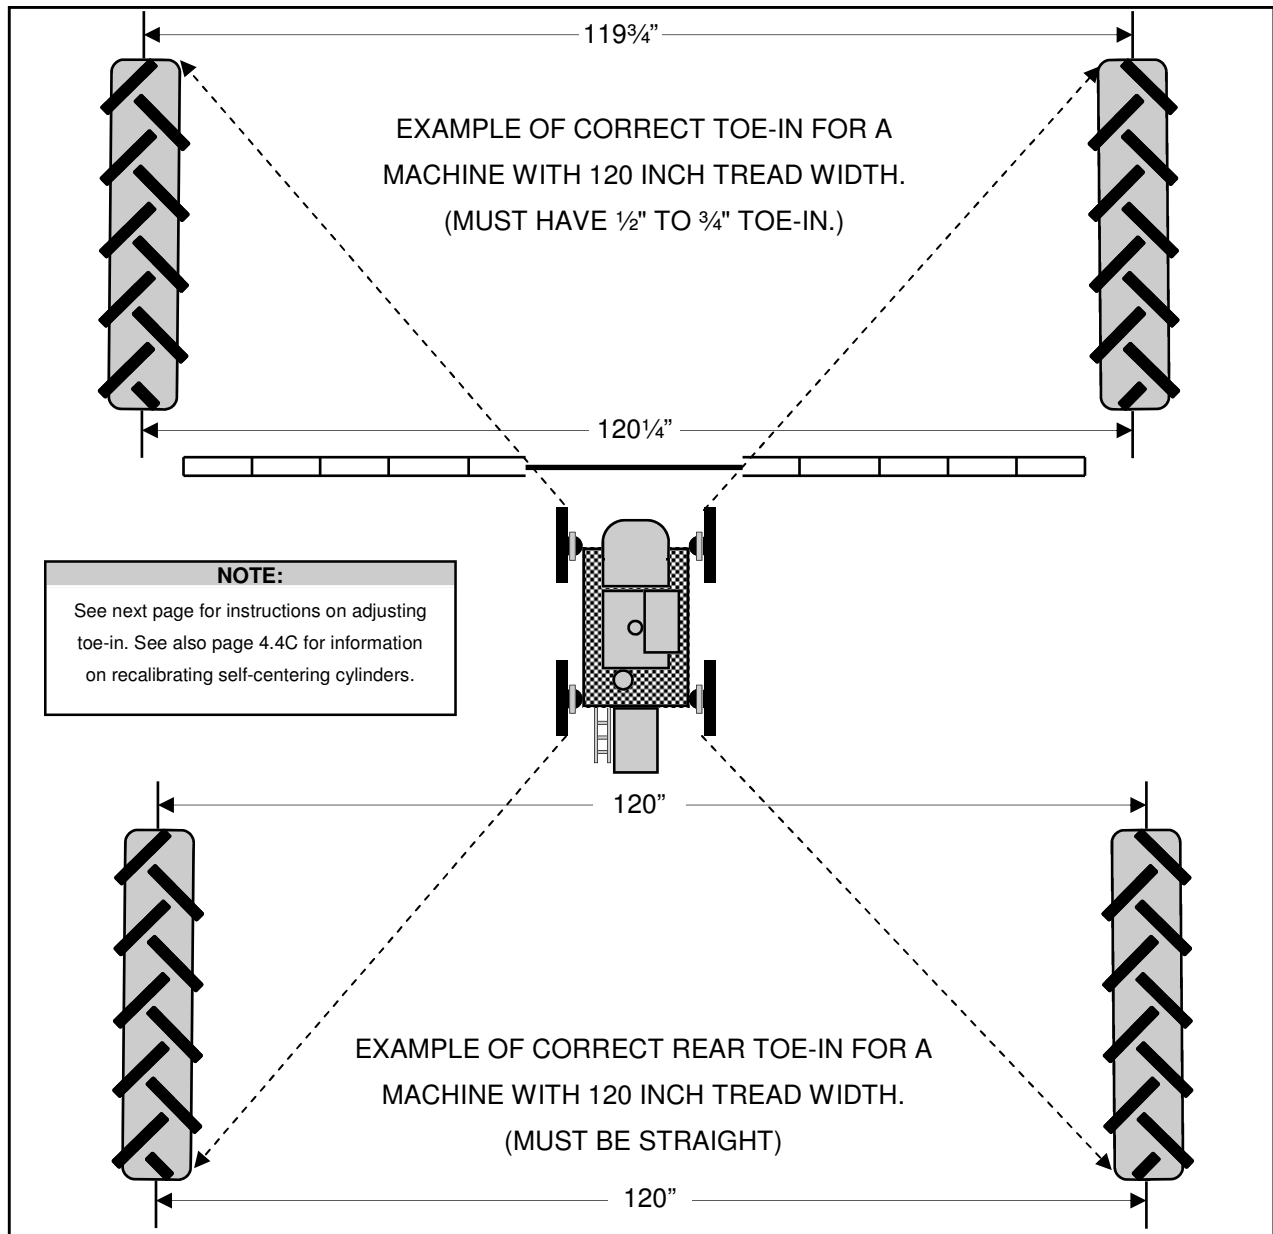



FIG 7.1H-1

# VII. SERVICE AND MAINTENANCE

## H. TOE- IN

**TOE-IN ADJUSTMENT**– To adjust toe-in of the front tires follow these instructions for both front steering cylinders carefully:

1. Phase the cylinders (page 4.4C), stopping at “center” .
2. Loosen jam nut (fig. 7.2H-1).
3. Screw swivel assembly in or out on steering cylinder until the measurement from the center of the rod end to the collar (fig. 7.2H-1, item 2) is the same on both of the front steering cylinders.
4. Tighten jam nut.
5. Phase cylinders again, re-check toe-in measurement. The cylinders must be phased anytime an adjustment is made to the cylinders.
6. Drive forward 20-30 feet and re-measure toe-in.
7. Continue with steps 2-6 until a correct toe-in measurement is reached.

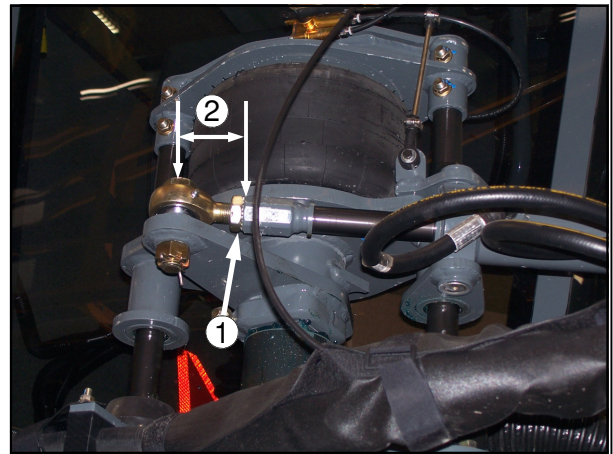

**FIG 7.2H-1**



**FIG 7.2H-2**

**NOTE:**

Dimension “A” should be  $\frac{1}{2}$ ” to  $\frac{3}{4}$ ” less than dimension “B.” For more information regarding toe-in, see page 7.1H.

# VII. SERVICE AND MAINTENANCE

## I. AIR PRESSURE

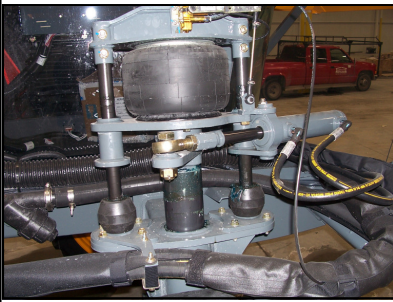


FIG 7.11-1

**AIR BAG PRESSURE**– The airbags (7.11-1) automatically adjust pressure to compensate for load weight and field conditions. The system includes an air dryer (fig. 7.11-2) that dries the air coming from the air compressor before sending it to a collection tank. Check the dryer cartridge every 50 hours to make sure that it is purging with compressor unload. Change the cartridge as needed or every other season (1000 hours).



FIG 7.11-2

From the collection tank, the air is sent to the airbags located on the legs (fig. 7.11-1) as needed to maintain a level pressure. There are control valves on each leg that open and close to allow air in.

Visually check the air bags daily for leaks and cracking. If an air bag seems to be low check the bag for any punctures or leaks. Call Hagie Customer Service for repairs.



FIG 7.11-3

**WET TANK**– Drain the wet tank (fig. 7.11-3) daily to prevent system condensation from contaminating the engine air compressor or dryer.

**AIR TANK**– Drain the air tank (fig. 7.11-4) daily by slowly releasing the drain cock. Check for moisture in the system. If there

is excessive moisture in this tank, there may be a problem with the system. Call Hagie Customer Support for assistance.

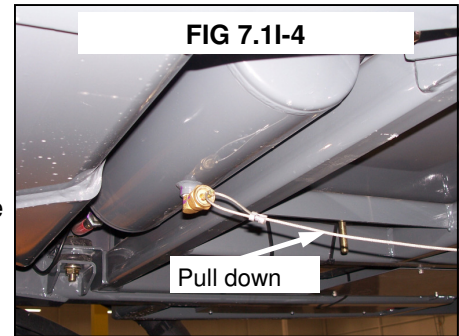


FIG 7.11-4

**TIRE PRESSURE**– Check the pressure once a week or every 50 hours of operation (fig. 7.11-5). Never inflate a tire more than the recommended maximum air pressure. Use an air line with a locking air chuck and stand behind the tire tread while filling (fig. 7.11-6).



FIG 7.11-5



FIG 7.11-6

### NOTE:

Tire pressure will depend on tire type and load quantity in solution tanks. Refer to page 3.7 for tire specifications.



## WARNING

When inflating tire use extension hose with in-line air gauge and clip-on air chuck, which allow operator to stand clear of tire side wall explosion trajectory.

# VII. SERVICE AND MAINTENANCE

## J. SPRAY SYSTEM

**SPRAY TIPS**— At the beginning of each season, or as required, remove a random sample of spray tip caps (fig. 7.1J-3, item 3) and inspect the nozzle tips. If they are plugged or worn, clean or replace them. **DO NOT** put your mouth to a spray tip to try to unplug it!

**NOZZLE DIAPHRAGMS**— At the beginning of each season, remove each nozzle body cap (fig. 7.1J-3, item 1) and inspect the diaphragm (fig. 7.1J-3, item 2) for wear or fit. Replace if necessary. Refer to accompanying manual containing nozzle information.

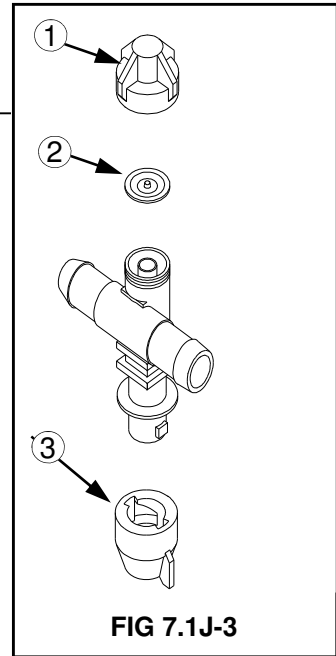


FIG 7.1J-3

# VIII. STORAGE

## A. PREPARING FOR STORAGE

1. Perform daily level checks, lubrication, and bolt and linkage inspections as required in this manual in section five on maintenance.
2. Every other season, drain the coolant from the engine and radiator. Probe the drain holes during draining to ensure they are not clogged by sludge, scale, or other deposits. Fill the cooling system to the top with a 50/50 water/ antifreeze mixture. Run the engine to operating temperature and re-check the level.
3. Add a fuel stabilizer to the fuel and fill the tank.
4. Run the engine until it is at operating temperature, then drain the engine oil. Refill with fresh oil of recommended weight and install a new lubricating oil filter element.
5. With the engine at normal operating temperature, cycle all hydraulic functions including the steering.
6. Release tension on all belts.
7. Use plastic bags and water resistant adhesive tape to seal the air intake opening, all exhaust manifold openings, engine oil filter cap, hydraulic oil tank breather cap, and fuel tank caps.
8. Disconnect and remove batteries. Completely clean and charge the batteries. Coat the terminals with dielectric grease and store the batteries in a cool, above freezing place.
9. Thoroughly clean the sprayer. Touch up any painted surfaces that are scratched or chipped. For touch up paint recommendations contact the Hagie Manufacturing Customer Support Department.
10. Replace worn or missing decals. See Section 1 for proper location of warning decals and their corresponding part number. Warning decals and all other Hagie decals are available through the Hagie Customer Support Department.
11. Use a multi-purpose grease to coat exposed hydraulic cylinder rods.
12. To winterize the spray system, it is recommended that you use an environmentally safe type antifreeze and water mixture that will give you adequate protection to minus 30 degrees below zero. Drain any remaining solution in the spray system and run the antifreeze mixture through the spray system until it comes out all boom openings. Repeat the above process with both the foam marker and rinse systems.
13. Refer to the Raven manual for detailed information on storage procedures for the monitor and flow meters.
14. If the sprayer must be stored outside, cover it with a waterproof cover.

### NOTE:

If antifreeze is added, make sure the engine is then run to operating temperature to assure proper mixing of solution.

### NOTE:

For replacement decals contact:  
Hagie Manufacturing Company  
721 Central Ave. West  
Box 273  
Clarion, IA 50525-0273  
Ph. 1-800-247-4885

# VIII. STORAGE

---

## B. REMOVING THE SPRAYER FROM STORAGE

1. Inspect the condition, and test the air pressure of all the tires.
2. Carefully unseal all openings that were sealed in the storage process.
3. Clean and reinstall the batteries. Be sure to attach the battery cables to the proper terminals.
4. Tighten all belts. Inspect and replace any worn belts.
5. Check the engine oil, hydraulic oil, and engine coolant levels; add if necessary. A mixture of 50/50 anti-freeze and water will cool adequately in summer as well as protect in winter.
6. Completely clean the sprayer.
7. Review section five on maintenance and perform all needed services as instructed.
8. For starting instructions, refer to Section 4 on operating information.

**NOTE:**

Protective compounds such as grease can harden under exposure to weather conditions. Be sure to remove any dried grease and re-apply new if necessary.

**NOTE:**

See Warranty on page 10.1 concerning **improper storage**.

# IX. TROUBLE SHOOTING

## A. ENGINE



**Start engine from operator's seat only. When running engine in a building, be sure there is adequate ventilation.**

PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Engine won't crank	<ul style="list-style-type: none"> <li>• Dead battery</li> <li>• Poor battery connections</li> <li>• Starter or starter relay</li> <li>• Blown fuse in engine electric box</li> <li>• Battery switch in OFF position</li> </ul>	<ul style="list-style-type: none"> <li>• Recharge or replace battery</li> <li>• Clean and tighten</li> <li>• Test; rebuild or replace</li> <li>• Check 20 amp fuse</li> <li>• Turn battery switch to ON position</li> </ul>
Engine won't start	<ul style="list-style-type: none"> <li>• Out of fuel</li> <li>• Clogged fuel filter</li> <li>• Cold weather</li> <li>• Low starter speed</li> <li>• Blown fuse in engine electric box</li> </ul>	<ul style="list-style-type: none"> <li>• Fill fuel tank</li> <li>• Replace fuel filters</li> <li>• Refer to engine manual for cold weather starting</li> <li>• Check starter and battery</li> <li>• Check 20 amp fuse</li> </ul>
Engine overheats	<ul style="list-style-type: none"> <li>• Engine overloaded</li> <li>• Dirty radiator core or dirty grill screen</li> <li>• Faulty radiator cap</li> <li>• Loose or faulty fan belt</li> <li>• Faulty thermostat</li> <li>• Low coolant level</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce load</li> <li>• Remove all foreign material and clean all items</li> <li>• Replace cap</li> <li>• Tighten or replace fan belt</li> <li>• Replace thermostat</li> <li>• Refill to proper level with recommended coolant</li> </ul>

# IX. TROUBLE SHOOTING

---

## A. ENGINE



Start engine from operator's seat only. When running engine in a building, be sure there is adequate ventilation.

PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Engine misfires: runs uneven, low power	<ul style="list-style-type: none"><li>• Water in fuel</li><li>• Dirty air cleaner element</li><li>• Poor grade of fuel</li><li>• Fuel tank vent clogged</li><li>• Clogged fuel filter</li></ul>	<ul style="list-style-type: none"><li>• Drain, flush, replace filter, fill system</li><li>• Replace element</li><li>• Drain system, change to a better grade fuel</li><li>• Open fuel tank vent in cap</li><li>• Replace fuel filter</li></ul>
Engine knocks	<ul style="list-style-type: none"><li>• Low oil level in crankcase</li><li>• Cold engine</li></ul>	<ul style="list-style-type: none"><li>• Add oil to full mark</li><li>• Allow proper warm-up period; refer to engine owner's handbook</li></ul>



# IX. TROUBLE SHOOTING

## B. SPRAY SYSTEM



### **WARNING**

**CHEMICALS ARE DANGEROUS**

Read The Chemical manufacturer's labels to avoid injury or damage.

PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Solution pump will not prime	<ul style="list-style-type: none"> <li>• Low water level in pump</li> <li>• Air leak in suction line</li> <li>• Solution tank valve closed</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the solution tank is not empty, solution pump is self-priming</li> <li>• Inspect and tighten all fittings on suction line</li> <li>• Open solution tank valve, allow air to leave the system</li> </ul>
Erratic reading on pressure gauge	<ul style="list-style-type: none"> <li>• Orifice in back of gauge clogged</li> <li>• Faulty gauge</li> <li>• Air leak in suction line</li> <li>• Glycerin leaking from gauge</li> </ul>	<ul style="list-style-type: none"> <li>• Remove gauge; clean orifice; reinstall</li> <li>• Replace gauge</li> <li>• Inspect and tighten all fittings in suction line</li> <li>• Replace gauge</li> </ul>
Malfunction of electric solution valve	<ul style="list-style-type: none"> <li>• Faulty ground</li> <li>• Dirty contact terminals</li> <li>• Separation in wire</li> <li>• Faulty switch</li> <li>• Short in solenoid coil</li> <li>• Bad valve</li> </ul>	<ul style="list-style-type: none"> <li>• Clean and tighten ground</li> <li>• Clean contact terminals</li> <li>• Check continuity and replace wire</li> <li>• Replace switch</li> <li>• Replace valve</li> <li>• Replace valve</li> </ul>

# IX. TROUBLE SHOOTING

## B. SPRAY SYSTEM

**NOTE:**

If your unit is equipped with a high-pressure system, call the Hagie Manufacturing Customer Support Department for possible causes and suggested remedies.

PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Solution pump not producing normal pressure	<ul style="list-style-type: none"> <li>• Clogged line strainer screen</li> <li>• Air leak in suction flow to pump</li> <li>• Restricted solution flow to pump</li> <li>• Suction hose collapsed</li> <li>• Internal restriction of diaphragm such as build up of chemical</li> <li>• Hydraulic failure</li> </ul>	<ul style="list-style-type: none"> <li>• Remove screen; clean thoroughly; tighten strainer cap to avoid air leak</li> <li>• Inspect and tighten all fittings on suction line</li> <li>• Main solution tank shut-off valve not completely open</li> <li>• Obstruction at inlet end of hose causing high vacuum on hose</li> <li>• Disassemble; inspect; clean; reassemble</li> <li>• Call Hagie Customer Service</li> </ul>

**NOTE:**

Refer to the Raven installation and operation manual for trouble shooting guide on Raven console and system

# IX. TROUBLE SHOOTING


## C. HYDROSTATIC SYSTEM



PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Machine won't move in either direction	<ul style="list-style-type: none"> <li>• Speed control is set too low</li> <li>• Engine speed too low</li> <li>• Oil level in reservoir too low</li> <li>• Clogged filter</li> <li>• Hydrostatic system failure</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the setting of the speed control knob</li> <li>• Set engine at operating RPM before trying to move machine</li> <li>• Fill reservoir to proper level with approved oil; see section on service and maintenance</li> <li>• Replace filter</li> <li>• Call Hagie Customer Service</li> </ul>

# IX. TROUBLE SHOOTING

## C. HYDROSTATIC SYSTEM

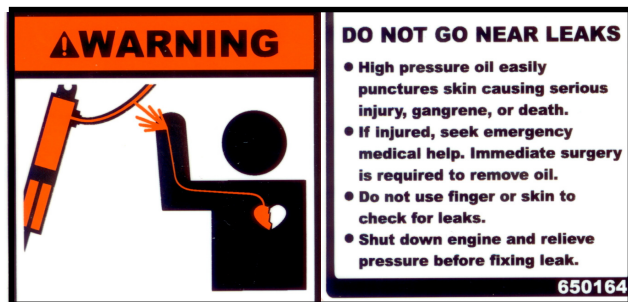

PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Machine will move in only one direction	<ul style="list-style-type: none"> <li>• Speed control is set too low</li> <li>• Hydrostatic system failure</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the setting of the speed control knob</li> <li>• Call Hagie Customer Service</li> </ul>
Hydrostatic system responding slowly	<ul style="list-style-type: none"> <li>• Engine speed too low</li> <li>• Oil in reservoir low</li> <li>• Cold oil</li> <li>• Plugged filter</li> <li>• Partially restricted suction line</li> <li>• Hydrostatic system failure</li> </ul>	<ul style="list-style-type: none"> <li>• Set engine at operating RPM before trying to move machine</li> <li>• Fill reservoir to proper level with approved oil; see section on service and maintenance</li> <li>• Allow adequate warm up period</li> <li>• Check and replace filter</li> <li>• Inspect for collapsed suction hose</li> <li>• Call Hagie Customer Service</li> </ul>
Noisy hydrostatic system	<ul style="list-style-type: none"> <li>• Cold oil</li> <li>• Low engine speed</li> <li>• Oil level in reservoir low</li> <li>• Hydrostatic system failure</li> </ul>	<ul style="list-style-type: none"> <li>• Allow adequate warm up period</li> <li>• Increase engine speed</li> <li>• Fill reservoir to proper level with approved oil; see section on service and maintenance</li> <li>• Call Hagie Customer Service</li> </ul>

# IX. TROUBLE SHOOTING

## D. HYDRAULIC SYSTEM




PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Entire hydraulic system fails to function	<ul style="list-style-type: none"> <li>Oil level in reservoir too low</li> <li>Auxiliary hydraulic system failure</li> </ul>	<ul style="list-style-type: none"> <li>Fill reservoir to proper level with approved oil; see section on service and maintenance</li> <li>Call Hagie Customer Service</li> </ul>
Noisy hydraulic pump	<ul style="list-style-type: none"> <li>Oil level in reservoir too low</li> <li>Auxiliary hydraulic system failure</li> </ul>	<ul style="list-style-type: none"> <li>Fill reservoir to proper level with approved oil; see section on service and maintenance</li> <li>Call Hagie Customer Service</li> </ul>

**NOTE:**  
Refer to the Raven installation and operation manual for trouble shooting guide on Raven console and system

# IX. TROUBLE SHOOTING

## E. ELECTRICAL

 **CAUTION**  
 Batteries contain sulfuric acid. Avoid contact with skin, eyes, or clothing. Do not inhale fumes or ingest liquid. Batteries contain gases which can explode. Keep sparks and flame away while servicing.

**NOTE:**  
 Disconnect battery when servicing any part of electrical system to prevent system damage.

PROBLEM	POSSIBLE CAUSE	SUGGESTED REMEDY
Entire electrical system is dead	<ul style="list-style-type: none"> <li>• Dead battery</li> <li>• Poor battery connection</li> <li>• Low charging rate</li> <li>• No charging rate</li> <li>• Battery master switch is in OFF position</li> </ul>	<ul style="list-style-type: none"> <li>• Replace battery</li> <li>• Clean and tighten battery connections</li> <li>• Tighten alternator belt</li> <li>• Replace alternator</li> <li>• Turn battery master switch to ON position</li> </ul>
Light system does not function	<ul style="list-style-type: none"> <li>• Poor ground</li> <li>• Burned out bulb</li> <li>• Separation or short in wire</li> <li>• Blown fuse</li> <li>• Faulty switch</li> <li>• Ignition switch is off</li> </ul>	<ul style="list-style-type: none"> <li>• Clean and tighten ground</li> <li>• Replace bulb</li> <li>• Check continuity and replace wire</li> <li>• Replace fuse</li> <li>• Replace switch</li> <li>• Turn ignition switch to ON position</li> </ul>

**NOTE:**  
 Refer to the Raven installation and operation manual for trouble shooting guide on Raven console and system

# IX. TROUBLE SHOOTING

---

## NOTES

# X. LIMITED WARRANTY

## 1. The Warranty

- a. This warranty gives you specific legal rights. You may also have other rights which may vary from state to state.
- b. Hagie makes this warranty only to the original purchaser of its new equipment.
- c. The warranty period ends 12 months from the date of delivery of equipment to the original purchaser. When requesting warranty service, the original purchaser must present evidence of the date of delivery of the equipment.
- d. Parts or rebuilt assemblies furnished under the terms of this warranty are not warranted beyond the original warranty period.
- e. Exceptions to this warranty must be covered by separate warranty agreements.

## 2. Items not covered by Hagie Warranty

- a. Used equipment.
- b. Tires, tubes, engines, and batteries (under separate manufacturer's warranty).
- c. Depreciation or damage caused by normal wear, accident, improper maintenance, improper storage, or improper use.
- d. Service calls and transporting the equipment to and from the place where the warranty work is performed.

## 3. Unapproved service or modification

### NOTE:

All obligations of Hagie Manufacturing Company under this warranty shall be terminated if:

- a. . . . service is performed by someone other than Hagie authorized personnel.  
or
- b. . . . the equipment is modified or altered without Hagie approval.

## 4. No commercial loss coverage

- a. Hagie shall not be liable for incidental or consequential damages or injuries (damage and repairs of equipment itself, loss of profits, rental or substitute equipment, loss of good will, etc.).
- b. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

## 5. Merger clause

- a. The entire warranty agreement is included in this writing.
- b. Any oral agreements that are made by the selling persons about the equipment are not warranties, and are not to be relied upon by the purchaser.

## 6. No representations or implied warranty

- a. The parties agree that the implied warranties of merchantability and fitness for a particular purpose and all other warranties expressed or implied, are excluded from this transaction and shall not apply to the equipment sold.



# INDEX

	PAGE	PAGE
<b>A</b>		
<b>ACE: Automatically Controlled Engine</b> .....	4.4B	
<b>Agitation</b> .....	4.4D	
Switch .....	4.6A	
<b>Air Conditioning System</b>		
Belt .....	7.1F	
Charging System .....	7.2B	
Climate Controls .....	4.10A	
Vents .....	4.11A	
<b>Air Dryer Cartridge</b> .....	7.1I	
<b>Air Pressure</b> .....	7.1I	
Air Bag Suspension .....	7.1I	
Tire Pressure .....	7.1I	
<b>Air Ride Seat</b> .....	4.14A	
<b>Air Tank</b> .....	7.1I	
<b>Airbags</b> .....	7.1I	
<b>Antifreeze</b> .....	7.3B	
<b>Auxiliary Hydraulic System</b> .....	4.1C	
Specifications .....	3.2	
<b>B</b>		
<b>Batteries</b> .....	7.1E	
Charging Auxiliary Posts .....	7.1E	
Disconnect .....	4.2B	
Service Access .....	7.1E	
<b>Belts</b> .....	7.1F	
Engine .....	7.1F	
Removal .....	7.1F	
Inspection .....	7.1F	
A/C Compressor .....	7.1F	
<b>Bolt Torque®</b> .....	7.1G	
Bearing Torque on Hydraulic Tread Adjust .....	7.2G	
Wheel Bolts .....	7.1G	
<b>Boom</b>		
Boom Extension Switch .....	4.6A	
Boom L.E.D. Indicators .....	4.7D	
Boom Solution Valve Switch .....	4.6A,4.7D	
Configuring 80' to 90' .....	4.10C	
Cradling .....	6.1A	
Operation .....	4.5C-4.10C	
Stands .....	4.3E	
<b>Buddy Seat</b> .....	4.14A	
<b>C</b>		
<b>Cab</b> .....	4.1A-4.14A	
Filters .....	7.4C	
Charcoal Filter .....	7.4C	
Fresh Air Intake Filter .....	7.4C	
Front Console .....	4.1A-4.3A	
Hazard/ Warning Lights .....	4.1A	
Highway Lights/ Running Lights .....	4.2A	
Ignition Switch .....	4.3A	
Steering Column Release Pedal .....	4.3A	
Tilt Adjust Handle .....	4.3A	
Turn Signals .....	4.2A	
Side Console .....	4.4A-4.7A	
Agitation Switch .....	4.6A	
Boom Extension Switch .....	4.6A	
Boom Valve Section Switch .....	4.6A	
Fence Row Switch .....	4.6A	
Float Switch .....	4.6A	
Foamer Switch .....	4.7A	
Forward Control .....	4.7A	
Horizontal Fold .....	4.7A	
Hydrostatic Lever .....	4.5A	
Level .....	4.7A	
Lift .....	4.7A	
Main Solution Switch .....	4.7A	
Neutral Control .....	4.7A	
Parking Brake .....	4.5A	
Power Ports .....	4.7A	
Reverse Control .....	4.7A	
Rinse Switch .....	4.6A	
Speed Control .....	4.5A	
Tank Switch .....	4.6A	
Throttle Switch .....	4.5A	
Tread Adjust Switch .....	4.6A	
Work Mode Switch .....	4.6A	
Other Features .....	4.12A-4.14A	
Air Ride Seat .....	4.14A	
Buddy Seat .....	4.14A	
Cab Filters .....	4.13A	
Cab Glass .....	4.13A	
Interior Lights .....	4.12A	
Rear Viewing Mirrors .....	4.13A	
Res-Q-Me Tool/ Emergency Exit .....	4.13A	
Overhead Controls and Monitors .....	4.8A-4.11A	
Climate Controls .....	4.10A	
Field Lights and Work Lights .....	4.10A	
Hagie Diagnostic Port .....	4.8A	
MDM .....	4.9A	
Radio .....	4.11A	
Raven Spray Systems Console .....	4.11A	
Spray System Indicator Light .....	4.9A	
Vents .....	4.11A	
Warning Indicator Light .....	4.8A	
Windshield Wiper and Washer Fluid Switches .....	4.9A	
Specifications .....	3.5	
<b>Calibration</b> .....	5.1A-5.9B	
Programming Raven Console .....	5.1B-5.8B	
<b>Circuit Breakers</b> .....	7.2E	
<b>Cooling System</b>		
Coolant .....	7.3B	
Radiator Grille Screen .....	7.2C	
<b>D</b>		
<b>Decals</b>		
Location .....	1.5-1.9	
<b>E</b>		
<b>Electrical System</b> .....	7.1E-7.2E	
Batteries .....	7.1E	
Charging Auxiliary Posts .....	7.1E	
Service Access .....	7.1E	

# INDEX

	PAGE		PAGE
Circuit Breakers .....	7.2E	<b>Fresh Air Cab Filters</b> .....	7.4C
Specifications .....	3.3-3.4	<b>Front Console</b> .....	4.1A-4.3A
Circuit Breakers/Fuses .....	3.3-3.4	Hazard/ Warning Lights .....	4.1A
General Electric System .....	3.3	Highway Lights/ Running Lights .....	4.2A
Lights .....	3.4	Ignition Switch .....	4.3A
<b>Emergency Exit (Res-Q-Me Tool)</b> .....	4.13A	Steering Column Release Pedal .....	4.3A
<b>Engine</b> .....	4.1B	Tilt Adjust Handle .....	4.3A
Air Intake Filter .....	7.1C	Turn Signals .....	4.2A
Drive Belt .....	7.1F	<b>Front Fill Flow Meter (optional)</b> .....	4.5D
Fuel .....	7.4B	<b>Fuel</b> .....	7.4B
In Line Strainer .....	7.3C	Filter .....	7.3C
Primary Fuel Filter .....	7.3C	In Line Strainer .....	7.3C
Remote Fuel Filter .....	7.3C	Fuel Filter (water separator) .....	7.3C
Oil .....	7.1B	Remote Fuel Filter .....	7.3C
Filter .....	7.3C	<b>Fuses</b> .....	7.2E
Operation .....	4.1B-4.3B		
Specifications .....	3.1	<b>G</b>	
		<b>Glass (cab)</b> .....	4.13A
<b>F</b>		<b>Grease Zerks</b> .....	7.1D
<b>Fence Row</b>			
L.E.D. Indicator .....	4.8D	<b>H</b>	
Operation .....	4.8D	<b>Hand Washing System</b> .....	4.8D
Switch .....	4.6A	<b>Hazard/ Warning Lights</b> .....	4.1A
<b>Filter Minder®</b> .....	7.1C	<b>Highway Lights/ Running Lights</b> .....	4.2A
<b>Filters</b> .....	7.1C-7.4C	<b>Horizontal Boom Fold</b> .....	4.7A, 4.8C
Engine Air Intake Filter .....	7.1C	<b>Hydraulic Pump</b> .....	4.2C
Engine Oil Filter .....	7.3C	Oil Level .....	7.1B
Filter Minder® .....	7.1C	Oil Type .....	7.1B
Fresh Air Cab Filters .....	7.4C	<b>Hydraulic System</b> .....	4.1C-4.10C
Fuel Filters .....	7.3C	Auxiliary .....	3.3, 4.1C
Hydraulic High-Pressure In-Line Filter .....	7.2C	Horizontal Boom Fold .....	4.8C
Hydraulic Suction Filters .....	7.2C	Hydraulic Pump .....	4.2C
Poly Rinse Tank Strainer .....	7.4C	Hydraulic Tread Adjust .....	4.3C
Rinse Strainer .....	7.4C	Ladder .....	4.3C
Solution Line Strainer .....	7.4C	Level .....	4.7C
Strainer Basket .....	7.2C	Lift .....	4.7C
Radiator Grille Screen .....	7.2C	Manually Folding boom .....	4.10C
<b>Float Switch</b> .....	4.6A	Power Steering System .....	4.2C
<b>Flow Meter</b> .....	4.4D	Solution Pump .....	4.2C
<b>Fluids</b> .....	7.1B-7.4B	Spray Booms .....	4.5C
Air Conditioning Charge .....	7.2B	Vertical Extension Fold .....	4.9C
Capacities .....	3.5, 7.4B	<b>Hydraulic Tread Adjust</b> .....	4.4C
Cooling System Coolant .....	7.3B	<b>Hydrostatic Drive System</b> .....	4.1B-4.4B
Engine Oil .....	7.1B	ACE: Automatically Controlled Engine .....	4.4B
Fuel .....	7.4B	Battery Disconnect .....	4.2B
Hydraulic Oil .....	7.1B	Cummins Engine .....	4.1B
Wheel Hub Oil .....	7.2B	Operating the Engine .....	4.2B-4.4B
Windshield Washer .....	7.4B	Parking Brake .....	4.3B
<b>Foam Marking System</b> .....	4.1D-4.11D	Pre-operational Checks .....	4.2B
Adjusting System Pressure .....	4.10D	Specifications .....	3.1
Filling the Foam Marker System .....	4.11D	Speed Control .....	4.4B
Operation .....	4.10D	Starting the Engine .....	4.3B
Specifications .....	3.2	Tandem Pump .....	4.1B
Switch .....	4.7A	Wheel hubs .....	4.1B
System Pressure Gauge .....	4.10D	Wheel Motors .....	4.1B
<b>Foamer Switch</b> .....	4.7A	<b>Hydrostatic Lever</b> .....	4.5A
<b>Forward Control</b> .....	4.7A	Foamer Switch .....	4.7A

# INDEX

	PAGE		PAGE
Forward Control .....	4.7A		
Horizontal Fold .....	4.7A		
Level ..	4.7A		
Lift .....	4.7A		
Main Solution Control .....	4.7A		
Neutral Position .....	4.7A		
Reverse Control .....	4.7A		
Throttle Switch .....	4.5A		
<b>I</b>			
<b>Identification numbers</b> .....	2.1-2.2		
Engine .....	2.1		
Front Wheel Motors .....	2.2		
Hydrostatic Pumps .....	2.2		
Rear Wheel Motors .....	2.2		
Sprayer .....	2.1		
Wheel Hubs .....	2.2		
<b>Ignition Switch</b> .....	4.3A		
<b>Inductor Operation</b> .....	4.6D		
<b>Interior Lights</b> .....	4.12A		
<b>J,K</b>			
<b>L</b>			
<b>Ladder</b> .....	4.3C		
Lubrication .....	7.1D		
<b>L.E.D. Indicators</b>			
Boom Solution Valve .....	4.7D		
Fence Row Nozzle .....	4.8D		
<b>Level</b> .....	4.7A, 4.7C		
<b>Lift</b> .....	4.7A, 4.6C		
<b>Lights</b>			
Field Lights .....	4.10A		
Hazard/Warning Lights .....	4.1A		
Highway Lights .....	4.2A		
Running Lights .....	4.2A		
Turn Signal .....	4.2A		
Work Lights .....	4.10A		
<b>Limited Warranty</b> .....	10.1		
<b>Lock Assembly</b> .....	4.4E		
<b>Lubrication</b> .....	7.1D		
Grease Zerks .....	7.1D		
Ladder .....	7.1D		
Legs and Steering .....	7.1D		
Transom Pivot Tubes .....	7.1D		
<b>Lug Nuts</b> .....	7.1G, 7.1J		
<b>M</b>			
<b>Main Solution Switch</b> .....	4.7A, 4.7D		
<b>Maintenance Schedule</b> .....	7.1A-7.1J		
<b>Manual Fold (90° to 80°)</b> .....	4.10C		
<b>MDM</b> .....	4.9A		
<b>N</b>			
<b>Neutral Position</b> .....	4.7A		
<b>Nozzle Diaphragms</b> .....	7.1J		
		<b>O</b>	
<b>Operating the Engine</b> .....	4.2B		
ACE: Automatically Controlled Engine .....	4.4B		
Battery Disconnect .....	4.2B		
Parking Brake .....	4.3B		
Pre-operational Checks .....	4.2B		
Speed Control .....	4.4B		
Starting the Engine .....	4.3B		
<b>Operating Information</b> .....	4.1A-4.11D		
Cab .....	4.1A-4.14A		
Air Ride Seat .....	4.14A		
Agitation Switch .....	4.6A		
Boom Extension Switch .....	4.6A		
Boom Valve Section Switch .....	4.6A		
Buddy Seat .....	4.14A		
Cab Filters .....	4.13A		
Cab Glass .....	4.13A		
Climate Controls .....	4.10A		
Fence Row Switch .....	4.6A		
Field Lights .....	4.10A		
Float Switch .....	4.6A		
Foamer Switch .....	4.7A		
Forward Control .....	4.7A		
Hagie Diagnostic Port .....	4.8A		
Hazard/Warning Lights .....	4.1A		
Highway Lights/Running Lights .....	4.2A		
Horizontal Fold Control .....	4.7A		
Hydrostatic Lever .....	4.5A		
Ignition Switch .....	4.3A		
Interior Lights .....	4.12A		
Level Control .....	4.7A		
Lift Control .....	4.7A		
Main Solution Switch .....	4.7A		
MDM .....	4.9A		
Neutral Control .....	4.7A		
Parking Brake .....	4.5A		
Power Ports .....	4.7A		
Radio .....	4.11A		
Raven Spray System Console .....	4.11A		
Rear Viewing Mirrors .....	4.13A		
Res-Q-Me Tool/Emergency Exit .....	4.13A		
Rinse Switch .....	4.6A		
Reverse Control .....	4.7A		
Spray System Indicator Light .....	4.9A		
Speed Control .....	4.5A		
Steering Column Release Pedal .....	4.3A		
Tank Switch .....	4.6A		
Throttle Switch .....	4.5A		
Tilt Adjust Handle .....	4.3A		
Tread Adjust Switches .....	4.6A		
Turn Signals .....	4.2A		
Vents .....	4.11A		
Warning Indicator Light .....	4.8A		
Washer Fluid Switch .....	4.9A		
Windshield Wiper Switch .....	4.9A		
Work Lights .....	4.10A		

# INDEX

	PAGE		PAGE
Work Mode Switch .....	4.6A		
Hydraulic System .....	4.1C-4.10C		
Auxiliary Hydraulic System .....	4.1C		
Horizontal Boom Fold .....	4.8C		
Hydraulic Pump .....	4.2C		
Hydraulic Tread Adjust .....	4.4C		
Ladder .....	4.3C		
Manually Folding Boom .....	4.10C		
Level .....	4.7C		
Lift .....	4.6C		
Power Steering System .....	4.2C		
Solution Pump .....	4.2C		
Spray Booms .....	4.5C		
Vertical extension Fold .....	4.9C		
Hydrostatic Drive System .....	4.1B-4.4B		
ACE: Automatically Controlled Engine .....	4.4B		
Battery Disconnect .....	4.2B		
Cummins Engine and Tandem Pump .....	4.1B		
Parking Brake .....	4.3B		
Pre-operational Checks .....	4.2B		
Speed Control .....	4.4B		
Starting the Engine .....	4.3B		
Wheel Motors and Hubs .....	4.1B		
Quick Attach System .....	4.1E-4.8E		
Detaching .....	4.1E-4.5E		
Reconnecting .....	4.6E-4.8E		
Spray System .....	4.1D-4.11D		
Agitation .....	4.4D		
Boom Section L.E.D. Indicators .....	4.7D		
Boom Solution Valve Switches .....	4.7D		
Fence Row Applicator .....	4.8D		
Filling the Foam Marker System .....	4.11D		
Flow Meter .....	4.4D		
Foamer Operation .....	4.10D		
Front Fill Flow Meter .....	4.5D		
Hand Washing System .....	4.8D		
Inductor Operation .....	4.6D		
Instructions .....	4.1D		
Main Solution Switch .....	4.7D		
Rinse System Operation .....	4.9D		
Solution Pressure Gauge .....	4.4D		
Solution Pump .....	4.3D		
Solution Quick Fill .....	4.5D		
Solution Tank .....	4.3D		
Solution Tank Valve .....	4.3D		
<b>Overhead Controls and Monitors</b> .....	<b>4.8A-4.11A</b>		
Climate Controls .....	4.10A		
Field Lights and Work Lights .....	4.10A		
Hagie Diagnostic Port .....	4.8A		
MDM .....	4.9A		
Radio .....	4.11A		
Raven Spray Systems Console .....	4.11A		
Spray System Indicator Light .....	4.9A		
Vents .....	4.10A		
Warning Indicator Light .....	4.8A		
Windshield Wiper and Washer Fluid Switches .....	4.9A		
		<b>P</b>	
<b>Parking Brake</b> .....	<b>4.5A,4.3B</b>		
<b>Power Ports</b> .....	<b>4.7A</b>		
<b>Power Steering</b> .....	<b>4.2C</b>		
<b>Power Train</b>			
Specifications .....	3.1		
Brakes			
Drive			
Steering System			
<b>Pre-operational Checks</b> .....	<b>4.2B</b>		
<b>Pressure Gauges</b>			
Foamer System Air Pressure .....	4.10D		
Solution Spray System Pressure .....	4.4D		
		<b>Q</b>	
<b>Quick Attach System</b> .....	<b>4.1E-4.8E</b>		
Detaching .....	4.1E-4.5E		
Reconnecting .....	4.6E-4.8E		
<b>Quick Fill, Solution</b> .....	<b>4.6D</b>		
		<b>R</b>	
<b>Radiator Grille Screen</b> .....	<b>7.2C</b>		
<b>Raven Console</b> .....	<b>4.11A, 4.9D</b>		
Calibration .....	5.1A-5.8B		
<b>Rear Viewing Mirrors</b> .....	<b>4.13A</b>		
<b>Res-Q-Me Tool/Emergency Exit</b> .....	<b>4.13A</b>		
<b>Reverse Control</b> .....	<b>4.7A</b>		
<b>Rinse Switch</b> .....	<b>4.6A</b>		
<b>Rinse System</b> .....	<b>4.9D</b>		
Rinse Switch .....	4.6A		
Specifications .....	3.3		
		<b>S</b>	
<b>Safety Precautions</b> .....	<b>1.1-1.4</b>		
Chemical Handling Safety .....	1.4		
Driving Safety .....	1.1		
General Safety .....	1.4		
Operating Safety .....	1.2		
General Operation Safety			
Sprayer Booms			
Tread Width			
Repair/Maintenance Safety .....	1.3		
Fueling			
General Repair/ Maintenance			
Hydraulics			
<b>Seat</b>			
Air Ride Seat .....	4.14A		
Buddy Seat .....	4.14A		
<b>Serial Number Location</b>			
Engine .....	2.1		
Hydrostatic Pumps .....	2.2		
Sprayer .....	2.1		
Wheel hubs			
Front .....	2.2		
Rear .....	2.2		
Wheel motors			
Front .....	2.2		

# INDEX

	PAGE		PAGE
Rear.....	2.2	Specifications.....	3.2
<b>Service/Maintenance</b> .....	7.1A-7.1J	Booms	
Service Point Quick Reference .....	7.1A	General Spray System	
Intervals.....	7.2A-7.5A	Solution Fill Connection	
<b>Solution Line Strainer</b> .....	7.4C	Solution Tank	
<b>Solution Pressure Gauge</b> .....	4.4D	<b>Spray Tips</b> .....	7.1J
<b>Solution Pump</b> .....	4.2C, 4.3D	<b>Starting the Engine</b> .....	4.3B
<b>Solution Quick Fill</b> .....	4.5D	<b>Steering Column Release Pedal</b> .....	4.3A
<b>Solution Tank</b> .....	4.3D	<b>Storage</b> .....	8.1A-8.2A
<b>Solution Tank Valve</b> .....	4.3D	<b>Suspension</b> .....	7.1I
<b>Specifications</b> .....	3.1-3.6	Air Bag Pressure.....	7.1I
Auxiliary Hydraulic System.....	3.3	Lubrication .....	7.1D
Cab and Instruments.....	3.5		
Capacities .....	3.5	<b>T</b>	
Electrical System .....	3.3-3.4	<b>Table of Contents</b> .....	iii
Circuit Breaker and Fuses.....	3.3-3.4	<b>Tandem Pumps</b> .....	4.1B
General Electrical System.....	3.3	<b>Tank Switch</b> .....	4.6A
Lights.....	3.4	<b>Throttle Control</b> .....	4.5A
Other Fuses and Relays .....	3.4	<b>Tilt Adjust Handle</b> .....	4.3A
Engine .....	3.1	<b>Tires</b>	
Foam Marking System .....	3.3	Air Pressure .....	7.1I
Power Train .....	3.1	Filling .....	7.1I
Brakes .....	3.1	Mounting.....	7.1I
Drive.....	3.1	Specifications.....	3.6
Steering System .....	3.1	<b>Toe-In</b> .....	7.1H-7.2H
Rinse System.....	3.2	Adjusting.....	7.2H
Spray System .....	3.2	Checking.....	7.1H
Booms .....	3.2	<b>Torque Values</b>	
General Spray System.....	3.2	Tread Adjust Bearing .....	7.2G
Solution Fill Connection .....	3.2	Wheel Lug Nuts .....	7.1G
Solution Tank.....	3.2	<b>Transom Pivot Tubes</b> .....	7.1D
Sprayer Dimensions.....	3.1	Lubrication .....	7.1D
Tires .....	3.6	<b>Transporting Sprayer</b> .....	6.1A-6.1C
<b>Speed Control</b> .....	4.5A,4.4B	Cradling the Booms .....	6.1A
<b>Spray Booms</b> .....	4.5C	Driving .....	6.1B
Configuring 80' to 90' .....	4.10C	Trailing.....	6.1C-6.2C
Cradling .....	6.1A	<b>Tread Adjust Switch</b> .....	4.6A
Operation.....	4.6C-4.10C	<b>Tread Adjust Bearing Torque</b> .....	7.2G
<b>Spray System</b> .....	4.1D-4.11D	<b>Tread Width</b>	
Agitation.....	4.4D	Adjusting.....	4.4C
Boom L.E.D. Indicators .....	4.7D	Hydraulic.....	7.4C
Boom Solution Valve Switches.....	4.7D	Tread Adjust Switch .....	4.6A
Fence Row Applicator.....	4.8D	Indicators .....	4.4C
Flow Meter.....	4.4D	<b>Trouble Shooting Guide</b> .....	9.2A-9.2E
Foamer Operation.....	4.10D	Electrical .....	9.1E
Filling the Foam Marking System .....	4.11D	Engine .....	9.1A-9.2A
Front Fill Flow Meter (optional).....	4.5D	Hydraulic System .....	9.1D
Hand Washing System.....	4.8D	Hydrostatic System .....	9.1C-9.2C
Inductor Operation .....	4.6D	Notes .....	9.2E
Instructions of Operation .....	4.1C	Spray System .....	9.1B-9.2B
Introduction.....	4.1D	<b>Turn Signals</b> .....	4.2A
Main Solution Switch.....	4.7D		
Rinse System.....	4.9D	<b>U,V</b>	
Solution Pressure Gauge.....	4.4D	<b>Vertical Extension Fold</b> .....	4.9C
Solution Pump .....	4.3D		
Solution Quick Fill .....	4.5D	<b>W</b>	
Solution Tank.....	4.3D	<b>Warning Symbol Definitions</b> .....	ii
Solution Tank Valve .....	4.3D		

# INDEX

	PAGE	PAGE
<b>Warranty</b> .....	10.1	
<b>Wet Tank</b> .....	7.1I	
<b>Wheel Lug Nuts</b> .....	7.1G	
<b>Wheel Hubs</b> .....	4.1B	
Maintenance		
Oil .....	7.2B	
Torque Value .....	7.1G	
Specifications.....	3.1	
<b>Wheel Motors</b> .....	4.1B	
Specifications.....	3.1	
<b>Windshield Washer/Wiper</b> .....	4.9A	
Fluid.....	7.4B	

**X,Y,Z**

# NOTES

---